



FULL SWING SimSpace GSPRO Connection Instruction Manual

[Home](#) » [FULL SWING](#) » FULL SWING SimSpace GSPRO Connection Instruction Manual 

Contents

- [1 FULL SWING SimSpace GSPRO Connection](#)
- [2 Specifications](#)
- [3 KIT & GSPRO Wi-Fi Connection](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



FULL SWING SimSpace GSPRO Connection




Specifications

- **Dimensions:** Requires at least 3m width, 2.5m height, and 4.9m depth for indoor setups.
- **Compatibility:** Works with Windows 10/11 and integrates with software like GSPro, E6 Connect, and the Full Swing App.
- **Connectivity:** Offers USB-C and Wi-Fi options for connecting to laptops and other devices.
- **Performance:** Designed for professionals and enthusiasts, endorsed by top athletes like Tiger Woods.


KIT & GSPro Wi-Fi Connection

This document is designed to help with connecting your KIT and the GSPro Connection Application via Wi-Fi after installation. Please follow the steps below.

1. Power on the Laptop. Make sure it is connected to the local Wi-Fi network.
2. Power on the KIT. Pair the KIT to the same local Wi-Fi network as the laptop.
3. Once paired, the KIT will display a Wi-Fi signal in the top right of the OLED screen.
4. On the laptop, open the GSPro Launcher application.
5. The GSPro Configuration screen will then be displayed. Select the following:
 - Screen resolution – should default to your screen's current resolution.
 - Graphics quality – determined by your graphics card.
 - Select monitor – when running on a multi-monitor setup, this will present GSPro on the selected (right or left) monitor.
6. Click Play! to begin.
7. Next, the Connect Application will launch. Select Full Swing.

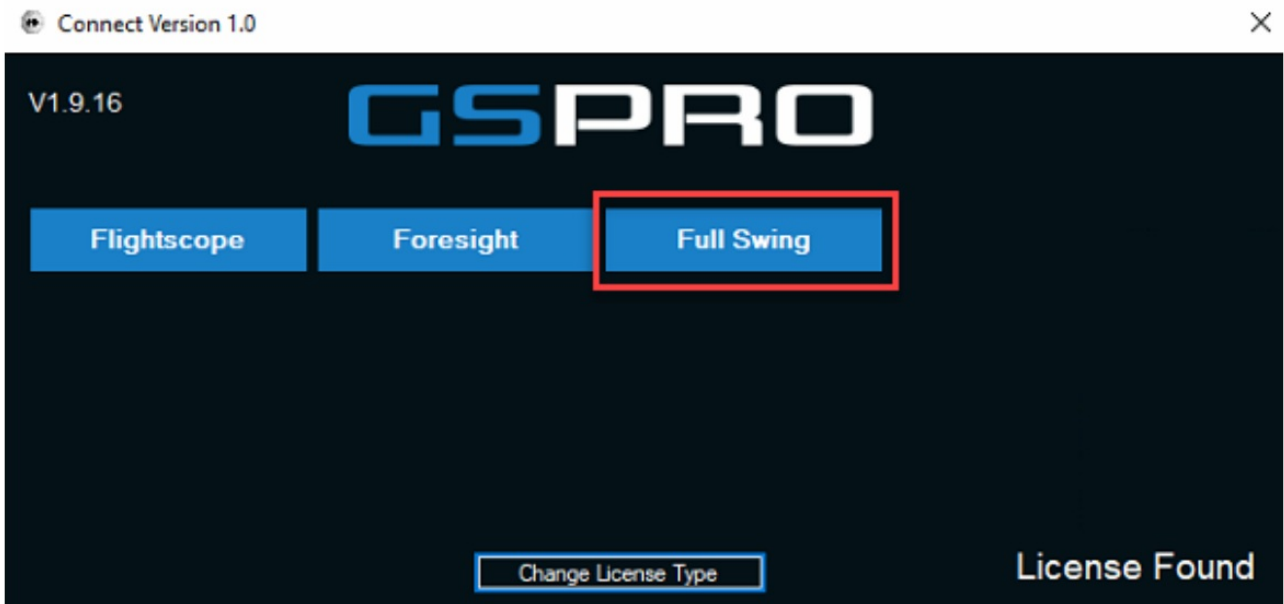

8. In the Connect Application, click on the Connection Manager tab across the top.
9. To locate your KIT, click the Search button. Click Search multiple times until the KIT ID appears. Then click Connect and check Auto Connect on Startup box.

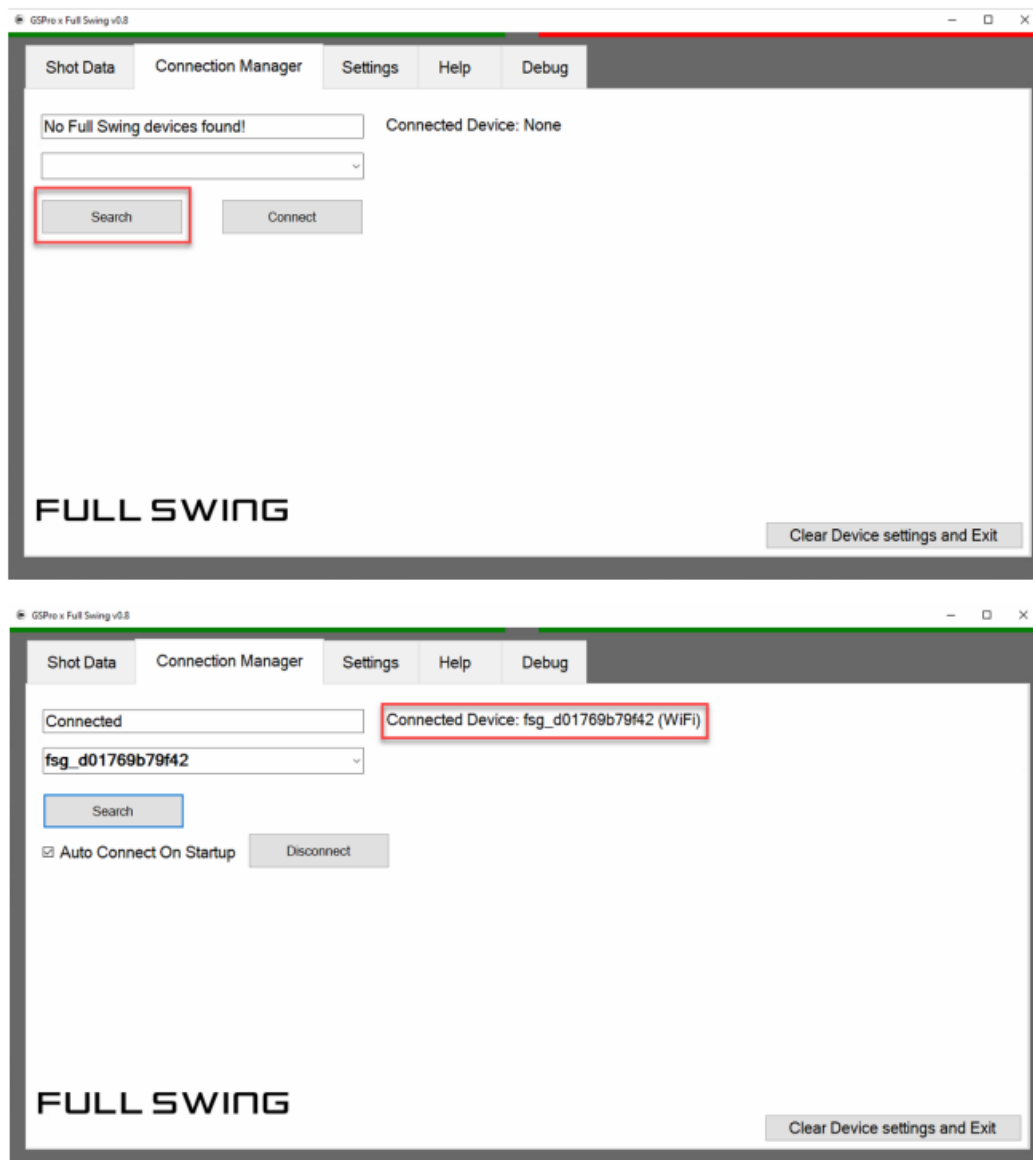

10. Watch the KIT at this time as it will light up Green 1x and the display screen will change to the Full Swing KIT Game Mode. Once connected there will be a Green Checkmark in the top right corner next to the Wi-Fi symbol.
11. DO NOT CLOSE the Connection Application. Just Minimize the screen so you can begin playing.

NOTE: If you close the Connection Application, you will drop your Wi-Fi connection to the KIT. The Connection Application must stay open during the duration of the game play!

12. Place the KIT 8 -10" from the hitting mat.

13. Begin Playing!

NOTE: Wi-Fi to the laptop is crucial for these two technologies to connect; ensure you have good signal when operating the Full Swing KIT Studio.

FAQs

1. What are the space requirements for indoor use?

- Minimum dimensions are 3m (width), 2.5m (height), and 4.9m (depth), with 8-10 feet of ball flight space for accuracy.

2. Is the software subscription included?

- Yes, a one-year GSPro subscription is included, providing access to courses and practice areas.

3. Can it be used outdoors?

- Yes, the Full Swing KIT is portable and can be used outdoors, requiring about 10 feet of space behind the ball for accurate readings.

Documents / Resources

| | |
|---|--|
|  | <p>FULL SWING SimSpace GSPro Connection [pdf] Instruction Manual SimSpace GSPro Connection, SimSpace, GSPro Connection</p> |
|---|--|

References

- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.