

Funko
GRUMPY True
Wireless Earbuds



Funko GRUMPY True Wireless Earbuds Instruction Manual

[Home](#) » [Funko](#) » Funko GRUMPY True Wireless Earbuds Instruction Manual 

Contents

- 1 Funko GRUMPY True Wireless Earbuds
- 2 Product Overview
- 3 Package Contents
- 4 Specifications
- 5 Pair the Wireless Earbuds with Your Mobile Device
- 6 Functions
- 7 Charging Your Earbuds
- 8 Recharge Charging Case
- 9 Safety instructions for the lithium battery and charging the product
- 10 FCC Statement
- 11 FAQ
- 12 Documents / Resources
 - 12.1 References




Funko GRUMPY True Wireless Earbuds



Thank you for purchasing the True Wireless Earbuds. This manual provides important instructions for using the earbuds. Please read the instructions before using.

Product Overview

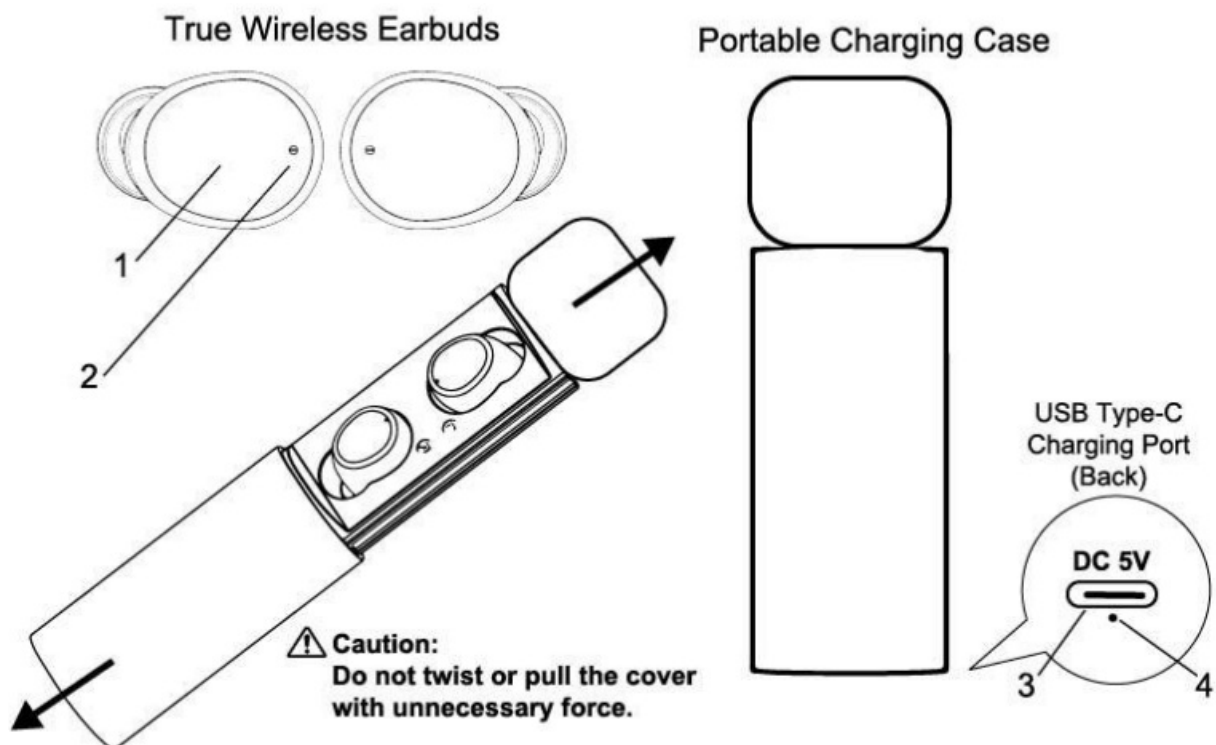

1. Touch Control Area On/Off, Play/Pause Music Answer/End Call
2. LED Indicator
3. USB Type-C Charging Port
4. Charging LED Indicator

Package Contents

- 1 Pair of Earbuds
- 1 Portable Charging Case
- 1 USB Type-C Charging Cable
- 1 Instruction Manual

Specifications

Driver Diameter	10 mm
Impedance	32Ω
Frequency Response	20 Hz – 20 kHz
Sensitivity	98±3dB
Bluetooth Version	5.3
Earbuds Battery	3.7V 30 mAh Per Earbud
Charging Time	1.5 hours
Playtime	3 hours
Charging Case Battery Capacity	300 mAh
USB Type-C Charging Cable	Included

Power On/Off

- **Power On:** Press and hold the touch control area of the earbuds for 3 seconds and the LED will flash blue and red.
- **Power Off:** Press and hold the touch control area of the earbuds for 5 seconds and the LED will turn off.

Pair the Wireless Earbuds with Your Mobile Device

1. Keep the distance between the earbuds and mobile device within 32.8 feet.
2. De-activate the Bluetooth function on your mobile device.
3. Put the earbuds back to charging case before use. Take both earbuds out from charging case and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking in Red/Blue quickly. Another earbud will stop blinking when auto pairing is done successfully.
4. Activate the Bluetooth function on your mobile device and select “FUNKO TWS” from the list shown.
5. After pairing is successful, both earbuds LED will be off.

Attention: If the auto-pairing is not successful, manual pairing between earbuds is essential by following below procedures:

1. Make sure the earbuds are charged.
2. Deactivate the Bluetooth function on your mobile device. (if you had been paired the earbuds to some other mobile device(s) nearby, please sure to de-activate those device(s) too).
3. Power on both earbuds simultaneously by touch and hold the Touch control area for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.)
4. Activate the Bluetooth function on your mobile device and select "FUNKO TWS" from the list shown.
5. After pairing successfully, both earbuds LED will be off.

Reconnect the Wireless Earbuds to Your Mobile Device

When powered on, the wireless earbuds will automatically connect with the last successfully paired device.

Disconnect the Wireless Earbuds from Your Mobile Device

- Power off the wireless earbuds or
- Turn off Bluetooth on your mobile device or
- Leave the device 60 feet away from your mobile phone or further.

Answer / Reject a Call

- When receiving a call, press the touch control area (on either earbud) to accept the call. Press and hold for two seconds to reject a call.
- To end a call, press the touch control area of any earbud with a "beep" sound to end it.

Functions

- **Pause/Play Music:** Press the touch control area.
- **Next Track:** Press the touch control area twice.
- **Previous Track:** Press the touch control area three times.
- **Volume Up/Down:** Press and hold the touch control area for 2 seconds.

Charging Your Earbuds

1. Open the charging case.
2. Place the earbuds into the charging case.
3. Close the charging case.
4. The earbuds LED will light up red when charging.
5. When fully charged, the LED will turn off.

Recharge Charging Case

For your safety, please always use the appropriate 5V input charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C charging cable provided with the packaging.
2. Connect the USB Type-C plug to the USB Type-C charging port on the charging case, then connect the USB plug to a wall adapter to begin charging.
3. The Red LED on the charging case will be flashing during charge.
4. Once fully charged, the Red LED will be stop flashing.
5. The Blue LED will be on while the earbuds is charging and will be off after fully charged.

NOTE:

- Fully close the Charging Case during charging, otherwise, it may not charge.
- You must select a qualified charger from a regular manufacturer.
- You must charge the charging case and earbuds if it has been not used for more than 6 months.



Safety instructions for the lithium battery and charging the product

- The input voltage to the product is 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt a certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/104°F.
- Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

USB Type-C Charging Cable rating 5V/1A Max.

CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

FCCID: 2ADM5-EP-0700

Keep all relevant information for future reference

ITEM# EP-0700-GRUMPY

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106

Product Information

- **Product:** EP-0700-GRUMPY
- **Size:** 222.75(W) x 105(H) mm

Made in China

FAQ

If the wireless earbuds cannot be paired with your device, please try the following:

Ensure that your earbuds are in pairing mode or reconnection mode*Ensure that the Bluetooth search function of your mobile device is activated.

If the wireless earbuds will not turn on:

Make sure the earbuds are fully charged.*Make sure the protective stickers are removed from the Earbuds

Can I change the battery for the earbuds and the charging case?

The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed.

If the charging case cannot be recharged:

If you use a power outlet, ensure that the power supply is connected securely and the outlet works.

Documents / Resources



[Funko GRUMPY True Wireless Earbuds](#) [pdf] Instruction Manual
GRUMPY, GRUMPY True Wireless Earbuds, True Wireless Earbuds, Wireless Earbuds, Earbud
S

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.