



[Home](#) » [Funlenry](#) » **Funlenry T041 Motion Sensor Ceiling Light User Manual** 

Contents [[hide](#)]

- [1 Funlenry T041 Motion Sensor Ceiling Light](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 References](#)



Funlenry T041 Motion Sensor Ceiling Light




INTRODUCTION

At about **\$19.95**, the Funlenry T041 Rechargeable Motion Sensor Ceiling Light is a stylish, wire-free lighting option ideal for pantries, restrooms, stairs, closets, and other areas without electricity. Its integrated 8000 mAh USB-rechargeable battery saves you money on replacing batteries by offering an amazing 45–90 days of operation in motion-sensor mode and up to 10 hours in continuous ON mode. It has a 9–16 foot motion activation range and shuts off automatically after 20 seconds of inactivity. You may also use the remote control to switch to Stay-ON mode. To fit your environment and task requirements, this light offers 400 lumens of brightness, 10 brightness settings, and three color temperatures (warm, neutral, and cold white). It is an effective and user-friendly update for the dark areas of your house, and it is quick to install and versatile.

SPECIFICATIONS

Model Number	T041
Price	Approx. \$19.95
Battery Capacity	8000mAh (USB rechargeable)

Runtime (Sensor Mode)	45–90 days
Runtime (Stay ON Mode)	Up to 10 hours
Motion Sensor Range	9–16 ft (2.7–4.8 m), Auto off after 20 seconds
Brightness	400 lumens, 10 levels dimmable
Color Temperatures	Warm (3000K), Neutral (4000K), Cool (6000K)
Lighting Control Modes	Auto (motion) and Stay ON via remote control
Included Components	Light, remote, USB cable, anchors, screws, manual
Dimensions (L×W×H)	7.5" ×7.5" ×1.5"; Weight: 1.1 lb
Warranty	3-year warranty
Installation Type	Ceiling or wall mount, magnetic or screw

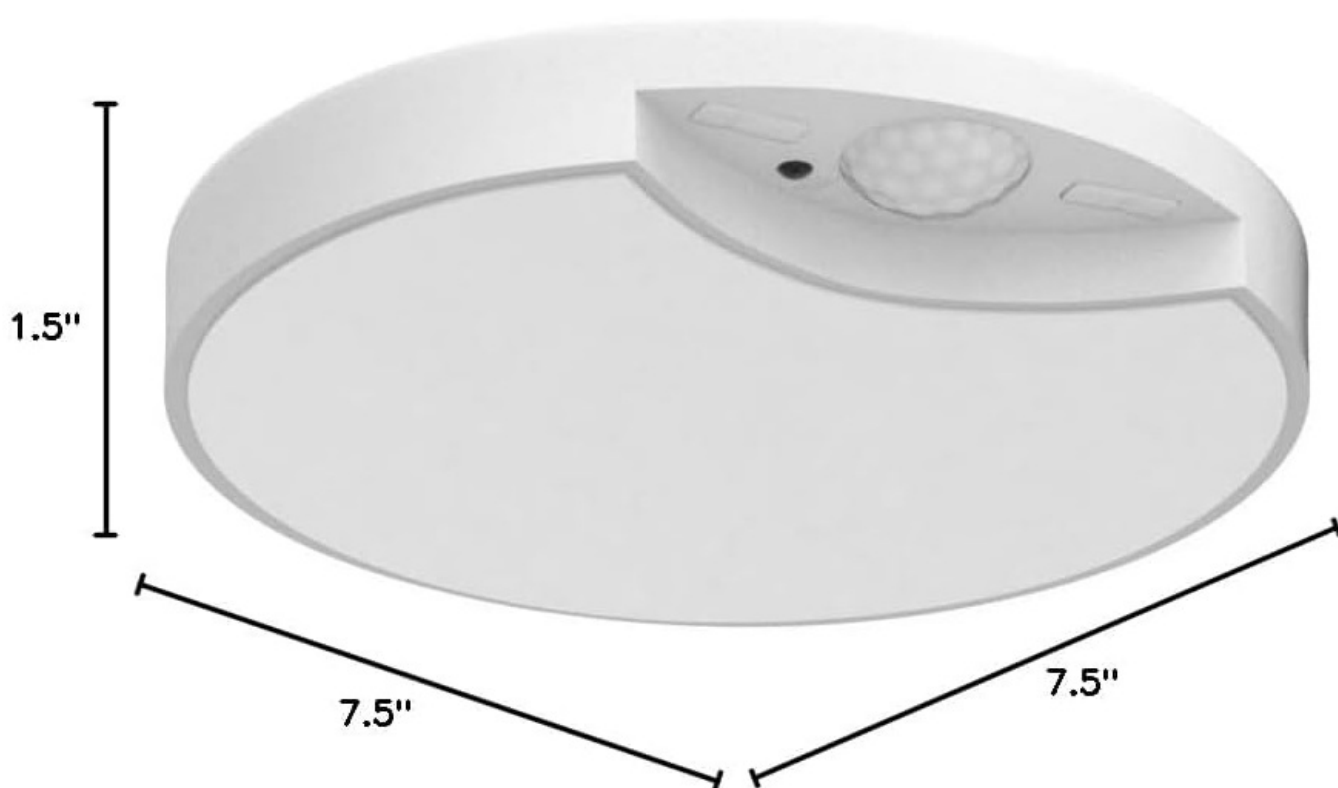

WHAT'S IN THE BOX

- 1 × Funlenry T041 Ceiling Light
- 1 × Remote Control

- 1 × USB Charging Cable
- 4 × Anchors + Screws
- 1 × Instruction Manual


FEATURES

- **Powerful 8000mAh Battery:** Delivers extended operation on a single charge perfect for long-term use without frequent recharging.



- **Dual Operation Modes:** Easily switch between motion-activated lighting or a continuous manual ON setting, depending on your needs.

Two Working Modes

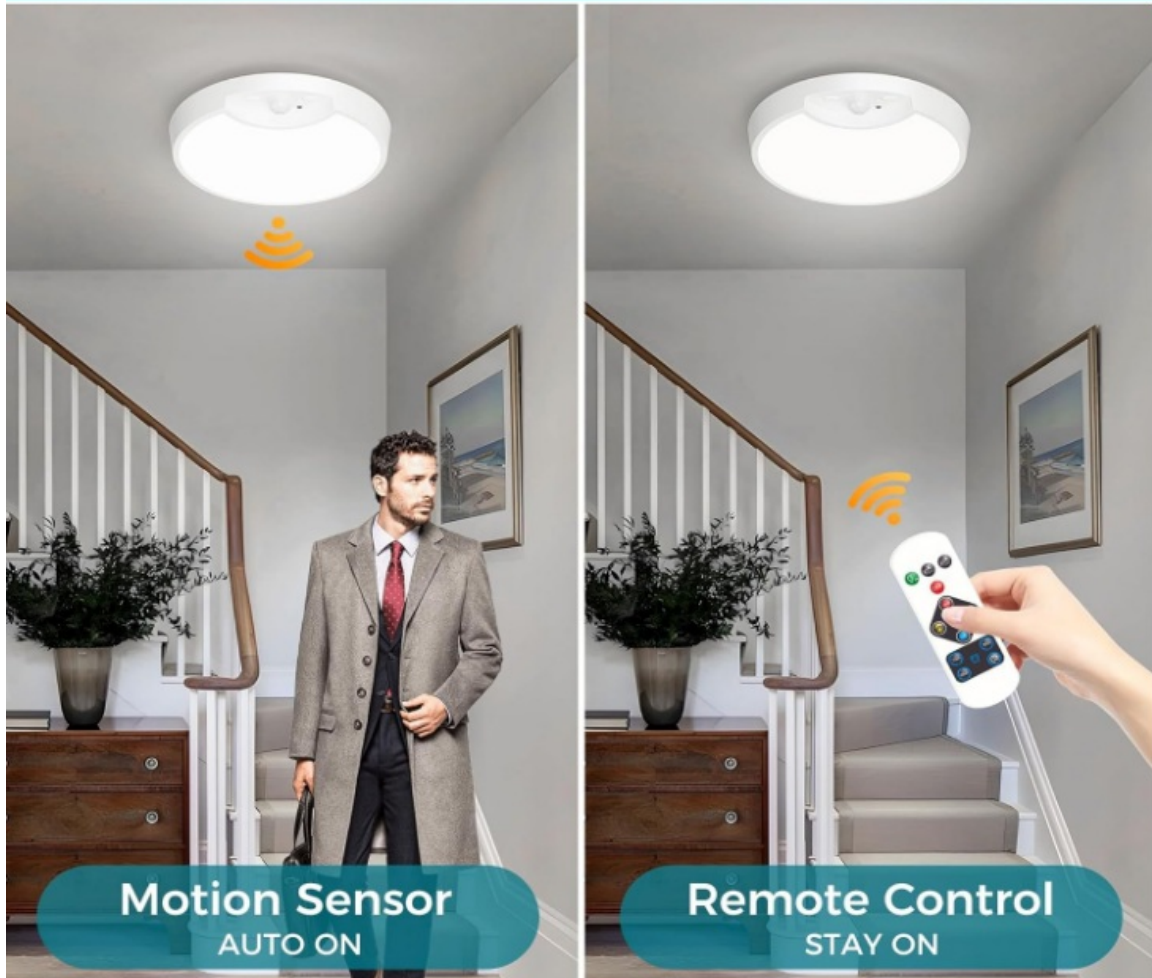


- **Impressive Sensor Mode Runtime:** With energy-efficient motion detection, the light can last up to 90 days without needing a recharge.

Motion Sensor AUTO ON



- **Flexible Timer Settings:** Use the remote to leave the light on for as long as needed, and turn it off manually when you're done.
- **Bright 400-Lumen Output:** Capable of lighting spaces up to 300 ft²—ideal for hallways, closets, bathrooms, or garages.
- **10-Step Brightness Control:** Fine-tune the brightness level to match any activity or environment, from subtle mood lighting to full visibility.
- **Three Light Tones Available:** Choose between warm, neutral, or cool white lighting to set the right tone for any room or task.
- **Hands-Free & Remote Control:** Activate the light with motion as you walk in, or manage settings from a distance with the remote.

Remote Control STAY ON

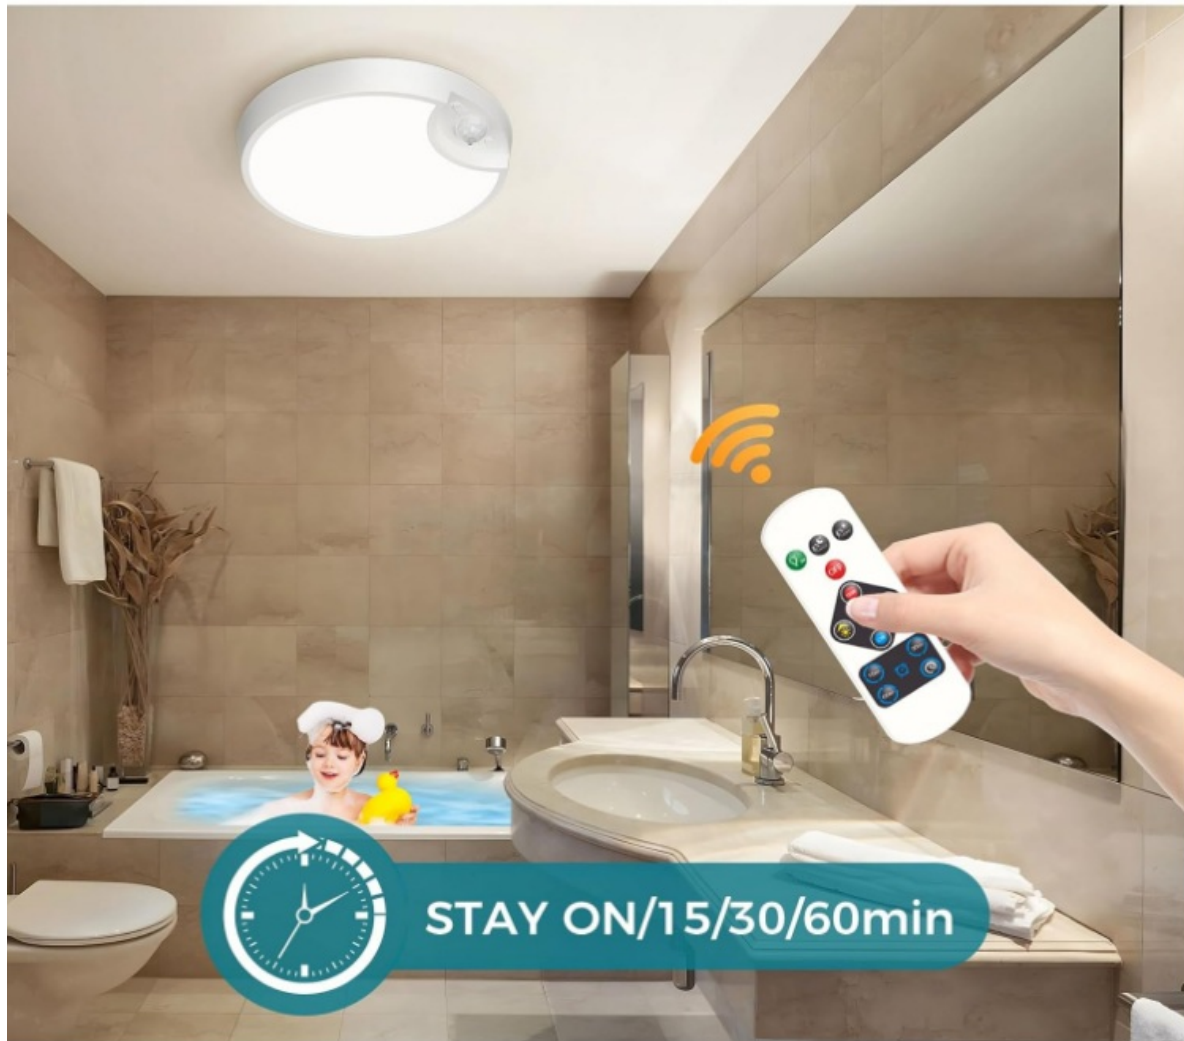

- **Fast USB Charging:** Recharge quickly and conveniently with the included USB cable—no complicated setups or battery swaps.
- **Easy Installation Options:** Mount with built-in magnets or use screws for a permanent hold—great for renters and homeowners alike.
- **Space-Saving Compact Design:** The slim, minimalist shape blends seamlessly into various environments without taking up space.
- **Water-Resistant Mounting Base:** Designed to handle humidity, making it a reliable lighting solution for bathrooms or damp corners.
- **Energy-Saving Performance:** Built with LED technology that provides bright light while consuming minimal power.
- **Reliable 3-Year Warranty:** Enjoy peace of mind with long-term manufacturer support and product protection.
- **Versatile Use Cases:** A perfect fit for closets, pantries, hallways, garages, bathrooms, or any space in need of smart lighting.

3 Color Temperatures



SETUP GUIDE

- **Step 1: Unpack and Confirm Components:** Open the box and ensure all pieces, including the light unit, mount, USB cable, and remote, are included and undamaged.
- **Step 2: Fully Charge Before First Use:** Plug in the USB cable and allow the unit to charge completely to ensure optimal battery life from the start.
- **Step 3: Clean the Mounting Area:** Wipe the surface where the light will be installed so the adhesive or magnetic hold is secure.
- **Step 4: Choose Your Installation Style:** Use the magnetic base for quick setup or screws for a more permanent mount, depending on your wall or ceiling type.
- **Step 5: Secure the Light:** Align the light onto the mounting base until it locks in place or attaches firmly.
- **Step 6: Activate with Remote or Motion:** Use the remote to power it on

or simply walk into the room to test motion detection.

- **Step 7: Adjust the Brightness:** Use the 10-level dimming control to find your ideal brightness setting.
- **Step 8: Select Your Color Temperature:** Switch between warm, neutral, and cool light tones to match your room's feel or function.
- **Step 9: Choose the Operation Mode:** Use Auto mode for motion-activated lighting or Stay ON mode for constant illumination.
- **Step 10: Auto-Off in Motion Mode:** When in motion mode, the light automatically turns off about 20 seconds after no movement is detected.
- **Step 11: Keep an Eye on Battery Life:** If performance begins to dip, it may be time to recharge—monitor usage for best results.
- **Step 12: Detach Easily to Recharge:** Remove the light from its base quickly for recharging without uninstalling the entire setup.
- **Step 13: Maintain Cleanliness and Stability:** Periodically wipe the light and ensure it remains securely mounted for ongoing reliability.
- **Step 14: Store or Recharge as Needed:** If not in regular use, keep it charged and stored in an accessible spot for next time.
- **Step 15: Keep Instructions Handy:** Hold on to the manual for quick reference when changing settings or troubleshooting.

CARE & MAINTENANCE

- **Clean the Lens Carefully:** Use a soft, dry cloth to wipe the light cover and sensor area—this helps maintain optimal brightness and detection accuracy.
- **Dust Frequently:** Keep the surface of the unit clean to avoid buildup that could block sensors or affect performance.
- **Recharge Before Battery Drains Fully:** For best battery health, recharge when you notice a drop in brightness—not after it's completely dead.
- **Keep it Dry:** Although the mount is water-resistant, avoid spraying or soaking the light directly with water.
- **Re-secure When Needed:** Over time, check the mounting strength and retighten screws or clean the magnetic base if needed.
- **Maintain Magnetic Grip:** A quick wipe of the magnet and mounting surface helps keep the light firmly in place.

- **Handle Buttons and Remote Gently:** Clean control surfaces with soft wipes and avoid harsh chemicals that may wear down the buttons.
- **Avoid Extreme Conditions:** Store and use the light in normal room temperatures—extreme heat or cold may affect battery and LED life.
- **Test Brightness Regularly:** Check that brightness levels and modes are working as expected, especially after long storage.
- **Replace Remote Batteries When Needed:** If the remote becomes unresponsive, replace its battery for restored performance.
- **Prevent Drops and Impacts:** The LEDs and sensors are delicate—handle with care to avoid damaging internal components.
- **Contact Manufacturer for Support:** If anything goes wrong within the warranty period, reach out for prompt assistance or replacement.
- **Keep Charging Area Clean:** Make sure the USB port and cable remain dust-free and dry to prevent charging issues.
- **Match Usage to Expectations:** Use modes that align with your daily routine to get the most out of battery life and performance.

TROUBLESHOOTING

Issue	Solution
No power even after charging	Confirm USB connection is secure and battery fully charged.
Motion sensor not working	Clean the sensor; ensure not blocked and in Auto mode.
Stay ON mode not responding	Use remote to select Stay ON; ensure correct mode selected.
Light flickers or dims	Recharge battery; check for loose mounting contacts.
Remote unresponsive	Replace battery; ensure unobstructed line of sight.
Dimming not adjusting	Cycle power or restart unit; test via remote.

Issue	Solution
Color temperature stuck	Cycle modes via remote to reset; retry.
Poor adhesion	Clean surface or switch to screw mounting if needed.
Battery drains quickly	Use motion mode and lower brightness settings.
Weaker sensor after time	Clean lens; remount for optimal coverage.

PROS & CONS

Pros:

- Excellent battery life for motion mode.
- Flexible lighting control via remote or motion sensor.
- Adjustable brightness and color for tailored lighting.
- Easy installation with both magnetic and screw options.
- Backed by a 3-year manufacturer warranty.

Cons:

- Battery needs regular recharge in static ON mode.
- Not waterproof—limit to indoor use.
- Mounting adhesive may weaken over time.
- Remote battery likely needs replacement eventually.
- Slightly bulkier than some slim-profile alternatives.

WARRANTY

Enjoy peace of mind with a **3-year warranty**, offering coverage for manufacturing defects and ensuring lasting support for your Funlenry T041 lighting solution

FREQUENTLY ASKED QUESTIONS

What are the color temperature options available in the Funlenry T041

Motion Sensor Ceiling Light?

The Funlenry T041 offers 3 color temperatures: cool white, neutral white, and warm white. You can easily switch between them using the remote control.

Can I dim the brightness of the Funlenry T041 ceiling light?

The Funlenry T041 features 10 levels of dimmable brightness, allowing you to adjust lighting intensity to your needs.

What is the detection range of the motion sensor in the Funlenry T041 light?

The motion sensor detects movement within a range of 9 to 16 feet, turning on automatically and turning off 20 seconds after no motion is detected.

How long does the battery last on a full charge in the Funlenry T041?

The built-in 8000mAh battery can last up to 45-90 days in motion sensor mode and around 10 hours in Stay ON mode, depending on usage and brightness.

How long does it take to fully charge the Funlenry T041 light?

A full charge typically takes around 4-6 hours using the provided USB cable.

Where can I install the Funlenry T041 Motion Sensor Ceiling Light?

Its ideal for areas without electrical wiring such as closets, stairs, showers, sheds, hallways, garages, pantries, or porches.

How is the Funlenry T041 light installed?

The light is easy to install with a simple 3-step process and does not require wiring or an electrician. Mounting materials are included.

References

- [User Manual](#)

>

📄 B0BKGV5T3P, Funlenry, Funlenry T041, Motion Sensor Ceiling Light, T041, user

📁 Funlenry manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.