



# Funpower FT1205A Remote Control Transmitter User Manual

[Home](#) » [Funpower](#) » Funpower FT1205A Remote Control Transmitter User Manual 

## Contents

- [1 Funpower FT1205A Remote Control Transmitter](#)
- [2 Product Information](#)
- [3 Operation Instructions](#)
- [4 Use precautions](#)
- [5 FCC Instructions](#)
- [6 Documents / Resources](#)

***FUNPOWER***

**Funpower FT1205A Remote Control Transmitter**



## Product Information

## Operation Instructions

The FT1205A Remote Control Transmitter is designed to control compatible devices wirelessly.

## Use Precautions

1. If the LED indicator does not turn on when pressing a key on the transmitter, please check the battery installation.
2. If the LED indicator flashes when pressing a key on the transmitter, it indicates low battery voltage. Please replace the battery with a new one.
3. If the transmitter will not be used for an extended period, please remove the battery.


## FCC Instructions

- **FCC ID:** 2ABUP-FT1205A

## IC Caution

- **IC** 25540-FT1205A

## Operation Instructions

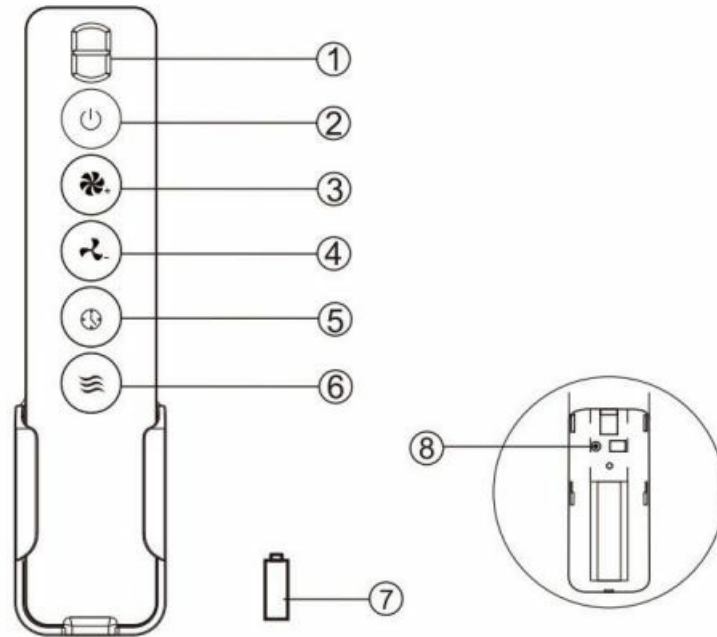

1. **LED** Indicator
2. **Fan** ON/OFF (Pairing Button)
3. **Fan** Speed Up
4. **Fan** Speed Down
5. **Timer** Control
6. **Natural** Wind
7. **BATTERY:** 12V/23Ax 1
8. **Fan** Forward/Reverse

## Use precautions

1. When press the key of transmitter, the LED indicator doesn't on, please inspect the battery installation.
2. When press the key of transmitter, the LED indicator flashing, that means the battery get low voltage, please replace a new one.
3. Please pull out of the battery from the transmitter when leaving unused for a long time.

## FCC Instructions

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device must not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause Undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**FCC ID:** 2ABUP-FT1205A

**IC Caution:**

- RSS-Gen Issue 5 "&" RSS-Gen numéro 5

#### English:

- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
  1. This device may not cause interference.
  2. This device must accept any interference, including interference that may cause undesired operation of the device.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### RF exposure statement:

- The equipment complies with IC Radiation exposure limit set forth for uncontrolled environment.

#### Documents / Resources

 <p>USER MANUAL FOR FT1205A REMOTE CONTROL TRANSMITTER 1. Operation Instructions</p> <p>① LED Indicator ② Pwr ON/OFF (Power) Button ③ Pwr Standby ④ Pwr Standby/Reset ⑤ Pwr Standby/Reset ⑥ Pwr Standby/Reset ⑦ Pwr Standby/Reset ⑧ Pwr Standby/Reset ⑨ Pwr Standby/Reset ⑩ Pwr Standby/Reset</p>	<p><a href="#">Funpower FT1205A Remote Control Transmitter</a> [pdf] User Manual 2ABUP-FT1205A, 2ABUPFT1205A, ft1205a, FT1205A Remote Control Transmitter, FT1205A, Remote Control Transmitter, Transmitter</p>
--	---