



Funrise F71156B Surfs Up RC SpongeBob User Manual

[Home](#) » [Funrise](#) » Funrise F71156B Surfs Up RC SpongeBob User Manual 

Contents

- [1 Funrise F71156B Surfs Up RC SpongeBob](#)
- [2 Product Specifications](#)
- [3 FAQ](#)
- [4 CONTENTS](#)
- [5 POWER](#)
- [6 REMOTE FUNCTIONS](#)
- [7 FCC STATEMENT](#)
- [8 CONTACT](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Funrise F71156B Surfs Up RC SpongeBob



Product Specifications

- **Model:** 71156 Surf's Up
- **Size:** 11.75 x 8.25 inches
- **Batteries:** 2x AAA (not included)
- **LED Indicator Pairing:** Fast blinking green
- **Charging Indicator:** Red (charging), Green (fully charged)
- **USB Input:** 5V

FAQ

Frequently Asked Questions

- **Q:** What do I do if the LED indicator shows a slow blinking green light?
 - **A:** A slow blinking green light indicates low battery. Replace the batteries with new ones to continue using the product.
- **Q:** How do I know when the skateboard is fully charged?
 - **A:** The LED indicator will show a solid green light when the skateboard is fully charged.
- **Q:** What should I do if the USB cable is damaged?
 - **A:** If the USB cable is damaged, it should not be used until repaired to avoid any risks. Regularly inspect the cable for any signs of damage.

CONTENTS



- 1 STYLE INCLUDED

POWER

 
1. **BATTERIES:** 2X AAA (NOT INCLUDED)



2. **LED INDICATOR**


- **PAIRING:** FAST BLINKING GREEN
- **POWER ON:** GREEN
- **CHARGING:** RED
- **FULLY CHARGED:** GREEN
- **LOW BATTERY:** SLOW BLINKING GREEN

3. TURN ON REMOTE AND SKATEBOARD

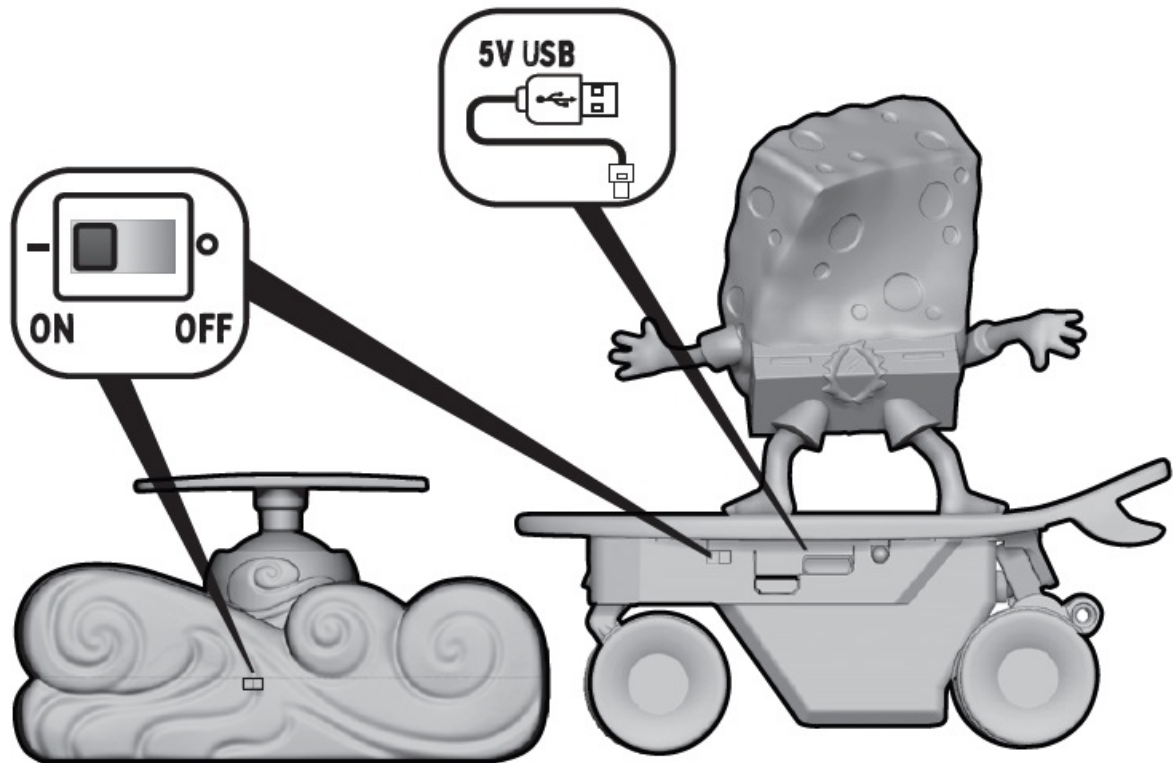


REMOTE FUNCTIONS

 MOVE BOARD SIDE TO SIDE TO TURN

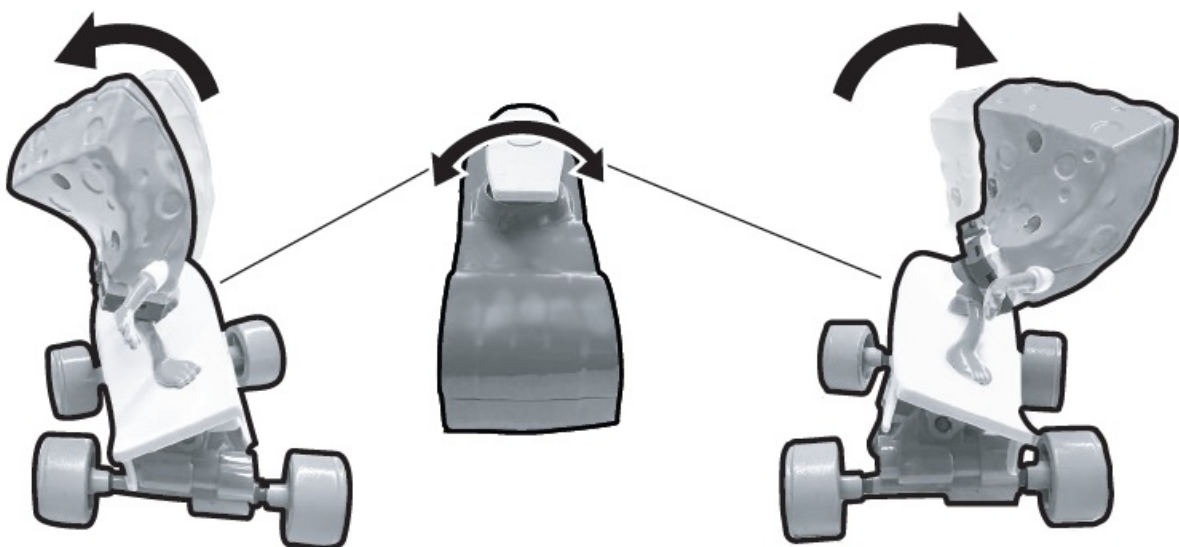

PUSH BOARD FORWARD/BACKWARD TO DRIVE

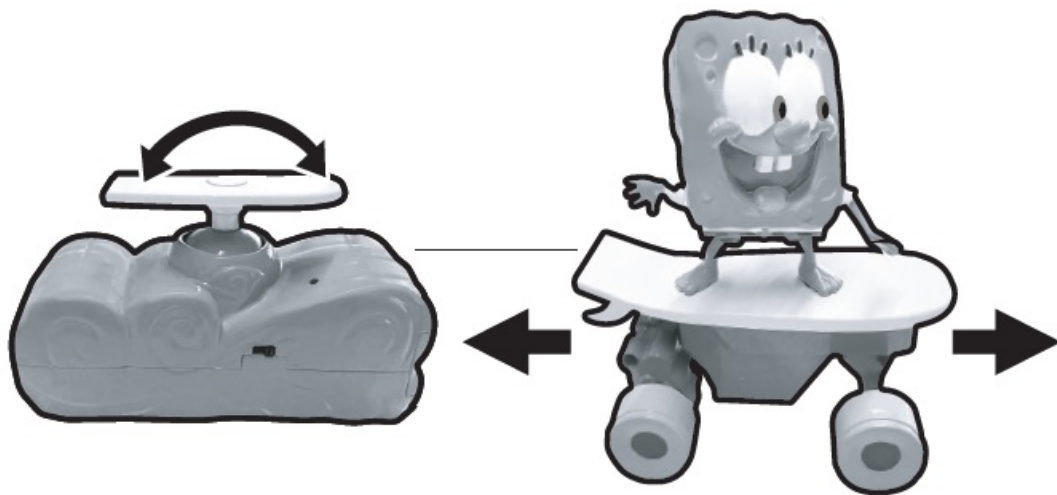 

ALL INSTRUCTION SHEETS MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.
WE RESERVE THE RIGHT TO IMPROVE/AMEND SPECIFICATIONS AND COLORS WITHOUT NOTICE.

FCC STATEMENT

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The USB cable used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

CAUTION: Risk of Fire and Burns. Do Not Open, Crush, Heat Above 80°C or Incinerate. Follow Manufacturer's Instructions.

FCC ID: 2AWSR-F71156A /

FCC ID: 2AWSR-F71156B

model: 71156

CONTACT

Distributed by Funrise, Inc.

- Sherman Oaks, CA 91403, U.S.A.
- 1-[800-882-3808](tel:800-882-3808)
- [NICK.COM/SPONGEBOB](https://nick.com/spongebob)
- www.funrise.com



 
SCAN



© 2024 Viacom International Inc. All Rights Reserved.

Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc. Created by Stephen Hillenburg.

Documents / Resources

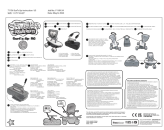	Funrise F71156B Surfs Up RC SpongeBob [pdf] User Manual F71156A, F71156B Surfs Up RC SpongeBob, F71156B, Surfs Up RC SpongeBob, Up RC Spon geBob, RC SpongeBob, SpongeBob
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.