



FUSION F-LXP Cordless Stapler User Guide

[Home](#) » [FUSION](#) » FUSION F-LXP Cordless Stapler User Guide 

Contents

 
- 1 FUSION F-LXP Cordless Stapler
- 2 GENERAL ASSEMBLY
- 3 Left Body Half
- 4 Right Body Group
- 5 Feed System
- 6 Mechanical Group
 - 6.1 Pressure Vessel Assembly
 - 6.2 PISTON-DRIVER ASSEMBLY
 - 6.3 FRONT PLATE ASSEMBLY
 - 6.4 Cap ASSEMBLY
- 7 Electronics Group
- 8 Trigger Assembly
- 9 Safety Cover Assembly
- 10 Bracket Group
- 11 Belt Hook Assembly
- 12 Battery
- 13 Battery Charger
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

FUSIONTM
TECHNOLOGY



DANGER: The Fusion tool is charged with compressed air in a sealed chamber. Prior to any service or repair, release the charge of pressurized air. The pressurized air must be released prior to service. Major components such as the piston/driver assembly, gearbox, piston stop and guide body are all part of the drive assembly. Deliberate tampering with the drive assembly may result in the release of the driver. Any repair or upgrade requiring access to the pressure chamber may be handled by an authorized Senco dealer or service center.


GENERAL ASSEMBLY

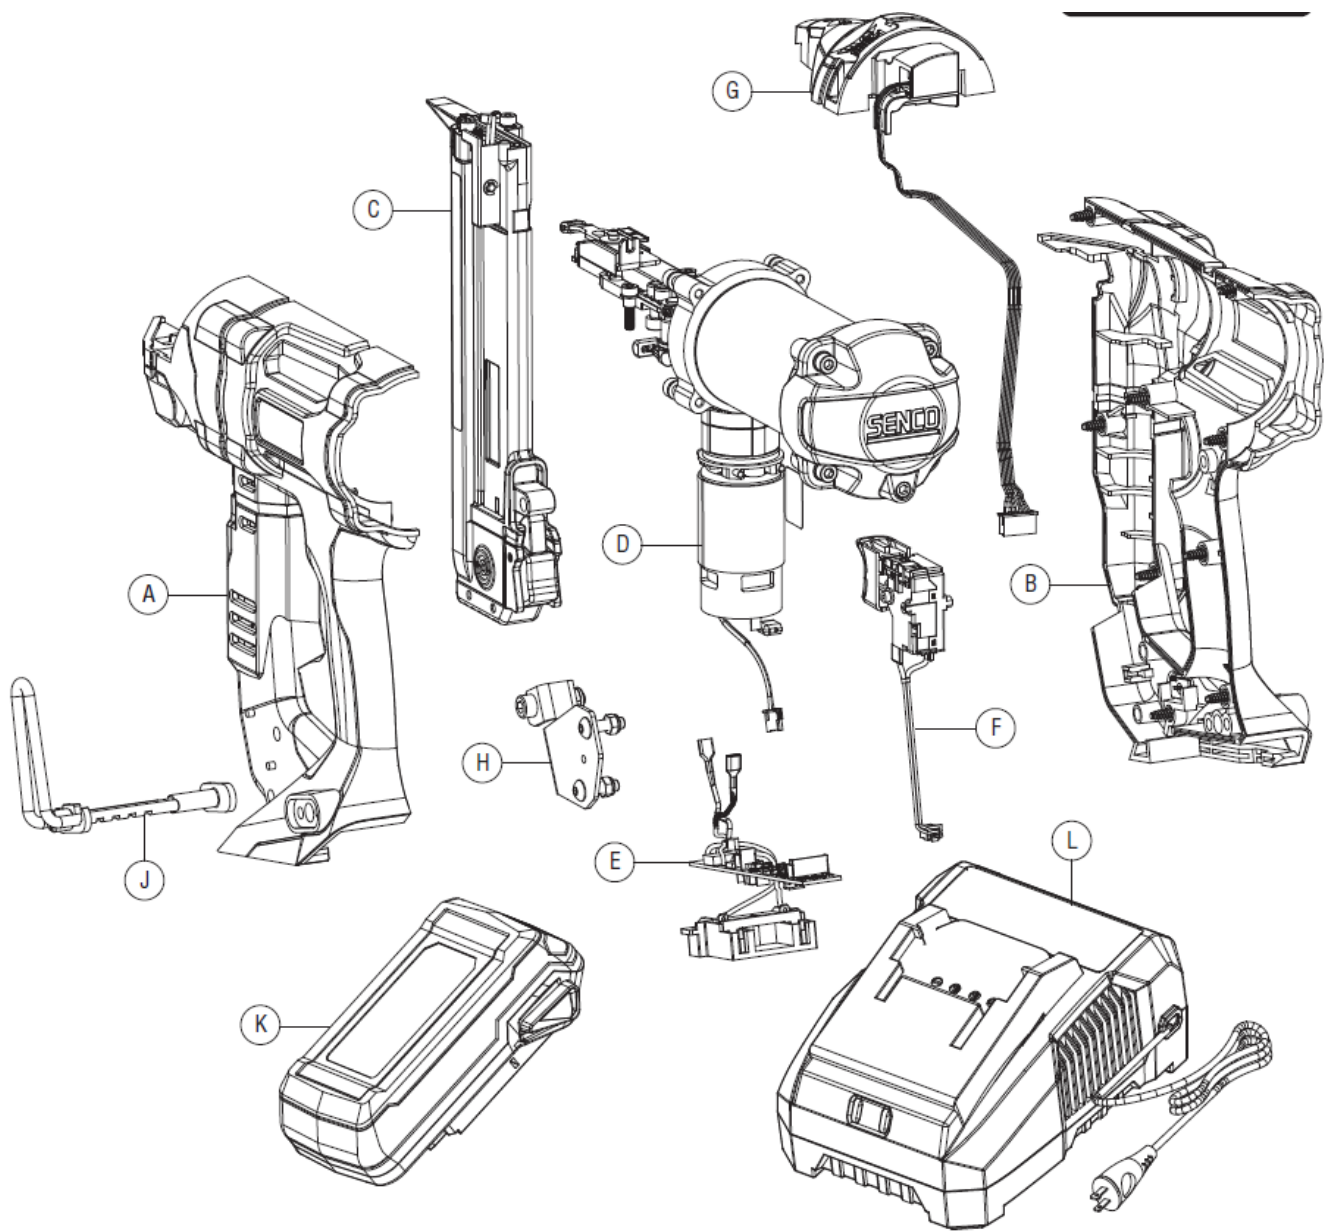

GRO UP	DEsCRPTION	GRU PO	DEsCRIPCIÓN	GROU PE	DEsCRPTION
A	Left Body Assembly	A	Ensamblaje izquierdo del cuerpo	A	Ensemble de la partie gauche du boîtier
B	Right Body Group	B	Grupo derecho del cuerpo	B	Groupe de la partie droite du boîtier
C	Feed System	C	Sistema de alimentación	C	Système d'alimentation
D	Mechanical Group	D	Grupo mecánico	D	Groupe mécanique
E	Electronics Group	E	Grupo de electrónica	E	Groupe électronique
F	Trigger Assembly	F	Ensamblaje del gatillo	F	Ensemble de la détente
G	Safety Cover Assembly	G	Ensamblaje de la cubierta de seguridad	G	Ensemble du couvercle de sécurité
H	Bracket Group	H	Grupo del soporte	H	Groupe du support
J	Belt Hook Assembly	J	Ensamblaje del gancho para el cinturón	J	Ensemble du crochet pour ceinture
K	Battery	K	Batería	K	Batterie
L	Battery Charger	L	Cargador de la batería	L	Chargeur de batteries


Left Body Half

 AA0289

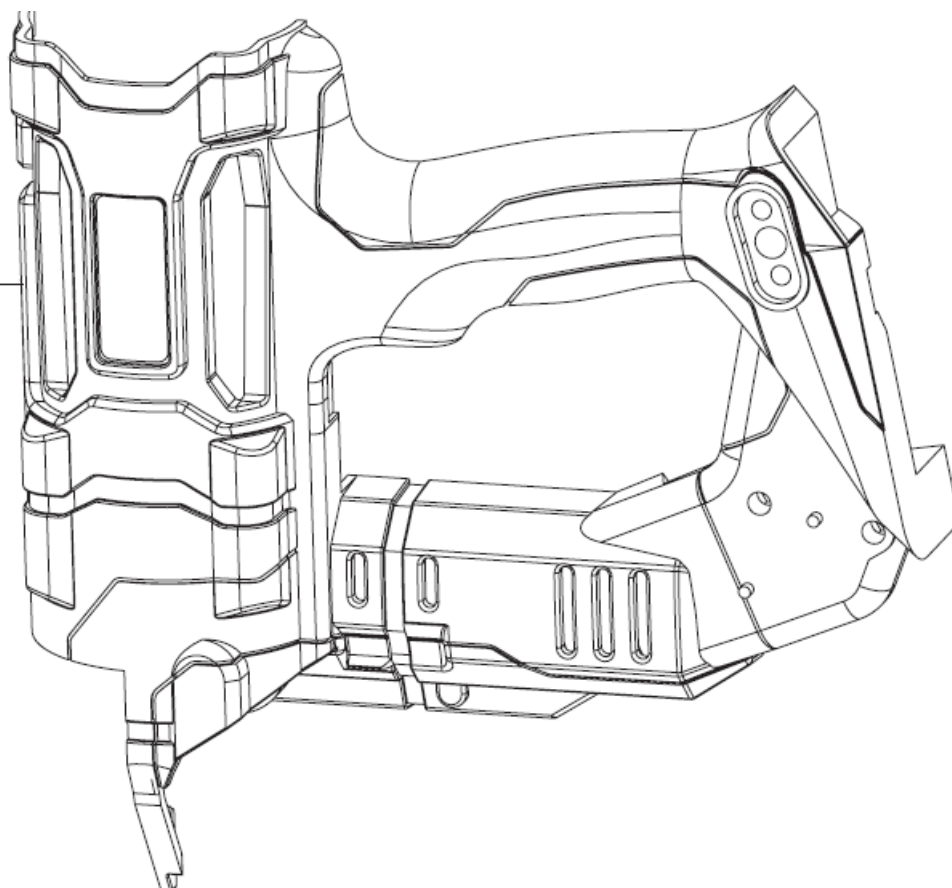


PART NO.	DEsCRPTION	PARTE NO.	DEsCRIPCÓN	NO DE PI ÈCE	DEsCRPTION
AA0289	Left Body Assembly	AA0289	Ensamblaje izquierdo del cuerpo	AA0289	Ensemble de la partie gauche du boîtier

 Right Body Group

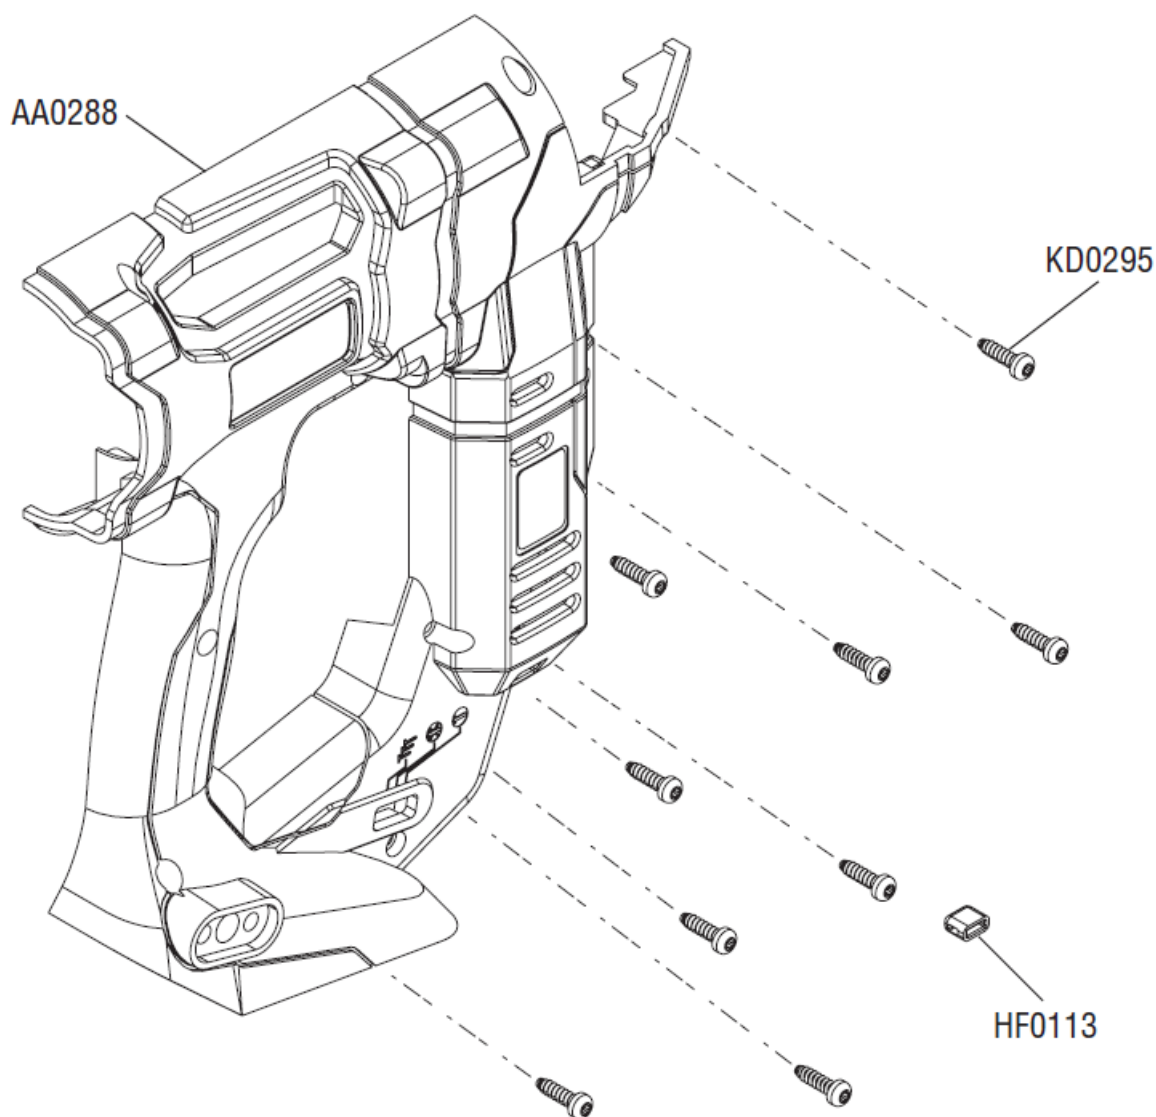

PART NO.	DEsCRPTION	PARTE NO.	DEsCRIPCÓN	NO DE P IÈCE	DEsCRPTION
AA0288	Right Body Assembly	AA0288	Ensamblaje derecho del cuerpo	AA0288	Ensemble de la partie droite du boîtier
HF0113	No-Mar Tip	HF0113	Punta protectora	HF0113	Embouts No-Mar
KD0295	Screw	KD0295	Tornillo	KD0295	Vis

 Feed System

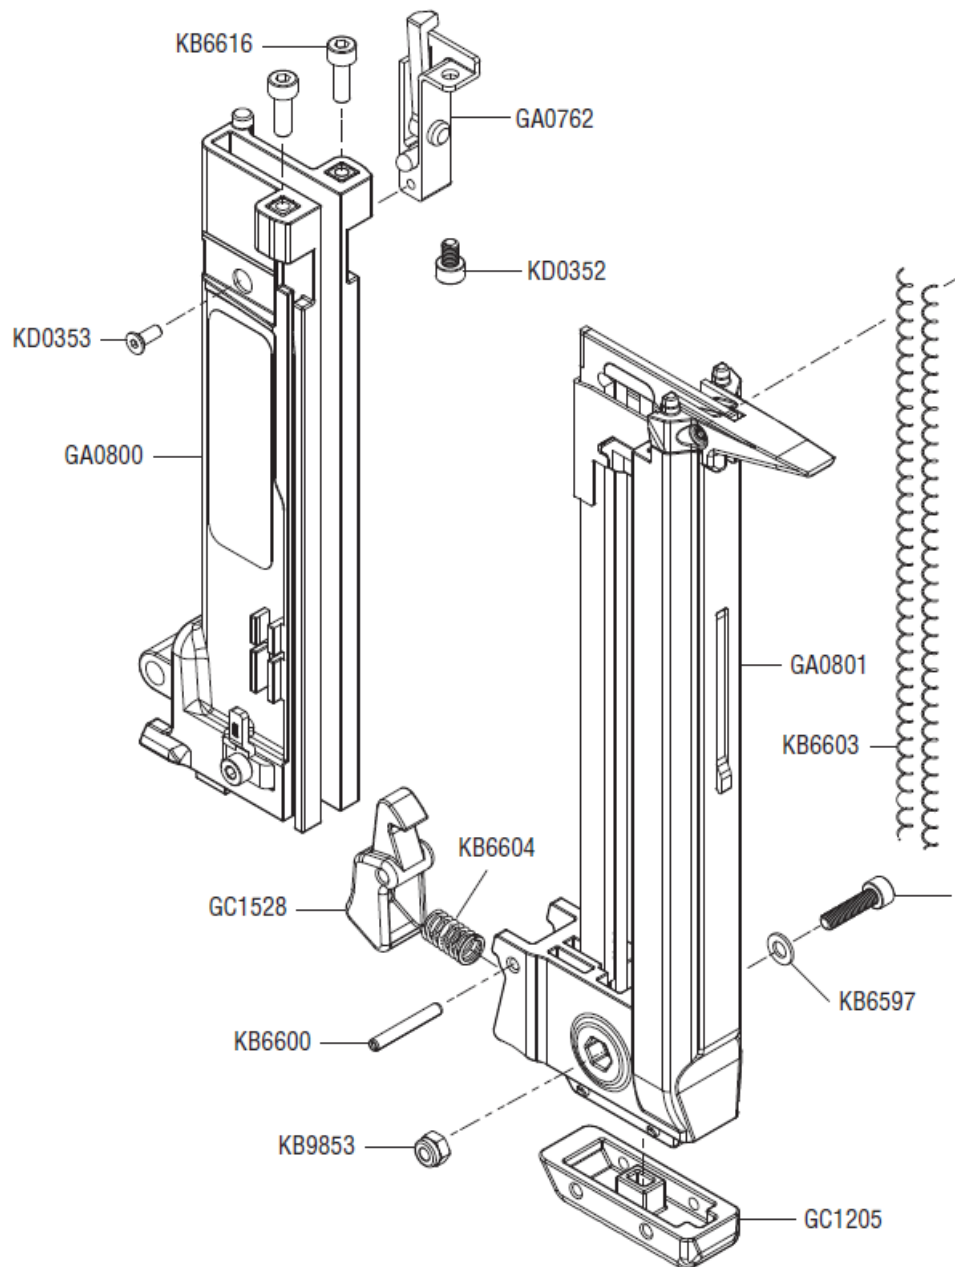

PART N O.	DEsCRPTION	PARTE N O.	DEsCRIPCIÓN	NO DE PI ÈCE	DEsCRPTION
GA0762	Lockout Assembly	GA0762	Ensamblaje de bloqueo	GA0762	Ensemble de verrouillage
GA0800	Fixed Rail Assembly	GA0800	Ensamblaje del riel fijo	GA0800	Ensemble du rail fixe
GA0801	Moveable Rail Assembly	GA0801	Ensamblaje del riel movable	GA0801	Ensemble du rail mobile
GC1205	Endcap	GC1205	Tapa final	GC1205	Embout
GC1528	Latch	GC1528	Pestillo	GC1528	Loquet
KB3588	Screw	KB3588	Tornillo	KB3588	Vis
KB6597	Washer	KB6597	Arandela	KB6597	Rondelle
KB6600	Pin	KB6600	Pasador	KB6600	Goupille
KB6603	Spring	KB6603	Resorte	KB6603	Ressort
KB6604	Spring	KB6604	Resorte	KB6604	Ressort
KB6616	Screw	KB6616	Tornillo	KB6616	Vis
KB9853	Nut	KB9853	Tuerca	KB9853	Écrou
KD0352	Screw	KD0352	Tornillo	KD0352	Vis
KD0353	Screw	KD0353	Tornillo	KD0353	Vis


Mechanical Group

GROUP D

PART NO.	DESCRIPTION
VA0126	Solenoid Assembly


PARTE NO.	DESCRIPCIÓN
VA0126	Ensamblaje del solenoide

Nº DE PIÈCE	DESCRIPTION
VA0126	Ensemble du solénoïde

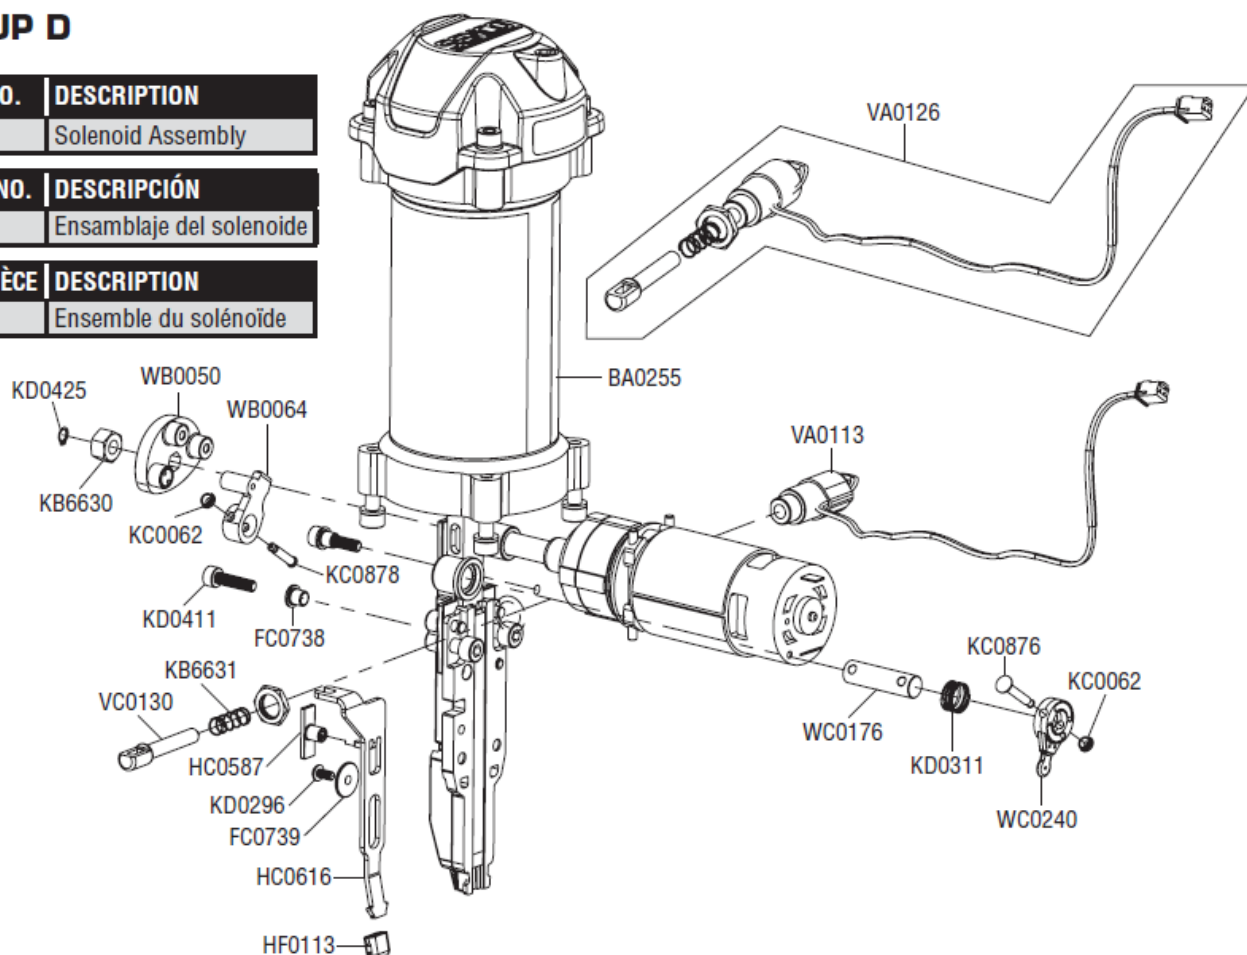 

PART NO.	DEsCRPTION
BA0255	Pressure Vessel Assembly
FC0738	Standoff
FC0739	Standoff
HC0587	Indicator
HC0616	Safety Element
HF0113	No Mar Pad
KB6630	Nut
KB6631	Spring
KC0062	Retainer
KC0876	Pin
KC0878	Pin
KD0296	Screw
KD0311	Spring
KD0411	Screw
KD0425	Retaining Ring
VA0113	Solenoid
VC0130	Solenoid Plunger
WB0050	Lifter
WB0064	Latch Assembly
WC0176	Latch Shaft
WC0240	Latch Arm

 Pressure Vessel Assembly

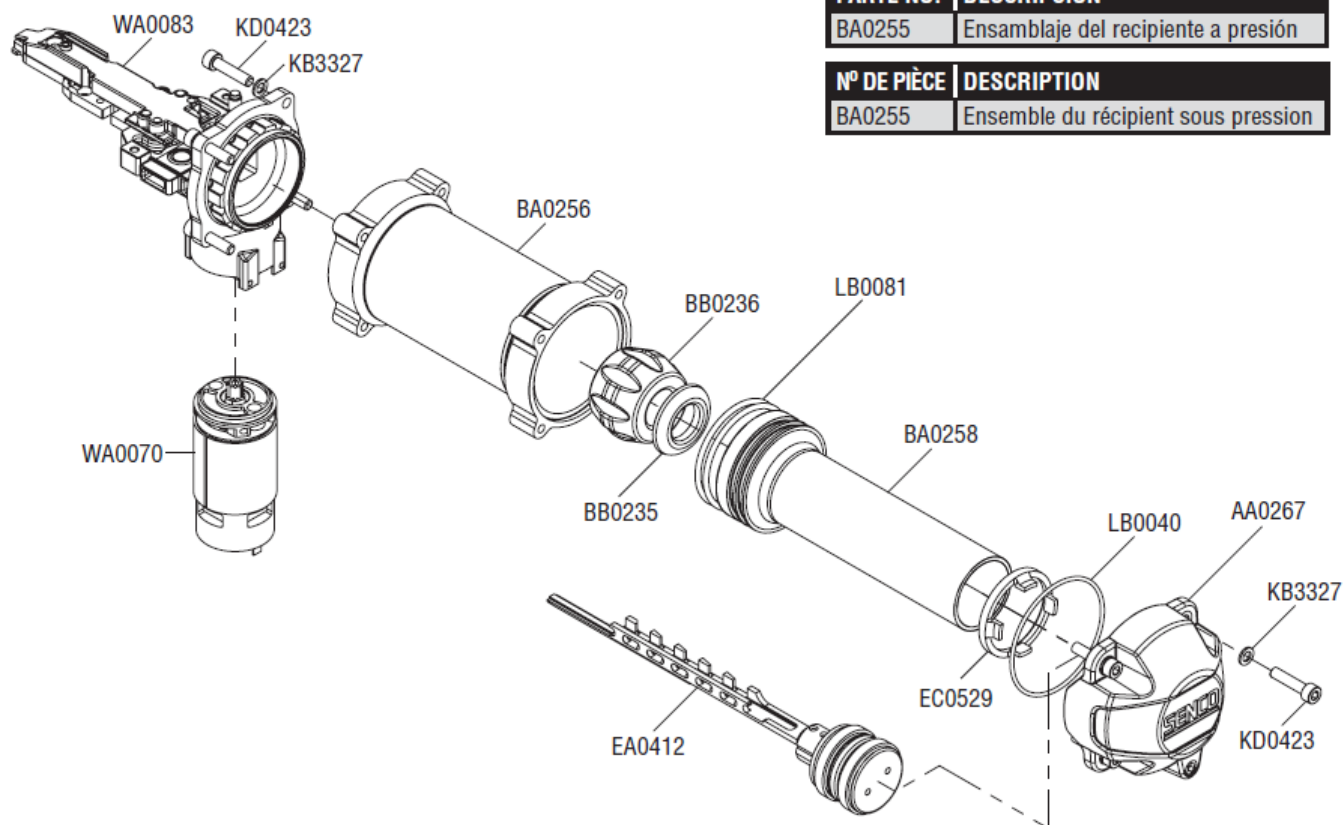


PART NO.	DESCRIPTION
BA0255	Pressure Vessel Assembly
PARTE NO.	DESCRIPCIÓN
BA0255	Ensamblaje del recipiente a presión
Nº DE PIÈCE	DESCRIPTION
BA0255	Ensemble du récipient sous pression

PART NO.	DEsCRPTION
AA0267	Cap Assembly
BA0256	Pressure Vessel
BA0258	Sleeve
BB0235	Piston Stop Shield
BB0236	Piston Stop
EA0412	Piston-Driver Assembly
EC0529	Retainer
KB3327	Washer
KD0423	Screw
LB0040	O-Ring
LB0081	O-Ring
WA0070	Motor Assembly
WA0083	Frontplate Assembly

PISTON-DRIVER ASSEMBLY

 
GROUP D

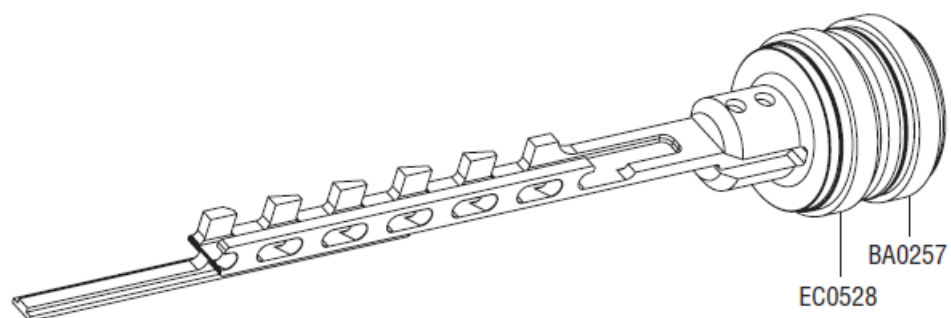

PART NO.	DEsCRPTION
EA0412	Piston-Driver Assembly


FRONT PLATE ASSEMBLY

 GROUP D FRONT PLATE ASSEMBLY • ENSAMBLAJE DE LA PLACA FRONTAL ENSEMBLE DE LA PLAQUE AVANT

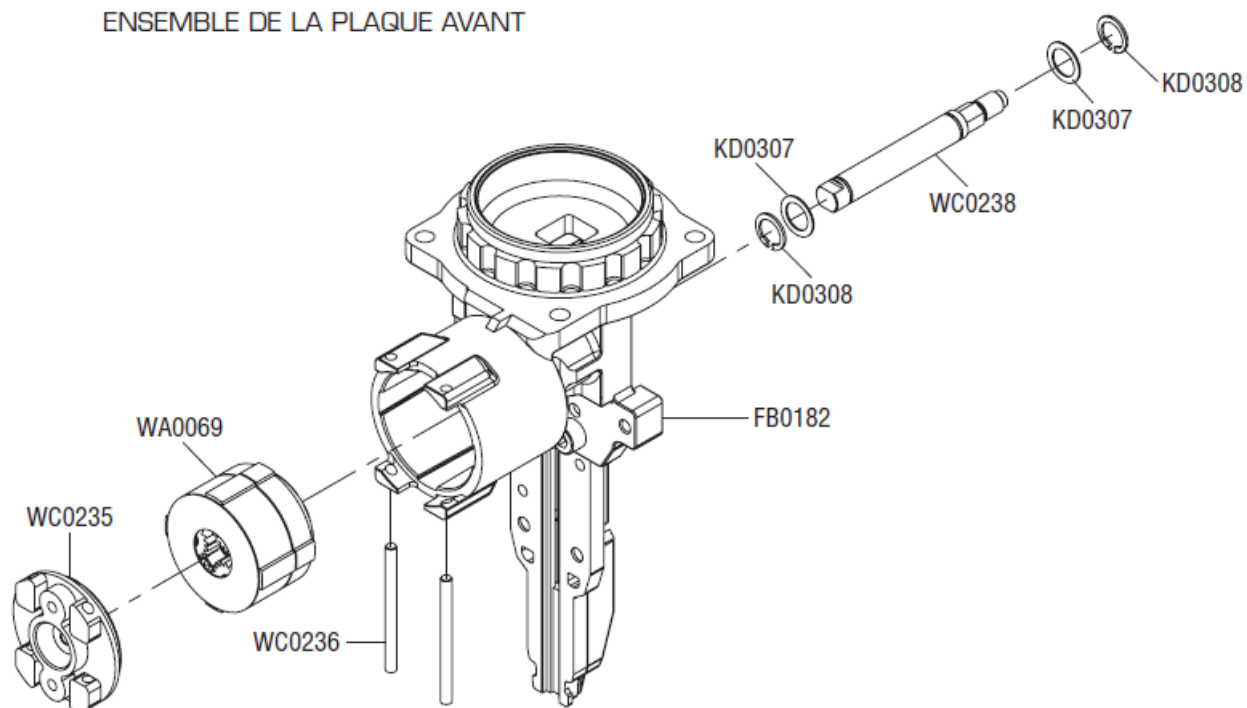


PART NO.	DEsCRPTION
FB0182	Guide Body Assembly
KD0307	Washer
KD0308	Retaining Ring
WA0069	Gears
WC0235	Connector
WC0236	Pin
WC0238	Gearbox Shaft

 Cap ASSEMBLY

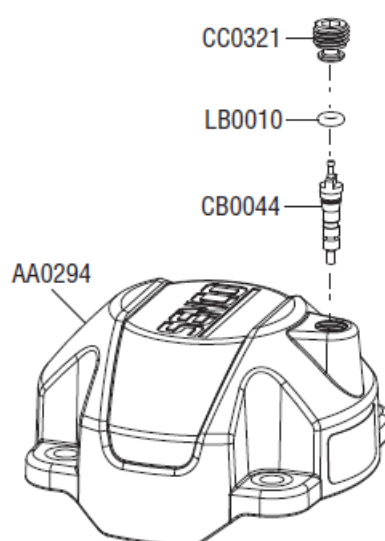


PART NO.	DEsCRPTION
AA0294	Cap
CB0044	Valve
CC0321	Seal
LB0010	O-Ring

 Electronics Group

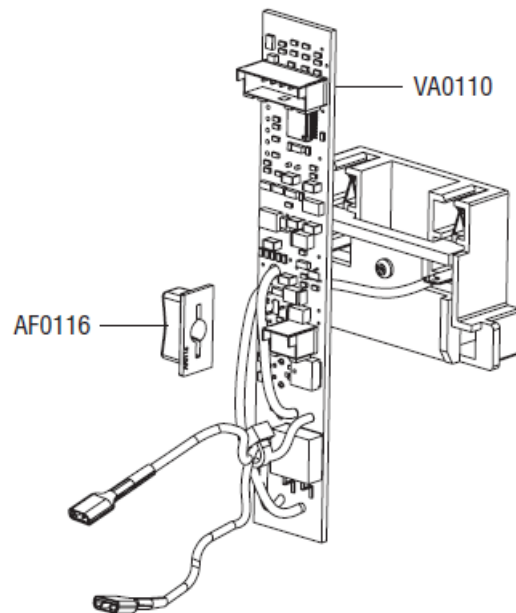

PART NO.	DEsCRPTION
AF0116	Switch
VA0110	PCB Assembly

 
Trigger Assembly

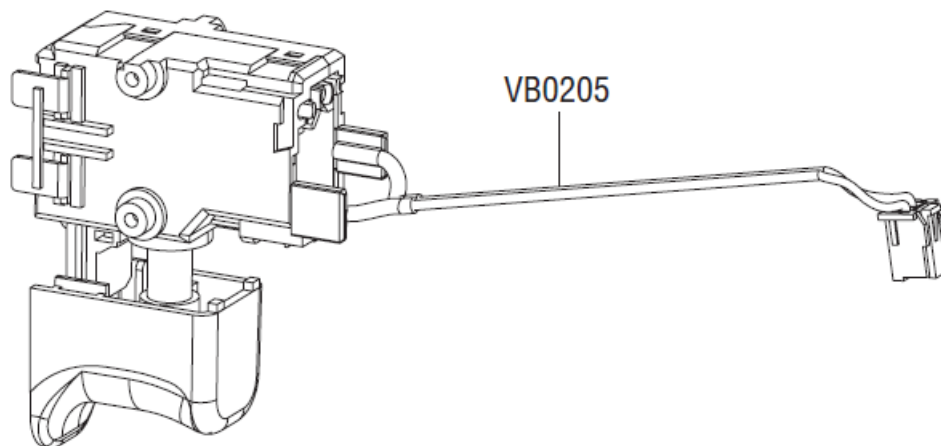

PART NO.	DEsCRPTION
VB0205	Trigger Assembly


Safety Cover Assembly

 GROUP G

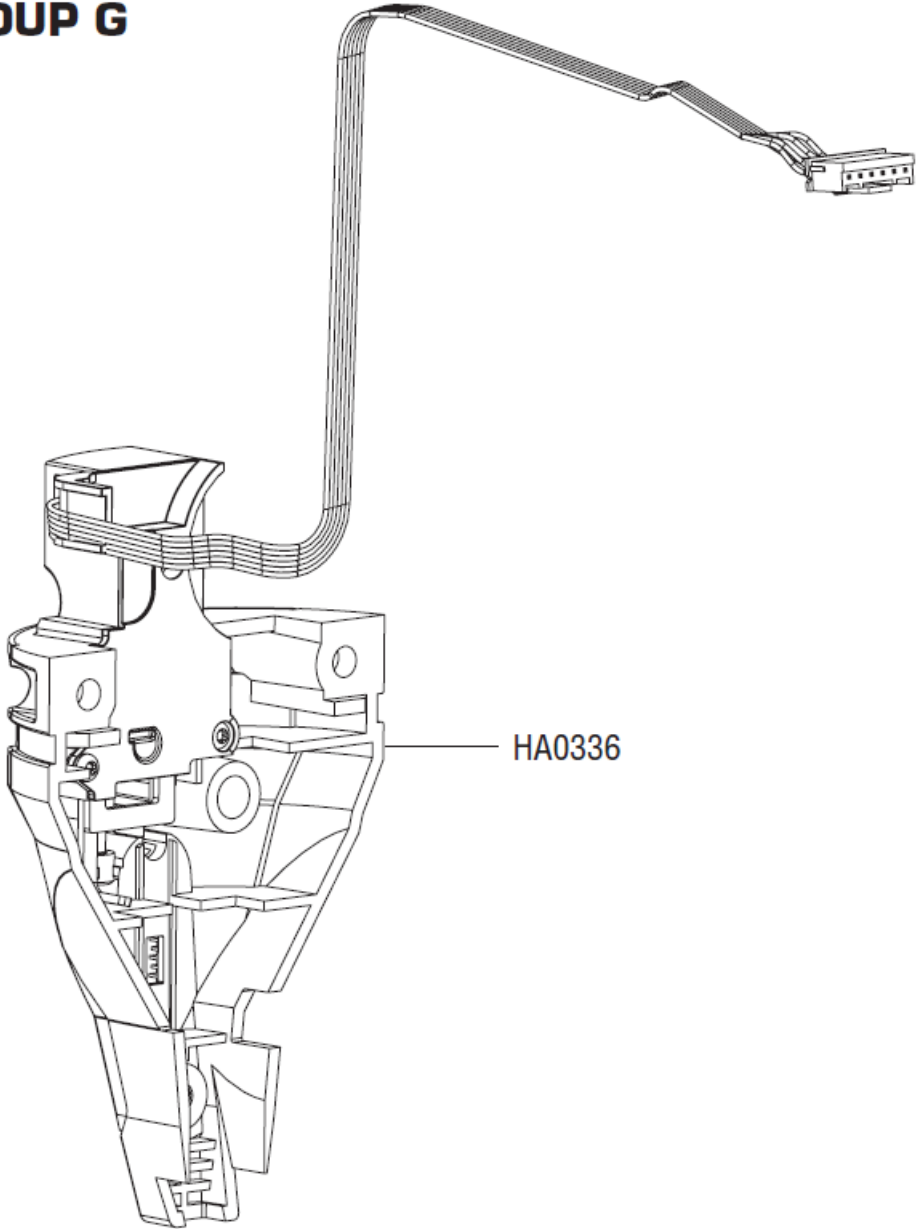

PART NO.	DEsCRPTION
HA0336	Safety Cover Assembly

 
Bracket Group

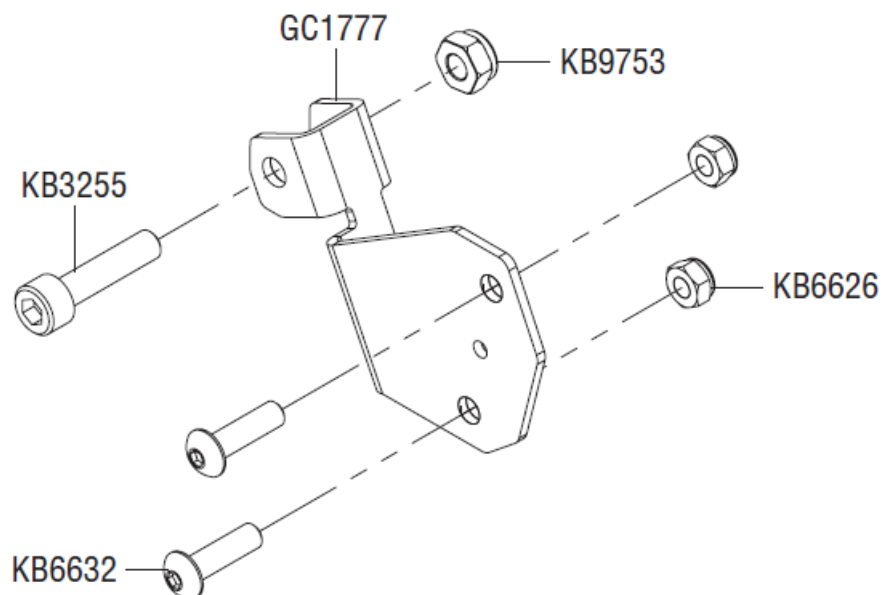

PART NO.	DEsCRPTION
GC1777	Bracket
KB3255	Screw
KB6626	Nut
KB6632	Screw
KB9753	Nut

Belt Hook Assembly

 GROUP J

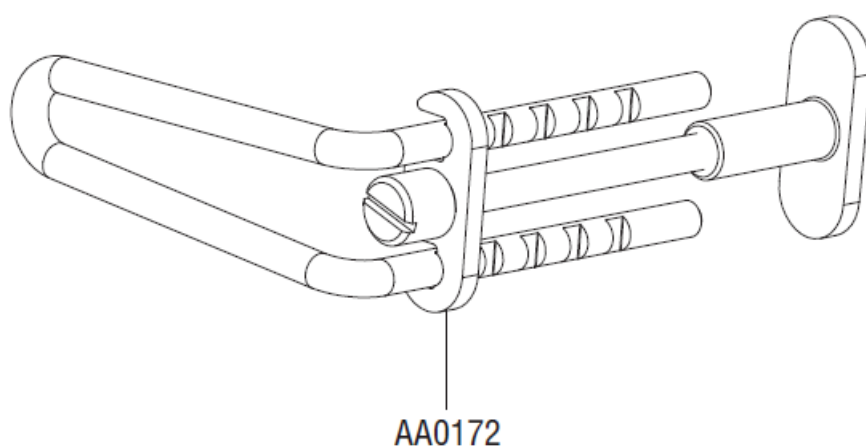


PART NO.	DEsCRPTION
AA0172	Belt Hook Assembly

Battery



PART NO.	DEsCRPTION
VB0155	Battery

 Battery Charger

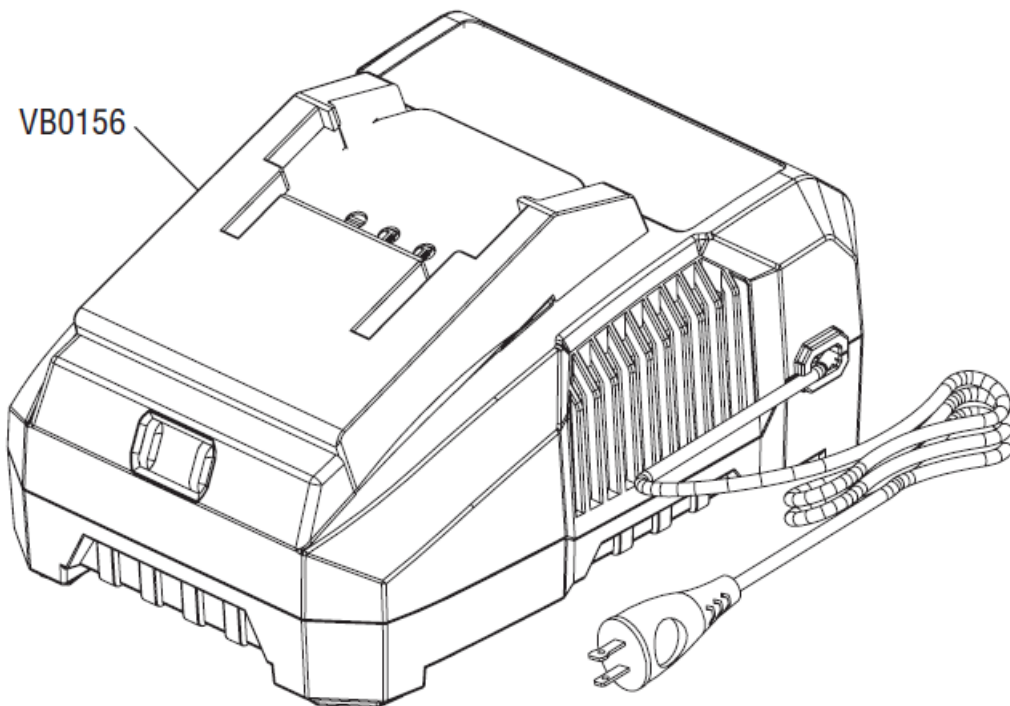

PART NO.	DEsCRPTION
VB0156	Battery Charger

KYOCERA-SENCO Industrial Tools, Inc.
 8450 Broadwell Road
 Cincinnati, Ohio 45244
 1-800-543-4596

Documents / Resources

	FUSION F-LXP Cordless Stapler [pdf] User Guide F-LXP, Cordless Stapler
---	---

References

- [S Home - SENCO](#)