



# FUZZIX 153.013 ALLStar1 LED Party Light Effect Instruction Manual

[Home](#) » [FUZZIX](#) » FUZZIX 153.013 ALLStar1 LED Party Light Effect Instruction Manual 

## Contents

- [1 FUZZIX 153.013 ALLStar1 LED Party Light Effect](#)
- [2 Instruction](#)
- [3 UNPACKING INSTRUCTION](#)
- [4 POWER SUPPLY](#)
- [5 REMOTE](#)
- [6 TECHNICAL SPECIFICATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**FUZZIX 153.013 ALLStar1 LED Party Light Effect**



## Instruction

Congratulations to the purchase of this Fuzzix product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features. Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the product is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The product contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the product on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the product with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the product into a mains outlet and DO NOT switch the unit on. Contact your dealer. Do NOT connect the product to a rheostat or

dimmer.

- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220- 240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains.  
The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the product out of the reach of children. Do not leave the product unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Do not force the controls.
- If this product is with speaker inside which can cause magnetic field. Keep the product at least 60cm away from computer or TV.
- If the product has built-in lead-acid rechargeable battery. Please recharge the battery every 3 months if you are not going to use the unit for a long period of time. Or the battery may be damaged.
- If the battery is damaged please replace with same specifications battery. And dispose the damaged battery environment friendly.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions.

This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard. This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to. The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the product will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F. Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice. Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Fuzzix cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

## UNPACKING INSTRUCTION

CAUTION! Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damage from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original factory box and packing. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

## POWER SUPPLY

On the label on the backside of the product is indicated on this type of power supply must be connected. Check that the mains voltage corresponds to this, all other voltages than specified, the light effect can be irreparably damaged. The product must also be directly connected to the mains and may be used. No dimmer or adjustable power supply. Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

## REMOTE



### 1. ON/OFF

Press this button to turn on or turn off the light

### 2. ON/OFF

Press this button to turn on or turn off the light

### 3. Auto Mode

Press this button to run auto mode

### 4. Hopping Mode

Press +/- to adjust hopping speed

### 5. Fade 1, Fade 2

Press +/- to adjust fade speed

#### 6. **Strobe Mode**

Press +/- to adjust strobe rate

#### 7. **Sound-Active Mode**

Press this button to run sound-active mode

#### 8. **Red Color**

Press this button for Red color

#### 9. **Green Color**

Press this button for Green color

#### 10. **Blue Color**

Press this button for Blue color

#### 11. **White Color**

Press this button for White color

#### 12. **Rose Color**

Press this button for Rose color

#### 13. **AmberColor**

Press this button for Amber color

#### 14. **Cyan Color**

Press this button for Cyan color

#### 15. **SpeedDecrease the speed of a program**

#### 16. **Speed+**

Increase the speed of a program

**CAUTION!** The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.

## **TECHNICAL SPECIFICATION**

- Light source Single colour LED, 3-in-1 LED
- LED colors Red, Green, Blue
- LED power 1W & 3W
- Quantity of LEDs 16
- Illuminance 5863 lx @ 1m
- Modes Automatic programs, Manual
- Power consumption 0.257 – 0.169A
- Power supply 100-240VAC 50/60Hz
- Dimensions (L x W x H) 50 x 380 x 155 (excl. stand)
- Weight 1,60

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice. The products referred to in this manual is conforming European and UK legislation directives to which they are subject:

## **European Union**

Tronios B.V.,  
Bedrijvenpark Twente Noord 18,  
7602KR Almelo, The Netherlands

- 2014/35/EU
- 2014/30/EU
- 2011/65/EC

## United Kingdom

Tronios Ltd.,  
130 Harley Street,  
London W1G 7JU, United Kingdom


- S.I. 2016:1101
- S.I. 2016:1091
- S.I. 2012:3032

Specifications and design are subject to change without prior notice.

[www.tronios.com](http://www.tronios.com)

Copyright © 2022 by TRONIOS the Netherlands

## Documents / Resources

	<p><b>FUZZIX 153.013 ALLStar1 LED Party Light Effect</b> [pdf] Instruction Manual 153.013 ALLStar1 LED Party Light Effect, 153.013, ALLStar1 LED Party Light Effect, ALLStar1 Party Light Effect, LED Party Light Effect, Party Light Effect, LED Light Effect, Light Effect, Effect</p>
---	--

## References

-  [Stibat](#)
-  [Stibat](#)
-  [Sound & Light distributor - Tronios.com](#)
-  [Inleveren is terugkrijgen - Wecycle](#)
-  [Inleveren is terugkrijgen - Wecycle](#)