



# FW MURPHY TTD Display Head Configurable Fault Annunciator Instructions

[Home](#) » [FW MURPHY](#) » FW MURPHY TTD Display Head Configurable Fault Annunciator Instructions 

## Contents

- [1 FW MURPHY TTD Display Head Configurable Fault Annunciator](#)
- [2 Product Information](#)
- [3 TTD™ Display Head \(NEMA 4 Faceplate\)](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



**FW MURPHY TTD Display Head Configurable Fault Annunciator**




## Product Information

The TTD™ Display Head (NEMA 4 Faceplate) is a configurable fault annunciator manufactured by FW MURPHY. It is designed to provide a visual indication of faults or abnormal conditions in various applications. The display head features a NEMA 4 faceplate, ensuring it is suitable for outdoor and harsh environments.

## TTD™ Display Head (NEMA 4 Faceplate)

Configurable Fault Annunciator

## Dimensions

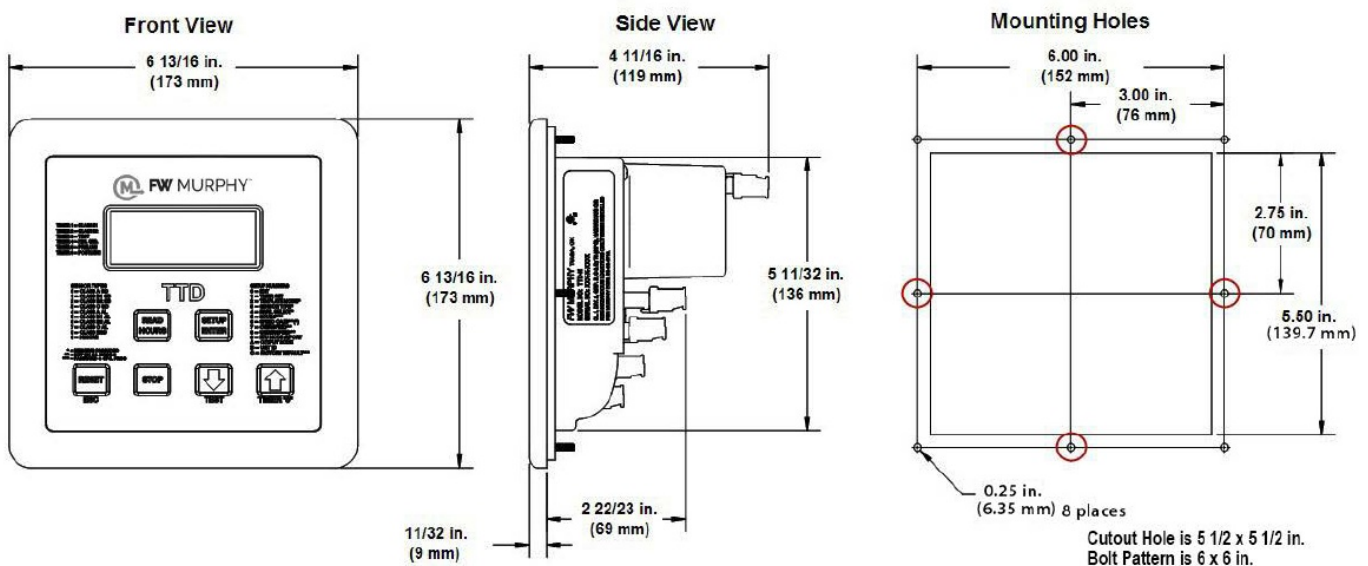

## Special Considerations

- When installed per FW Murphy installation instructions, this TTD faceplate allows mounting through an enclosure to maintain NEMA 4 rating.
- The hole cutout above is a tighter dimensional requirement for the NEMA 4 rating. Existing holes may be larger and could void the gasket/surface requirement for a NEMA 4 rating.
- Installation of the NEMA 4 TTD will not necessarily change the NEMA rating of your control panel. The control

panel enclosure must be rated for NEMA 4 applications.

- Mounting studs for the locations circled above can be removed (if necessary) when replacing the original designed bezel for the TTD (not NEMA rated). If replacing the original designed TTD head, be aware that the removal of these studs will VOID any NEMA 4 capabilities of the replacement Display.
- Removal of studs (if necessary) will NOT void any warranty.
- Stud tightening pattern should be followed as stated: Top left corner, Bottom right corner, Top right corner, Bottom left corner, Top center, Bottom center, Right center, Left center.
- Tighten holding nuts to 9 in. / lbs.

## FW MURPHY PRODUCTION CONTROLS

SALES, SERVICES & ACCOUNTING 4646 S. HARVARD AVE. TULSA, OK 74135  
CONTROL SYSTEMS & SERVICES 2151 RANDON DYER ROAD ROSENBERG, TX 77471  
MANUFACTURING 5757 FARINON DRIVE SAN ANTONIO, TX 78249

## DOMESTIC SALES & SUPPORT

FW MURPHY PRODUCTS  
PHONE: 918 957 1000  
EMAIL: [INFO@FWMURPHY.COM](mailto:INFO@FWMURPHY.COM)  
[WWW.FWMURPHY.COM](http://WWW.FWMURPHY.COM)  
FW MURPHY CONTROL SYSTEMS & SERVICES  
PHONE: 281 633 4500  
EMAIL: [CSS-SOLUTIONS@FWMURPHY.COM](mailto:CSS-SOLUTIONS@FWMURPHY.COM)

## INTERNATIONAL SALES & SUPPORT

CHINA  
PHONE: +86 571 8788 6060  
EMAIL: [INTERNATIONAL@FWMURPHY.COM](mailto:INTERNATIONAL@FWMURPHY.COM)  
LATIN AMERICA & CARIBBEAN  
PHONE: +1918 770 8775  
EMAIL: [INTERNATIONAL@FWMURPHY.COM](mailto:INTERNATIONAL@FWMURPHY.COM)  
SOUTH KOREA  
PHONE: +82 70 7951 4100  
EMAIL: [INTERNATIONAL@FWMURPHY.COM](mailto:INTERNATIONAL@FWMURPHY.COM)



*FM 668576 (San Antonio, TX - USA)*  
*FM 668933 (Rosenberg, TX - USA)*



*FM 523851 (China)*


*TS 589322 (China)*

In order to consistently bring you the highest quality, full-featured products, we reserve the right to change our specifications and designs at any time.

FW MURPHY product names and the FW MURPHY logo are proprietary trademarks. This document, including textual matter and illustrations, is copyright protected with all rights reserved. (c) 2020 FW MURPHY. A copy of

our typical warranty may be viewed or printed by going to [www.fwmurphy.com/warranty](http://www.fwmurphy.com/warranty).

**Documents / Resources**

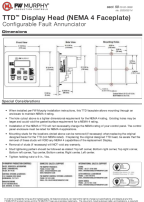	<p><a href="#">FW MURPHY TTD Display Head Configurable Fault Annunciator</a> [pdf] Instructions TTD, NEMA 4 Faceplate, TTD Display Head Configurable Fault Annunciator, Display Head Con figurable Fault Annunciator, Configurable Fault Annunciator, Fault Annunciator</p>
---	---