



FXLuminaire SRP-CC Color Controller for SRP-RGBW Strip Light Owner's Manual


[Home](#) » [FXLuminaire](#) » FXLuminaire SRP-CC Color Controller for SRP-RGBW Strip Light Owner's Manual 

Contents

- [1 FXLuminaire SRP-CC Color Controller for SRP-RGBW Strip Light](#)
- [2 Controller Overview](#)
- [3 Controller Installation](#)
- [4 Controller Mounting](#)
- [5 Standalone Mode](#)
- [6 Luxor Mode](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)


FXLuminaire®

FXLuminaire SRP-CC Color Controller for SRP-RGBW Strip Light

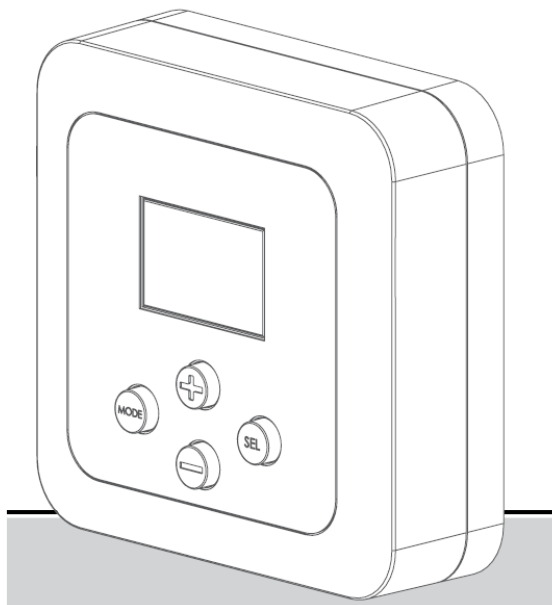

Controller Overview

SRP-CC Components

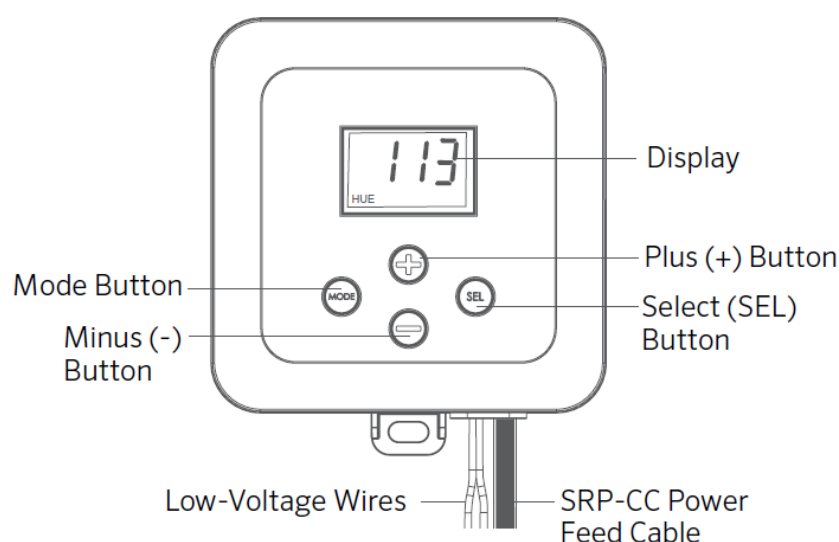

Mode button: Toggles SRP-CC between Luxor Mode and Standalone Mode. Note: Standalone Mode indicates that a standard, low-voltage transformer is being used (e.g., EX Transformer, PX Transformer, etc.).

Select button: Toggles between Hue, Saturation, and Intensity when running in Standalone Mode.

Plus button: Increases values. In Luxor Mode, use this button to increase the Group number. In Standalone Mode, use this button to increase Hue, Saturation, or Intensity values.

Minus button: Decreases values. In Luxor Mode, use this button to decrease the Group number. In Standalone Mode, use this button to decrease Hue, Saturation, or Intensity values.

Low-Voltage Wires: The 3' (0.9 m) wires must be installed to a low-voltage transformer.

SRP-CC Power Feed Cable: 10' (3 m) cable used to connect the SRP-CC Strip Light Color Controller to the SRP-RGBW Strip Light.

Controller Installation


The SRP-CC Strip Light Color Controller is compatible with any low-voltage lighting transformer, including the EX Transformer, PX Transformer, DX Controller, and Luxor Controller from FX Luminaire. It is compatible only with the FX Luminaire SRP-RGBW Strip Light.

To power the controller, connect its low-voltage wires to the output (common and voltage taps) of the low-voltage transformer.

Note: The SRP-CC display illuminates only if the low-voltage transformer is supplying output voltage (minimum 12 VAC).


Controller Mounting


1. Drill $\frac{1}{8}$ " (3 mm) pilot holes into the mounting surface, insert anchors, and install screws into the anchors, leaving approximately $\frac{1}{8}$ " of thread exposed. Mount the controller.
2. Mark locations for the bottom anchors with a permanent marker.
3. Remove the controller from the wall. Drill bottom anchor holes and install the anchors.

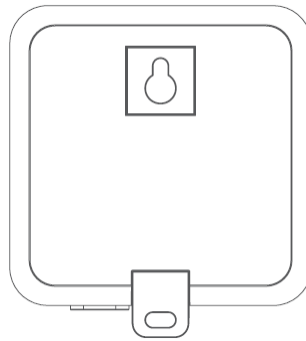


4. To secure the controller to the wall, place it back on top of the anchors. Install the screw(s) into the anchors at the bottom of the controller.

To power the SRP-RGBW Strip Light, connect the SRP-CC power feed cable to the strip light power feed cable.

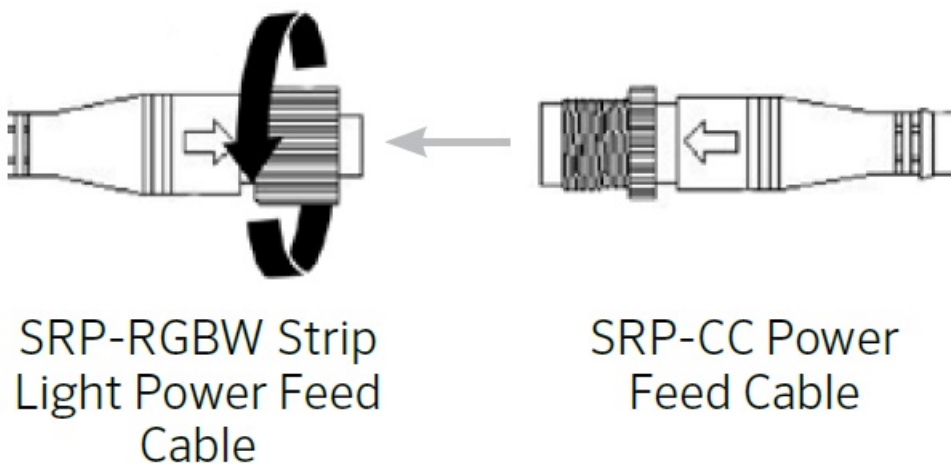

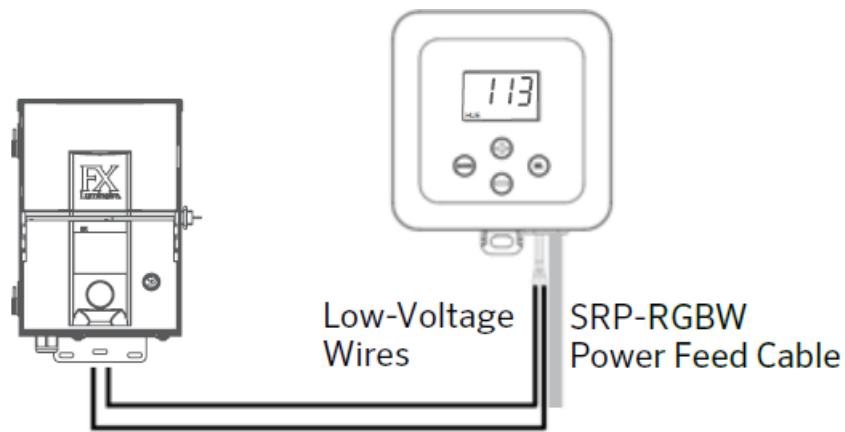

SRP-CC Controller Installation Standalone Mode

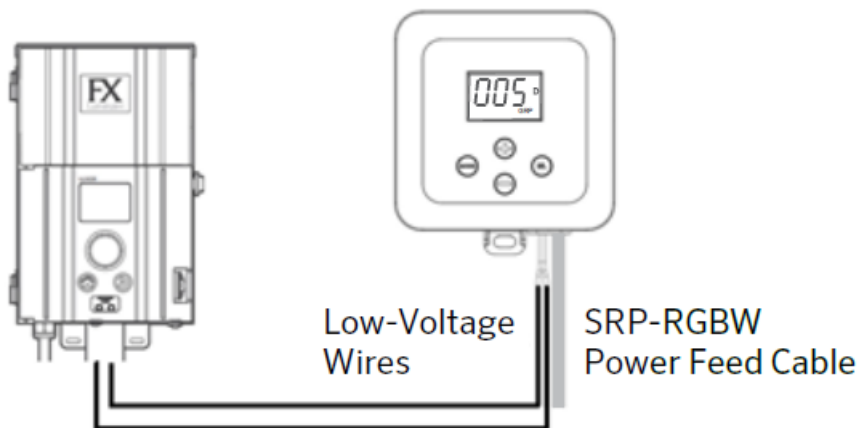

SRP-CC Controller Installation Luxor Mode

Standalone Mode

Setting Up Standalone Mode

1. Attach the SRP-CC low-voltage wires to the output taps or field wires connected to the on-site low-voltage transformer.
2. Turn on the low-voltage transformer manually to confirm the output voltage is at least 12 VAC.
3. Confirm that the SRP-CC display is illuminated.
4. Verify that the Hue, Saturation, or Intensity are displayed. This confirms that the SRP-CC is in Standalone Mode.



5. If GRP (Luxor Mode) is displayed, press the Mode  button to see the Hue, Saturation, or Intensity values.
6. Once in Standalone Mode, the SRP-RGBW Strip Light will illuminate according to the selected Hue, Saturation, and Intensity values.

7. To toggle between Hue, Saturation, and Intensity, press the Select  button. The current selection will be displayed at the bottom of the screen.

8. Use the Plus  and Minus  buttons to adjust the Hue, Saturation, and Intensity values.

 
1. Hue: 0 to 360



2. Saturation: 0 to 100



3. Intensity: 0 to 100



Scan the QR code to
see suggested Hue and
Saturation values.

<https://fxl.help/color>

Luxor Mode

Setting Up Luxor Mode

1. Attach the SRP-CC low-voltage wires to the output taps (Common and 15 V) or field wires connected to the on-site Luxor Controller.
2. Turn on the Luxor Controller manually to confirm the output voltage is at least 12 VAC.
3. Confirm that the SRP-CC display is illuminated.
4. Confirm that GRP (Luxor Mode) is displayed at the bottom of the screen.



5. If HUE, SAT, or INT is displayed, press MODE  to show GRP. This confirms that the SRP-CC is in Luxor Mode.
6. Once in Luxor Mode, the SRP-RGBW Strip Light will be controlled using the Luxor Controller. Set GRP to the desired group. Use  and Minus  to adjust the group number (1–250). The SRP-CC Controller and SRP-RGBW Strip Light will only work with the Luxor Controller if the assigned group is activated. This fixture should not be mixed with other fixture group numbers.
7. Program the color and intensity using the Luxor Controller interface or Luxor App.

Note: The Select  button is not used in Luxor Mode.

LANDSCAPE & ARCHITECTURAL LIGHTING 1940 Diamond Street, San Marcos, CA 92078 fxl.com

Documents / Resources

	FXLuminaire SRP-CC Color Controller for SRP-RGBW Strip Light [pdf] Owner's Manual SRP-CC, Color Controller for SRP-RGBW Strip Light, Color Controller, SRP-CC, Controller
---	--

References

-  [LUXOR - Quick Start Color Guide | FX Luminaire](#)
-  [SRP-CC Strip Light Color Controller - Install Notes | FX Luminaire](#)
-  [SRP - Strip Light Install Notes | FX Luminaire](#)