



Galanz GLEC02S3CT14 2-in-1 Espresso Machine and Coffee Maker User Manual

[Home](#) » [Galanz](#) » Galanz GLEC02S3CT14 2-in-1 Espresso Machine and Coffee Maker User Manual 

Galanz

MODEL: GLEC02S3CT14
2-IN-1 ESPRESSO MACHINE & COFFEE MAKER



USER MANUAL

Thank you for purchasing a Galanz product. Please read this manual carefully for correct usage and safety, and keep for future reference. For service, support and warranty information, call 800-562-0738.

Contents

- [1 IMPORTANT SAFEGUARDS](#)
- [2 GETTING TO KNOW YOUR ESPRESSO MACHINE](#)
 - [2.1 MAIN UNIT](#)
 - [2.2 CONTROL PANEL](#)
- [3 PREPARING & USING YOUR ESPRESSO MACHINE](#)
 - [3.1 BEFORE FIRST USE](#)
 - [3.2 ESPRESSO MAKING GUIDE](#)
 - [3.3 DRIP COFFEE MAKING GUIDE](#)
- [4 MAINTENANCE & TROUBLE SHOOTING](#)
 - [4.1 CLEANING & MAINTENANCE](#)
 - [4.2 TROUBLE SHOOTING](#)
- [5 WARRANTY REGISTRATION](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING YOUR Galanz 2-IN-1 ESPRESSO MACHINE & COFFEE MAKER

- Close supervision is necessary when any appliance is used by or near children or individuals with certain

disabilities.


- To protect against electric shock, DO NOT PLACE ANY PART OF THE ESPRESSO MACHINE IN WATER OR OTHER LIQUIDS.
- Do not operate the appliance without water in the water tank.
- Scalding may occur if the basket holder is opened during the brewing cycle.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not operate the appliance with a damaged cord, plug, after the appliance malfunctions or after it has been dropped or damaged in any manner. Please contact us at 1-800-562-0738 for troubleshooting and warranty support.
- The use of accessory attachments not recommended by Galanz may cause injuries.
- Unplug from outlet when the appliance is not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, posing a risk of electric shock.
- Do not use outdoors.
- Do not use appliance for anything other than intended use.
- This appliance is for HOUSEHOLD USE ONLY.
- Do not touch hot surfaces. Use handles and knobs.
- This appliance can be used by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Appliances are not intended to be operated by an external timer or separate remote-control system.
- **WARNING:** Risk of Fire or Electric Shock. Do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- Avoid contacting moving parts.

Model No.	GLEC02S3CT14
Power Consumption	120V, 60Hz
Watts	1450W
Capacity	2 cups

HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR ESPRESSO MACHINE

MAIN UNIT

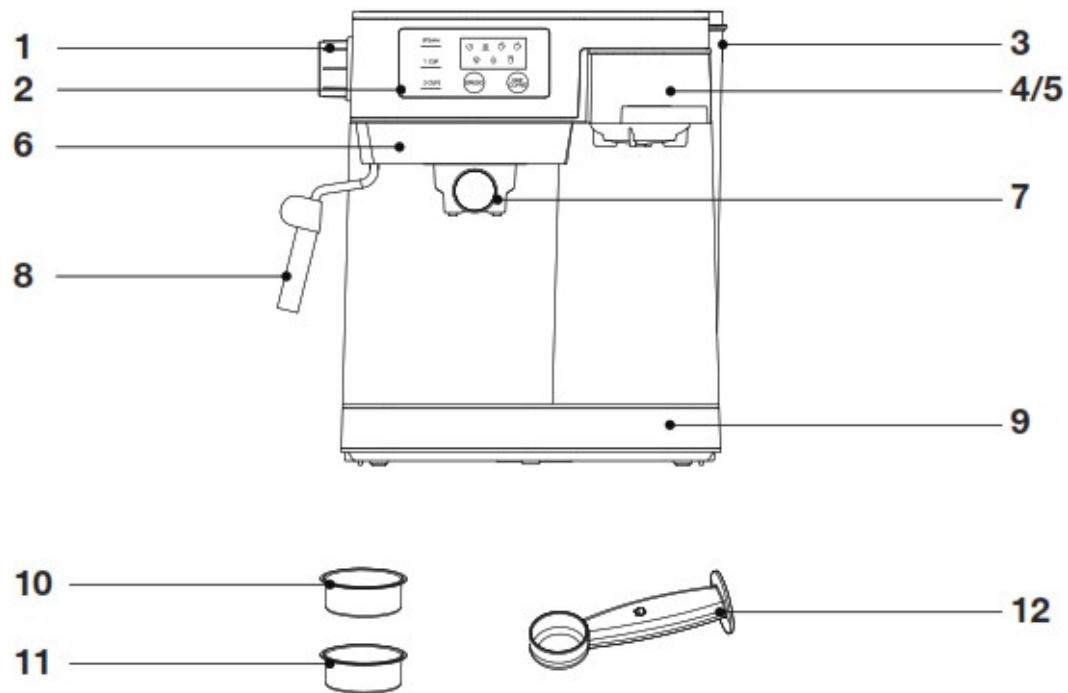

1. Steam/Hot Water Dial:

To release steam or hot water.

2. Control Panel

3. Removable Water Tank :

For easy filling or discarding.

4. Reusable Filter

Holds coffee grounds and can be washed after each use.

5. Removable Filter Holder:

For placing reusable filter or paper filter.

6. Group Head:

For easy positioning of the portafilter

7. Portafilter

Holds the coffee grounds prior to and during the brewing process.

8. Steam Wand

Used to heat and froth milk.

9. Removeable Drip Tray

For easy cleaning.

10. 1-Cup Espresso Filter Basket

11. 2-Cup Espresso Filter Basket

12. Scoop and Tamper

Use to gather and pack the coffee grounds allowing you to get the best shot of espresso.

CONTROL PANEL



1. **STEAM Button**

Press to heat up water and generate steam

2. **1 CUP Button**

Press to extract 1 standard cup of espresso

3. **2 CUPS Button**


Press to extract 2 standard cups of espresso

4. **ESPRESSO Button**

Press to power on the machine and start heating up the espresso module

5. **DRIP COFFEE Button**

Press to power on the machine and start brewing drip coffee

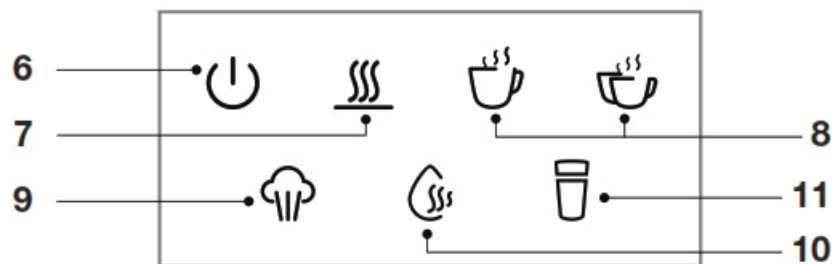

6. **Power Light**

Illuminates when the machine is powered on

7. **Pre-heat Light**

Flashes when the machine is preheating and illuminates when it finishes

8. **Cup Size Light**

Illuminates when corresponding espresso cup size is selected

9. **Steam Light**

Illuminates when the STEAM button is pressed

10. **Hot Water Light**

Illuminates when the Hot Water function is turned on

11. **Drip Coffee Light**

Illuminates when the DRIP COFFEE button is pressed and during the brewing cycle

PREPARING & USING YOUR ESPRESSO MACHINE

BEFORE FIRST USE

MACHINE PREPARATION

- Ensure all packaging has been removed.
- Position the machine onto a dry, stable, flat & horizontal countertop.
- Clean parts and accessories (water tank, portafilter, filter baskets filter holder and steam wand) using warm

water and a gentle dishwashing liquid and rinse well. Wipe the outer housing and drip tray with a soft damp cloth and dry thoroughly.

- Do not immerse the outer housing, power cord or power plug in water or any other liquid.

INITIAL START UP

- Fill the tank with water. Water level should not exceed the “MAX” mark on the tank.
- Insert the Power Plug into a 120V AC power outlet & switch the power on.
- When the PREHEAT light is illuminated, the machine is ready to use.
- Insert the filter basket into the portafilter, insert the portafilter flat against the group head, and turn the portafilter right all the way to the center position.
- Put the Reusable Filter into the filter holder and insert it into the drip coffee slot

FLUSHING THE MACHINE

- It is recommended to complete a water flushing operation without ground coffee to ensure the machine has been conditioned.
- Press ESPRESSO and 2 CUPS, water should start flowing from the portafilter. Allow water to run through until it stops.
- Put a pitcher or jar under the drip coffee station and press DRIP COFFEE. Water should start flowing from the filter holder. Allow water to run through until it stops

ESPRESSO MAKING GUIDE

FILL THE WATER TANK

- Open the water tank lid and pour cold, preferably filtered water into the tank to the maximum mark on the side of the tank and slide the water tank back into position at the back of the machine.

NOTE:

Check the water level before using the machine and replace the water daily. The water tank should be filled with fresh, cold tap water before each use. Do not use de-mineralized or distilled water or any other liquid.

PREHEAT THE MACHINE

- Switch the power on by pressing the ESPRESSO button. The PREHEAT light will illuminate & pulse to indicate the thermoblock is heating up. When the PREHEAT light stops flashing, the machine is ready to use.

COFFEE DOSE AND TAMPING

- Wipe the filter basket with a dry cloth before using to remove any remaining coffee grounds.
- Measure out enough coffee beans for 1 or 2 cups of espresso (depending on your needs) then grind the beans in a coffee grinder until they are a fine powder. You can also use pre-ground coffee beans that have been ground for an espresso machine. Fill the filter basket with the desired amount of coffee grounds.

NOTE:

For a balanced taste, we recommend using 8-10g of coffee grounds for 1 cup and 15-18g of coffee grounds for 2 cups.

- Tap the portafilter several times to distribute the coffee evenly in the filter basket. Ensure all packaging has been removed. Position the machine onto a dry, stable, flat & horizontal
- Tamp down firmly using the other end of the measuring scoop (using approx. 30-40lbs or 15-20kg of pressure). It's important to apply consistent pressure every time.
- Wipe excess coffee from the rim of the filter basket to ensure a proper seal in the group head is achieved.

EXTRACTING ESPRESSO

- Insert the Portafilter into the Group Head & lock into position. Place an espresso cup centered below the portafilter on the drip tray.
- Press the 1 CUP or 2 CUPS button, a pumping noise will be heard. After a few seconds, espresso will begin to brew into the cup. Extraction will automatically stop when 1 cup (1 oz) or 2 cups (2 oz) of espresso is brewed.

FROTHING MILK

- Press the ESPRESSO button and the STEAM button. The PREHEAT light will start to flash indicating that the machine is heating up. When the PREHEAT light stops flashing, the steam is ready.
- It is recommended to purge the steam wand before inserting it into the milk. Put the steam wand into an empty pitcher, turn the Steam/Hot water Dial counterclockwise to purge the steam wand. Discard any liquid that was purged into the pitcher.
- Add milk to a mug or frothing pitcher, making sure to only fill half way or less so that the milk has room to froth without over flowing.
- Insert the wand into the milk and turn the Steam/Hot water Dial counterclockwise.
- To stop the steam, turn the Steam/Hot water Dial to the 'OFF' position and remove the steam wand from the mug or pitcher.

NOTE:

The steam function should only be used when the wand is inserted in milk. The steam should always be turned off before removing the wand from the container of milk.

HOT WATER

- Press the ESPRESSO button and wait until the PREHEAT light stops flashing.
 - Place the steam wand into an empty mug. Turn the Steam/Hot water Dial counterclockwise. Hot water will come out from the Steam Wand.
- Turn the Steam/Hot water Dial to OFF to stop the Hot Water function.

NOTE:

Steam and Hot Water functions cannot be operated at the same time.

DRIP COFFEE MAKING GUIDE

FILL THE WATER TANK

- Open the water tank lid and pour cold, preferably filtered water into the tank to the maximum mark on the side of the tank and slide the water tank back into position at the back of the machine.

PUT THE COFFEE GROUNDS INTO THE FILTER

- Draw the Filter Holder out from the machine. Pour your desired amount of coffee grounds into the permeant filter holder or place a paper filter in the holder and add grounds to that. Insert the Filter Holder back into the machine.

NOTE:

It is recommended to put 21g of coffee grounds in order to brew a full single serve size cup of drip coffee (around 300ml)

BREW COFFEE

- Press the DRIP COFFEE button, the machine will be powered on and will begin brewing cycle.
- The brewing cycle will automatically stop when a full single serve size cup of drip coffee is brewed (around 300ml).

MAINTENANCE & TROUBLE SHOOTING

CLEANING & MAINTENANCE

CLEANING THE STEAM WAND

- Run steam to clear milk from the wand after frothing.
- Allow the steam wand to cool completely before touching or removing any parts.
- Remove the steam wand and clean it under running water after each use.

CLEANING ESPRESSO FILTER BASKET

- Discard any used coffee grounds from the portafilter after each use. Be careful to only discard the coffee grounds and not the filter basket.
- Place the filter into the portafilter. Run water through the machine with the filter and portafilter in place without any ground coffee.

CLEANING REUSABLE FILTER BASKET

- Discard any used coffee grounds from the reusable filter basket. Rinse it under water and then allow it to air dry.

CLEANING THE OUTER HOUSING

- The outer housing can be cleaned with a soft, damp cloth, and polished with a soft, dry cloth. Do not use

abrasive cleaners, pads or cloths which can scratch the surface.

CLEANING THE DRIP TRAY

- We recommend removing, emptying and cleaning the drip tray after each use. Wash the drip tray with warm soapy water, using a non-abrasive washing liquid. Rinse and dry thoroughly. The drip tray base and cover are dishwasher safe.

NOTE:

Do not immerse power cord, power plug or appliance in water or any other liquid.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Not enough espresso is being extracted	Too much ground coffee in the filter basket 2 cups	Recommend using 8-10g of coffee grounds for 1 cup and 15-18g of coffee grounds for 2 cups
	Coffee tamped too firmly	Recommend using approx. 30-40lbs or 15-20kg of pressure
Too much water is being extracted, espresso is light in color and weak tasting	Not enough coffee grounds in filter basket	Recommend using 8-10g of coffee grounds for 1 cup and 15-18g of coffee grounds for 2 cups
	Coffee not tamped firmly enough	Recommend using approx. 30-40lbs or 15-20kg of pressure
Machine is not powered on after pressing ESPRESSO button	Steam/Hot Water function is turned on	Turn the Steam/Hot Water Dial clockwise to close the Steam function
Espresso runs out around the edge of the portafilter	Portafilter is not inserted into the group head properly	Insert portafilter into the group head and align with 'LOCK' on the group head collar, until resistance is felt. Refer to 'EXTRACTING ESPRESSO', page 5
	There are coffee grounds around the filter basket rim	Dean any excess ground coffee from the rim of the filter basket to ensure a proper fit into group head
	Too much ground coffee in the filter basket	Recommend using 8-10g of coffee grounds for 1 cup and 15-18g of coffee grounds for 2 cups
	Coffee tamped too firmly	Recommend using approx. 30-40lbs or 15-20kg of pressure
Machine is making a loud and continuous pumping noise	Water tank is empty or not securely in place	Refer to 'FILL THE WATER TANK' on page 4

This warranty applies to products sold by Galanz Americas in the U.S. This warranty is in lieu of any other warranty and expressly applies to the individual product only.

Galanz product is warranted for one year following purchase for defects in material and workmanship. **Please**

save your receipt as proof of purchase is required to make a warranty claim. During this warranty period, we will provide the replacement cost of this product, a replacement of an equivalent product, or repair per our discretion.

The warranty cannot be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer purchaser upon purchase from an authorized retailer.

• **This warranty does not cover and excludes damage or defects caused by:**

- Consumer misuse
- Abuse
- Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual
- Commercial use
- Subjecting the product to any voltage outside the specified range
- Loss of parts
- The affixing of any attachments not provided with the product
- Use in a manner not intended and outlined in the user manual
- Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any: Retail offered extended warranties Tax Other charges(including postage to send required materials) Incidental and/or consequential damages associated with the product in question.

Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the above limitations may not apply to you.

If you have a claim under this warranty, please call our Customer Service number: 1-800-562-0738.

For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.



WARRANTY REGISTRATION

Please mail this warranty card to the address below within 30 days of purchase.
Galanz Americas, 55 Challenger Road, Suite 503, Ridgefield Park, NJ 07660.
PLEASE PRINT CLEARLY.

Name _____
Address _____
City _____ State _____
Postal _____ Code _____ Phone _____
Email _____ Model Number _____
Serial Number _____ Purchase Location _____

You must attach a copy of your purchase receipt to validate your registration.

Documents / Resources

	Galanz GLEC02S3CT14 2-in-1 Espresso Machine and Coffee Maker [pdf] User Manual GLEC02S3CT14, 2-in-1 Espresso Machine and Coffee Maker
	Galanz GLEC02S3CT14 2-in-1 Espresso Machine and Coffee Maker [pdf] User Manual GLEC02S3CT14 2-in-1 Espresso Machine and Coffee Maker, GLEC02S3CT14, 2-in-1 Espresso Machine and Coffee Maker, Espresso Machine and Coffee Maker, Machine and Coffee Maker, Coffee Maker, Maker