

 **GAMESIR**
**CYCLONE2 Multi
Platform Wireless
Game Controller**



GAMESIR CYCLONE2 Multi Platform Wireless Game Controller Instruction Manual

[Home](#) » [GameSir](#) » GAMESIR CYCLONE2 Multi Platform Wireless Game Controller Instruction Manual 

Contents

- 1 GAMESIR CYCLONE2 Multi Platform Wireless Game Controller
- 2 PACKAGING CONTENTS
- 3 REQUIREMENT
- 4 DEVICE LAYOUT
- 5 BASIC FUNCTION INTRODUCTION
- 6 WINDOWS CONNECTION TUTORIAL
- 7 SWITCH CONNECTION TUTORIAL
- 8 ANDROID CONNECTION TUTORIAL
- 9 iOS CONNECTION TUTORIAL
- 10 ADVANCED TUTORIAL
- 11 SAFETY PRECAUTIONS
- 12 WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION
- 13 DECLARATION OF CONFORMITY
 - 13.1 FCC WARNING
- 14 Documents / Resources
 - 14.1 References



GAMESIR CYCLONE2 Multi Platform Wireless Game Controller



E-Manual

<https://www.gamesir.hk/pages/manuals-gamesir-cyclone2>.



 
PACKAGING CONTENTS

- Controller *1
- 1m Type-C Cable *1
- Manual *1
- Thank You & After-sale Service Card *1
- GameSir Sticker *1
- Certification *1
- Receiver *1
- Charging Dock (Optional) *1

REQUIREMENT

- Switch
- Windows 10 or above
- Android 8.0 or above
- iOS 13 or above

DEVICE LAYOUT

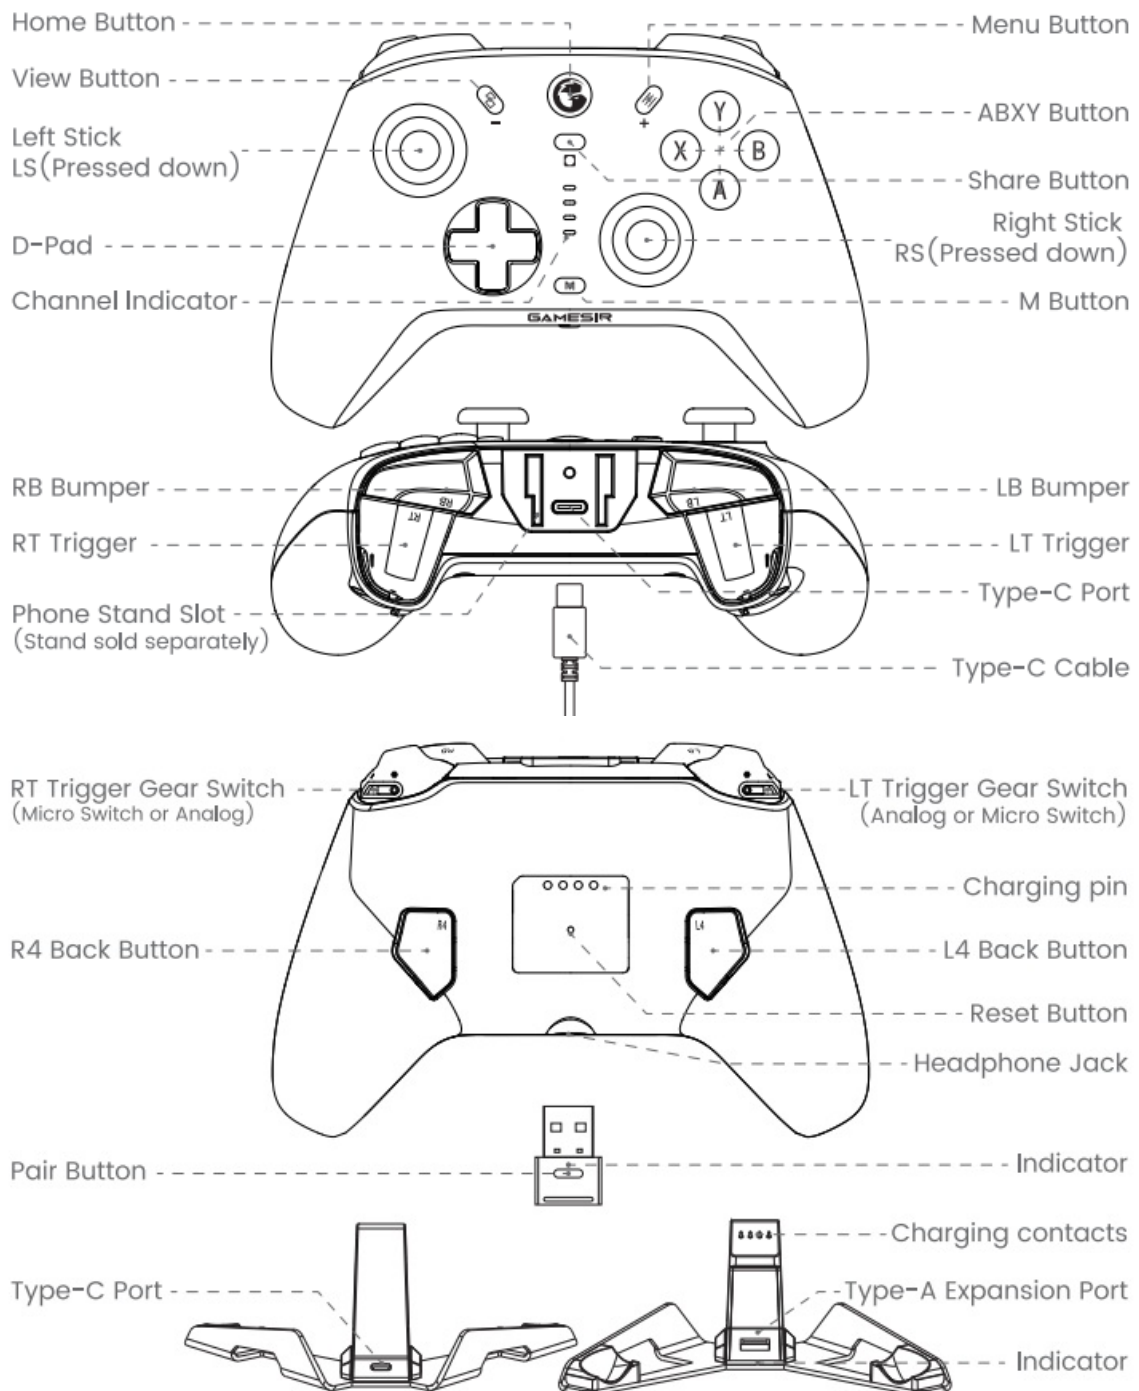

BASIC FUNCTION INTRODUCTION




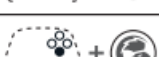
CONNECTION STATUS

Home Indicator	Description
Flash Slowly (Once per second)	Reconnection State *Connecting to a previously paired device
Flash Rapidly (4 times per second)	Pairing State *Can be searched and paired by devices only in pairing state
Solid	Connected State *Long press the Home button for 5 seconds to turn off the controller

OTHER DESCRIPTIONS

Description	Operation
Charging Indicator	When the controller is charging while powered off, the Home Indicator indicates the charging progress: Red (0%-25%), Orange (25%-50%), Yellow (50%-75%), Green (75%-90%), and Flashing Green for 2 seconds and then turning off (90%-100%).
Low Battery Alert	When the controller's battery is below 15%, the Home Indicator flashes red twice every 10 seconds.
Dock Charging	When the dock is powered on, place the controller on the charging dock; the dock synchronizes with the controller's charging indicator.
Auto Power-Off	No operation in connection status: 10 minutes Not connected in pairing status: 1 minute Not connected in reconnection status: 3 minutes
Controller mode check	Press and hold the M button to view the current mode color.

HOME BUTTON STATUS


Color	Mode	Connection Method	Recommended Platform
Blue	DS4		Win 10 or above iOS 13 or above
Green	XInput		Win 10 or above Android 8.0 or above
Red	NS		Switch
Yellow	HID		Android 8.0 or above

WINDOWS CONNECTION TUTORIAL


WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to the computer.
2. The Home Indicator will stay solid, indicating a successful connection.

BLUETOOTH CONNECTION

1. Press and hold  for 2 seconds until the Home Indicator blinks blue, then release the buttons.
2. Open the Bluetooth list on your computer, find the device named "Wireless Controller", and click to connect.
3. The Home Indicator will stay solid, indicating a successful connection.
 - If the connection is not successful, please press and hold the controller's Home Button + Share Button for 2 seconds to re-enter pairing mode.



RECEIVER CONNECTION

1. Plug the receiver into the USB port of the device to be connected; the receiver indicator will flash.
2. Press and hold  for 2 seconds until the Home Indicator flashes green, then release the buttons and wait for the controller to connect to the receiver.

3. The connection is successful when the indicators on both the controller and the receiver stay solid.
 - If the connection is not successful, please press and hold the controller's Home Button + Share Button for 2 seconds, and press the Pairing Button on the receiver to repair.



SWITCH CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. On the Switch main menu, go to "Controllers" – "Change Grip/Order" and wait on this screen.
2. Press and hold  +  for 2 seconds until the Home Indicator flashes red, then release the buttons and wait for the connection.
3. The Home Indicator will remain solid, indicating a successful connection.
 - If the connection is not successful, please press and hold the controller's Home Button + Share Button for 2 seconds to re-enter pairing mode.



ANDROID CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. Press and hold  +  for 2 seconds until the Home Indicator flashes yellow, then release the buttons.
2. Open the Bluetooth list on your phone, find the device named "GameSir-Cyclone 2", and click to connect.
3. The Home Indicator will remain solid, indicating a successful connection.
 - If the connection is not successful, please press and hold the controller's Home Button + Share Button for 2 seconds to re-enter pairing mode.

iOS CONNECTION TUTORIAL

BLUETOOTH CONNECTION

 
1. Press and hold  +  for 2 seconds until the Home Indicator flashes blue, then release the buttons.
2. Open the Bluetooth list on your phone, find the device named "DUOLSHOK 4 Wireless Controller", and click to connect.
3. The Home Indicator will remain solid, indicating a successful connection.
 - You can change the Home indicator color in your phone's settings: Settings – General – Game Controller.
 - If the connection is not successful, please press and hold the controller's Home Button + Share Button for 2 seconds to re-enter pairing mode.

ADVANCED TUTORIAL

BACK BUTTON SETTING

- No button values by default
- Programmable for Single button or Multi-button

- Programmable buttons: A/B/x/y/LB/RB/LT/RT/Ls/Rs/View
- Button/Menu Button/D-Pad/Left Stick/Right Stick

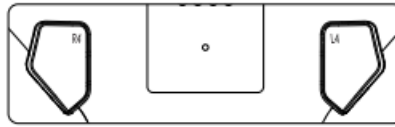



















1. Set L4/R4 Button Values: Press and hold the M button + L4/R4 buttons simultaneously until the Home Indicator slowly flashes white. Press the button to be programmed (supports single button/combination button), then press the L4/R4 button. When the Home Indicator returns to the mode color, the L4/R4 button setting is complete.
 - In a combination button, the interval time between each button will be triggered according to the operation time during programming.
2. Cancel L4/R4 Button Values: Press and hold the M button + L4/R4 buttons simultaneously until the Home Indicator slowly flashes white, then press the L4/R4 button. When the Home Indicator returns to the mode color, the L4/R4 button cancellation is complete.
 - If the setting process exceeds 10 seconds, it will automatically save and exit.

TURBO SETTING





- **There are 4 modes:** Slow (8Hz), Medium (12Hz), Fast (20Hz), and Off.
- **Programmable buttons:** A/B/x/Y/LB/RB/LT/RT

1. Set Turbo function: Press and hold the M button, then press the button you want to set to enable the Turbo function with Slow mode. Repeat this operation to cycle through the Turbo modes (Slow, Medium, Fast, Off).
2. Clear Turbo function: Double-click the M button.
 - When a button with the Turbo function is activated, the Home indicator flashes continuously.
 - The setting will still be saved after a restart.



BUTTON COMBINATION

Button Combination	Description					
Hair Trigger Long press M + LT/RT for 2 seconds  +  / 	Enable/disable hair trigger mode. After the hair trigger mode is enabled, the Home Indicator flashes when LT/RT is pressed. *The setting will still be saved after a restart.					
Vibration Level Press the M + D-pad's Up/Down  + 	Decrease/increase the vibration intensity of the grip motors. 5 levels: Level 1 – vibration off, Level 2 – 25% vibration, Level 3 – 50% vibration, Level 4 – 75% (default), Level 5 – 100% vibration. *The setting will still be saved after a restart.					
Mode Switching Long press View button + Menu button for 2 seconds  + 	*Only supported in receiver and wired modes. By performing this operation, you can manually switch between XInput/NS/and DS4 modes, fixing the connection mode for use. The next time you connect using the same method, the mode will remain as previously switched. *Long press the Home button for 10 seconds to power off. Upon restarting, the controller will restore the automatic platform recognition function.					
Stick's Dead Zone Long press M + LS/RS for 2 seconds  +  / 	Enable/Disable zero Dead Zone Mode for the Left/Right Stick *The setting will still be saved after a restart.					
Button Layout Long press for 2 seconds  + 	Interchange button values of A/B, X/Y *The setting will still be saved after a restart.					
Configuration Switching M + Right Stick up/down  + 	You can cycle through four preset configurations.	Configuration	Channel Indicator	Configuration	Channel Indicator	
		Default configuration		Configuration 2:		
		Configuration 1		Configuration 3:		

STICK & TRIGGER CALIBRATION

- With the controller powered on, set the trigger gear to the analog mode and press and hold  +  +  buttons until the Home Indicator flashes white slowly.
- Press LT and RT to their maximum travel 3 times each, and rotate the left and right joysticks to their maximum angle in circles 3 times each, then press  the button.
Calibration is complete when the Home indicator returns to its mode color.

GYROSCOPE CALIBRATION

Place the controller horizontally on a flat surface, then long-press  +  buttons for 3 seconds. At this point, the Home indicator will flash red and blue alternately rapidly. Calibration is complete when the Home indicator returns to its mode color.

INSTALL THE "GAMESIR CONNECT" SOFTWARE FOR CUSTOM CONFIGURATION

Visit the official website gamesir.hk or the Microsoft Store to download and use the "GameSir Connect" software. The app allows for firmware upgrades, adjustment of stick and trigger effective range, LED light effect

adjustments, vibration intensity settings, button mapping, and button testing.

CONTROLLER RESET

In case of abnormal behavior or being unable to power the controller on or off, you can use an object similar to the size of a SIM ejector pin to press the reset button located in the circular hole on the back of the controller to force a shutdown.

SAFETY PRECAUTIONS

PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch the USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair, or modify.
- DO NOT use for purposes other than its original purpose. We are not responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

Applicable in the European Union and other European countries with separate collection systems.

This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery, and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery, and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio tv technician for help.

RF warning for Portable devices:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

IC CAUTION

This device contains license-exempt transmitter (s) / receiver (s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS (s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this Gamesir Cyclone 2 Controller complies with Directive 2014/30/EU, 2014/53/EU & 2011/65/EU and its amendment (EU) 2015/863.



<https://doc.xiaoji.com/zh>



[GAMESIR CYCLONE2 Multi Platform Wireless Game Controller](#) [pdf] Instruction Manual
CYCLONE2, CYCLONE2 Multi Platform Wireless Game Controller, Multi Platform Wireless Game Controller, Wireless Game Controller, Game Controller, Controller

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.