



GAME SIR F2154 G4 Pro Multi-Platform Game Controller User Manual

[Home](#) » [GameSir](#) » **GAME SIR F2154 G4 Pro Multi-Platform Game Controller User Manual** 

Contents

 
 
- [1 GAME SIR F2154 G4 Pro Multi-Platform Game Controller](#)
- [2 DEVICE LAYOUT](#)
- [3 BATTERY STATUS](#)
- [4 SWAP ABXY BUTTON POSITIONS](#)
- [5 SCREENSHOT, RECORDING AND KEY COMBINATION](#)
- [6 TURBO FUNCTION](#)
- [7 FCC caution](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



GAMESIR F2154 G4 Pro Multi-Platform Game Controller



DEVICE LAYOUT

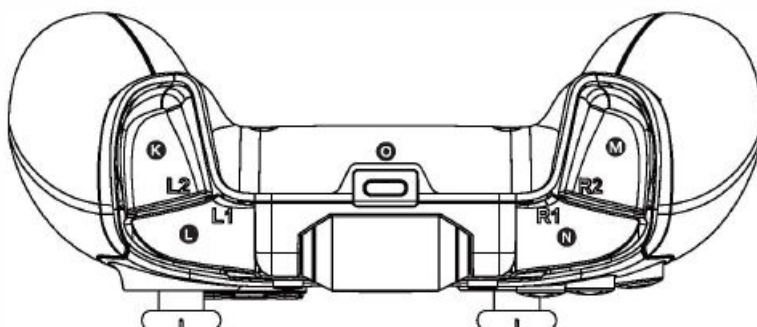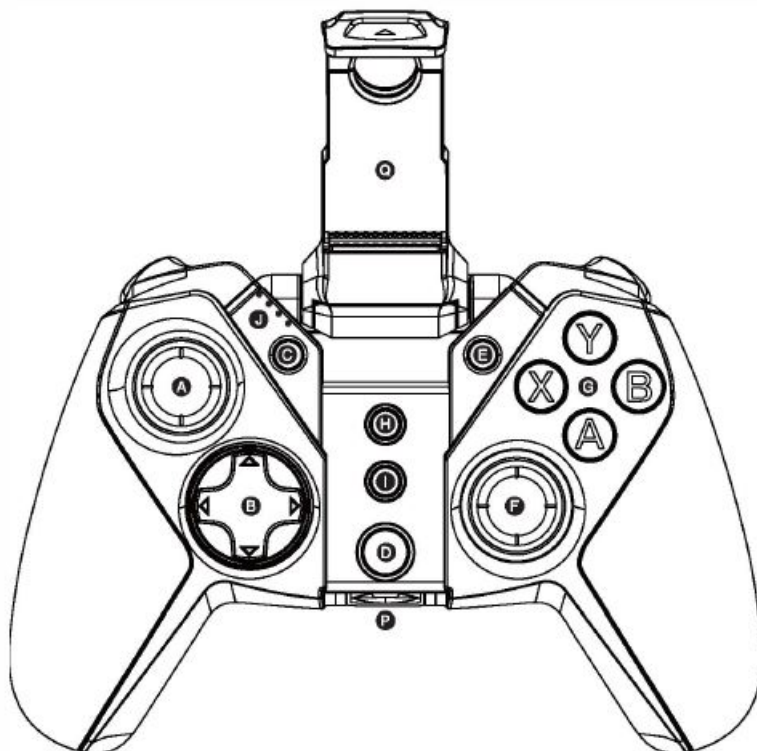

1. Left joystick
2. D-Pad
3. Right joystick
4. ABXYbutton
5. L2 button
6. L1 button
7. Receiver storage
8. Phone holder
9. Select button
10. Home button
11. Start button
12. Turbo button
13. Screenshot button
14. Charging indicator
15. R2 button
16. R1 button
17. Type-C Connector

HOW TO USE THE PHONE HOLDER

Push the phone holder up from the bottom of the controller to expand it.

HOW TO CHARGE THE CONTROLLER

Use the charging cable to connect the Type-C interface on the top of the controller to the USB charging port

BATTERY STATUS

Charging indicator	Description
● ● ● ●	In use, 100% remaining
○ ● ● ●	In use, 75% remaining
○ ○ ● ●	In use, 50% remaining
○ ○ ○ ●	In use, 25% remaining
Red light flashes quickly	Less than 15%
Red light flashes slowly	Charging
Red light stays on	Fully charged

 
TURN OFF

Long press the HOME button for 5 seconds to turn off the G4 pro.

CONNECT TO PC VIA USB RECEIVER OR USB CABLE

1. Long press the X + HOME until the controller is turned on

2. Plug the USB receiver into the USB port of your computer or use the USB cable to connect the controller to the computer USB port
3. The next time you connect to the computer, as long as you press and hold the HOME for 2 seconds to turn it on, the controller will auto connect to computer Note: If the controller has switched to other modes, you need to use the key combination again to reboot. If you still cannot connect after inserting the USB receiver, press and hold the G+S button for 5 seconds, and the controller will re-pair with the receiver after it restarts automatically.

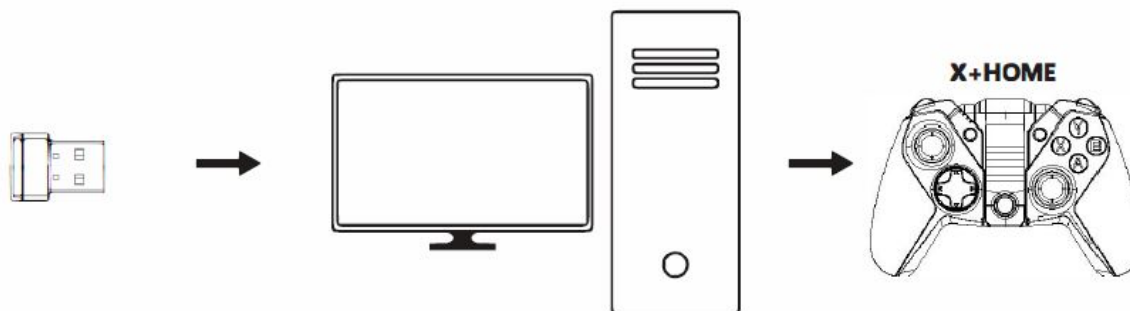


HOME button indicator	Description
Flashes in green	Connecting
Flashes quickly in green	Pairing
Stays in green	Connected

CONNECT TO NINTENDO SWITCH OR SWITCH LITE VIA BLUETOOTH

1. Go to the home page of the Switch, and click: Controllers—change the grip / order and enter the pairing interface
2. Press and hold the Y + HOME until the controller is turned on
3. The controller will automatically pair with Switch or Switch Lite
4. The next time you connect to Switch or Switch Lite, as long as you press and hold the HOME for 2 seconds to turn it on, the controller will auto connect to Switch or Switch Lite

 Note: If you need to switch the gamepad to other modes, go to the Switch homepage, and click Controller-> Change the grip/order to enter the pairing page. Turn off the gamepad and press the key combination to turn it on and pair it with the Switch. If you need to cancel the pairing with the current gamepad for the Switch or the controller needs to be connected to the new Switch, please go to the Switch homepage, click in order: Controller->Change the grip/order, and enter the pairing page. Press and hold the G+S button of the gamepad for 5 seconds, and the controller will re-pair with the Switch after it auto restarts.

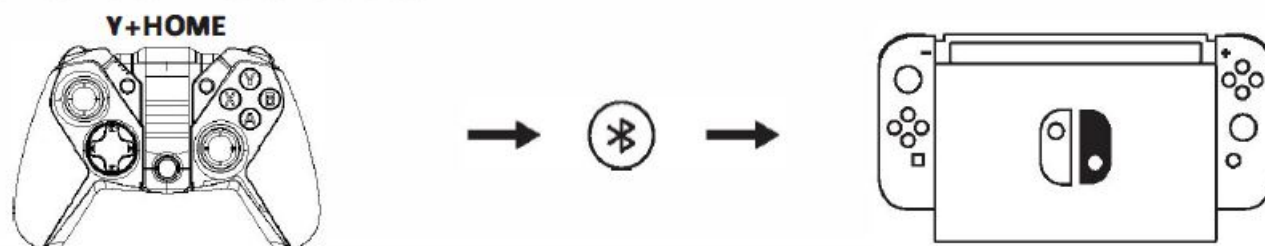

HOME button indicator	Description
Flashes in red	Connecting
Flashes quickly in red	Pairing
Satys in red	Connected

CONNECT TO MOBILE PHONE VIA BLUETOOTH

 
Play Android controller-supported games

Refers to mobile games that support using a gamepad

1. Press the A+ HOME until the controller is turned on
2. Turn on the Bluetooth, search for Gamesir-G4pro gamepad, click and pair.
3. The next time you connect, as long as you press and hold the HOME for 2 seconds to turn it on, the controller will auto connect to mobile phone

Note:If the gamepad needs to be switched to another mode, you need to turn off the gamepad and then use the key combination to turn it on again. Then turn on the mobile phone Bluetooth to search for Gamesir-G4pro and pair. If the Android phone ignores/cancel the Bluetooth pairing of the gamepad or connects to a new Android phone, you need to press and hold the G+S button for 5 seconds, and the gamepad will re-pair with the Android phone after it restarts automatically. Turn on the phone's Bluetooth, search for the Gamesir-G4pro, click and pair.

A+HOME

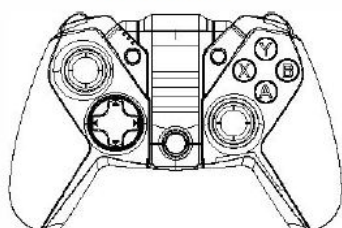

HOME button indicator	Description
Flashes in blue	Connecting
Flashes quickly in blue	Pairing
Stays in blue	Connected

 
Play Apple Arcade and MFi games

Refers to mobile games that support using a gamepad

1. Press the B + HOME until the controller is turned on
2. Turn on the Bluetooth, search for the Xbox Wireless Controller gamepad, click and pair.
3. The next time you connect, as long as you press and hold the HOME for 2 seconds to turn it on, the controller will auto connect to mobile phone

Note: If the gamepad needs to be switched to another mode, you need to turn off the gamepad and then use the

key combination to turn it on again. Then turn on the phone's Bluetooth to search for the Xbox Wireless Controller and pair. If the iPhone ignores/cancel the Bluetooth pairing of the gamepad or connects to a new iPhone, you need to press and hold the G+S button for 5 seconds, and the gamepad will re-pair with the iPhone after it restarts automatically. Turn on the phone's Bluetooth, search for the Xbox Wireless Controller, click and pair.

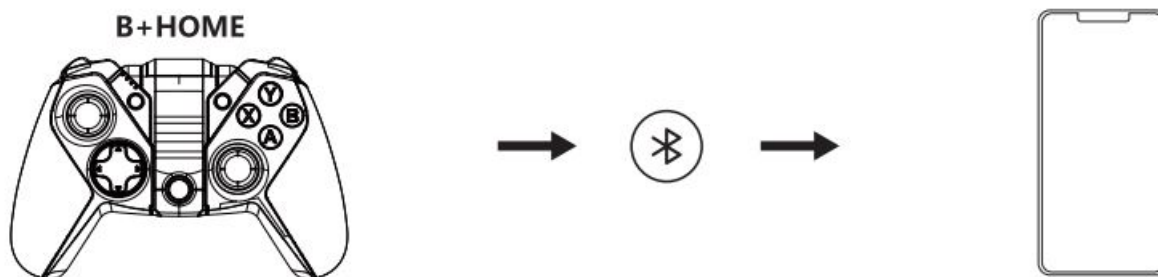

HOME button indicator	Description
Flashes in purple	Connecting
Flashes quickly in purple	Pairing
Stays in purple	Connected

ONLINE TUTORIAL

To learn more about Android controller-supported games, Apple Arcade games, MFi games and how to use GameSir G4 pro, please scan the following QR code or refer to the online advanced user guide.

UPGRADE THE GAMEPAD VIA THE MOBILE APP

The GameSir mobile app can provide firmware upgrading and other functions. Please scan the QR code to download

SWAP ABXY BUTTON POSITIONS

G4 pro adopts the design of a magnetic keycap, which can exchange the key position according to the different platforms, to avoid the wrong operation of the key marks A and actually triggering B

1. There is a reserved groove on the left side of the 'ABXY' buttons, use your index finger to unplug the ABXY keycap from the left groove
2. Put the unplugged 'ABXY' keycap facing upwards, align it with the key position of the corresponding platform, te: and PC install platfoit. No rm: upper Y, left X, lower A, right B; NS platform: up X, left Y, down B, right A; The factory default setting is the PC platform layout



PC platform



NS platform

SCREENSHOT, RECORDING AND KEY COMBINATION

The steps are as follows	Description
Tap the screenshot button or long press the screenshot button	PC, Android, Switch: Tap the screenshot button to take a screenshot, Switch: Long press the screenshot button to record the first 30 seconds of video
S + D-pad up and down	Control PC/Android system volume
S + D-pad left and right	Adjust motor vibration intensity
G + D-pad up and down	Adjust the light intensity of the G4 pro

TURBO FUNCTION

Turbo function	Set up a turbo / cancel a turbo	Editable buttons
Achieve fast attacks in the game	Long press the button that needs to be used to trigger a combo, then press the Turbo button	A,B,X,Y,L1,R1,L2,R2

AUTO SLEEP

When the gamepad is is in not a normal connected, wireless it will auto-connection, sleep it within will auto 120 sleep seconds within without 600 any seconds operation. without any operation.

 
After auto-sleep, long press the HOME button for 2 seconds to wake up and connect the device. A NOTICE Please read these Precautions carefully. This device may not complies cause with harmful part 15 of interference, the FCC and Rules. (2) this Operation device is must subject accept to any following interference two received, conditions: (1) including This Note: interference This equipment may has cause been undesired tested and operation. found to comply with the limits for a Class B digital device, pursuant to part interference 15 of in the a FCC residential Rules. This installation. limits This are designed equipment to generate, provide uses reasonable and can protect radiate radio against frequency harmful energy and, if not communications. installed and used in accordance with the instructions, may cause harmful interference to radio cause However, harmful there is no interference guarantee to radio that or interference television will reception, not occur which in a can be particularly determined installation. by If turning this the equipment does off -Reorient and on, or the relocate user is the encouraged receiving to try antenna. to correct the interference by one or more of the following measures: - Consult -Connect -Increase the the the dealer equipment separation or an into between an experienced outlet the on a radio{TV equipment circuit and technician different receiver. for from help. that to which the receiver is connected.

FCC caution

Labeling requirements. Ttiis device complies wit ti part 15 of tt,e FCC Rules. Operation is subject to the following two This device may not cause harmful interference, and this device must accept any interference received, inducting interference that may cause undesired Op€ration Changes or modifications warming Any Changes or modifications not expressly appro...ed by the party respor5ible for compliance could voKl the user's authority to operate tt,e equipment. formation to the user. Note: This equipment has been tested and four:l to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmfU: interference in a residential installation. This equipment generates uses and can radiate radio frequency and, if mi installed and used in accordance with the instru::tions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occu- in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radionic technician for help.

Documents / Resources



[GAMESIR F2154 G4 Pro Multi-Platform Game Controller](#) [pdf] User Manual
G4PROR, 2AF9S-G4PROR, 2AF9SG4PROR, G4PROT, 2AF9S-G4PROT, 2AF9SG4PROT, F2154 G4 Pro Multi-Platform Game Controller, G4 Pro Multi-Platform Game Controller