

 **GAMESIR**
G7 HE Wired
Controller for
Xbox



GAMESIR G7 HE Wired Controller for Xbox User Guide

[Home](#) » [GameSir](#) » GAMESIR G7 HE Wired Controller for Xbox User Guide 

Contents

- [1 GAMESIR G7 HE Wired Controller for Xbox](#)
- [2 PACKAGE CONTENTS](#)
- [3 DEVICE LAYOUT](#)
- [4 CONNECT](#)
- [5 VOLUME CONTROL](#)
- [6 BACK BUTTONS SETTINGS](#)
- [7 JOYSTICKS & TRIGGERS CALIBRATION](#)
- [8 PROFILE SWITCH](#)
- [9 CUSTOMIZATION VIA “GAMESIR NEXUS” SOFTWARE](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



GAMESIR G7 HE Wired Controller for Xbox



 
PACKAGE CONTENTS

 
- GameSir-G7 HE *1
- 3m USB-C Cable *1
- Thank You & After-sale Service Card *1
- User Manual *1
- GameSir Sticker *1
- Certification *1

REQUIREMENTS

*Xbox One / Xbox Series XIs / PC (Win 10 or above) with USB port

DEVICE LAYOUT

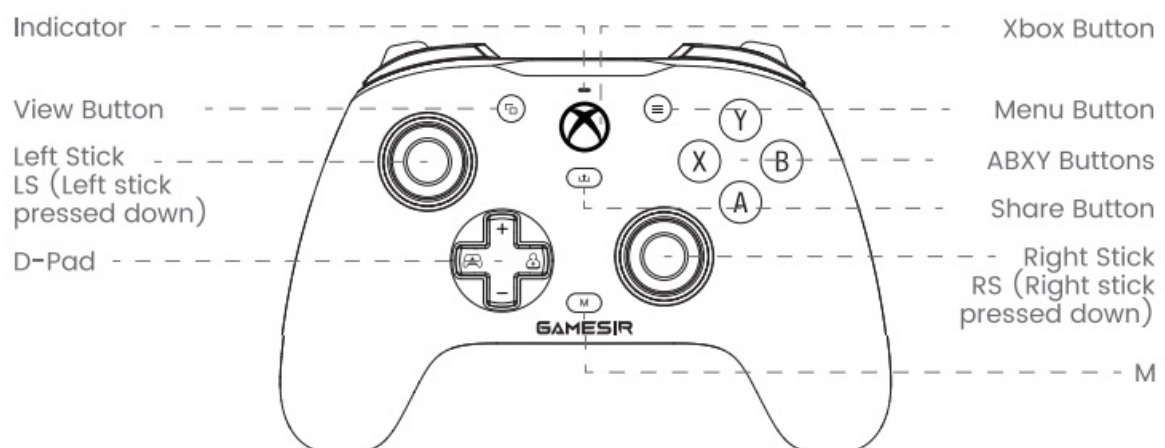


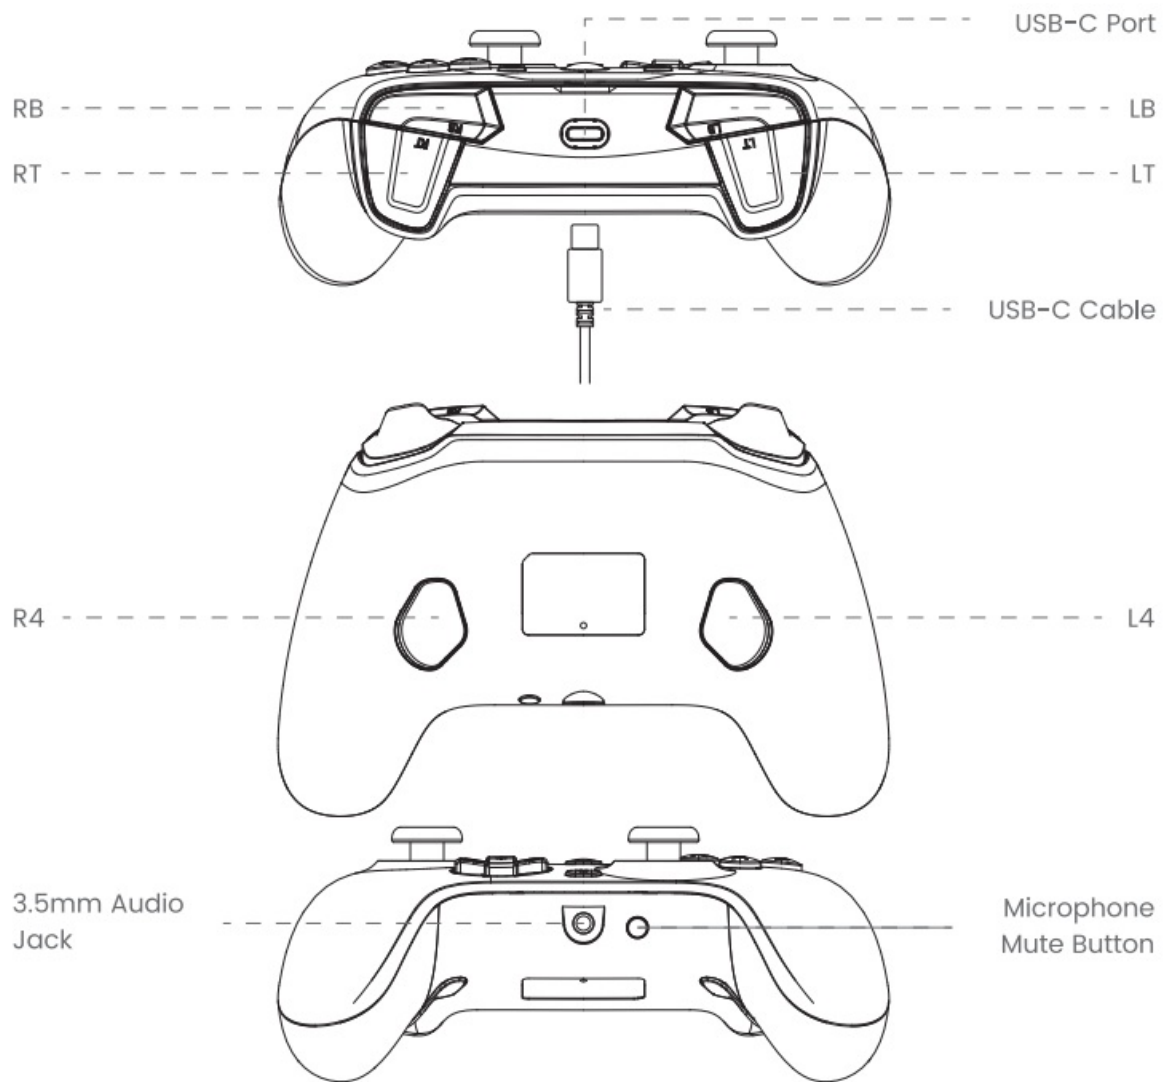

CONNECT


Use the included Type-C cable to connect the handle to the device, and short press the Home button to power on.

 Solid White=Connected

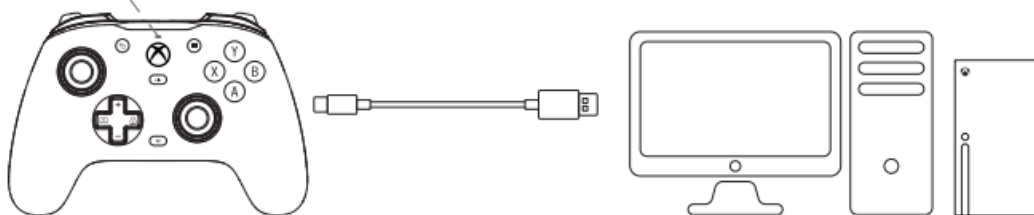


VOLUME CONTROL

 1. Hold the M button +D-pad's Up/Down to Increase/Decrease the Master Volume. (11 levels in total)
There will be a beep when adjusting to the maximum/minimum level.

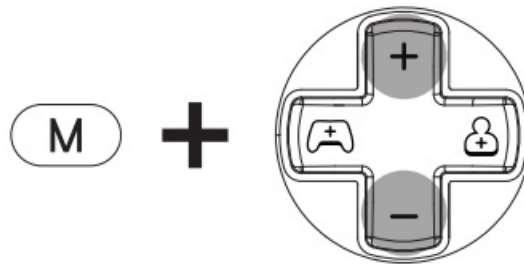

2. Hold the M button +D-pad's Left/ Right to Increase game volume while Decreasing voice chat volume/Decrease game volume while Increasing voice chat volume.

 
There will be a beep when adjusting to the maximum/middle/ minimum level.

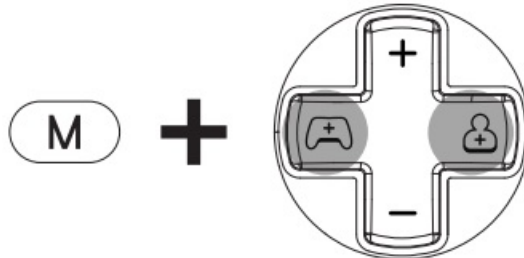

3. Microphone Mute Function: When your headphone/ earphone is plugged in, press the Microphone Mute Button, the indicator will become solid red and the Microphone Mute function is On. Press the Microphone Mute button again, the indicator will go out and the Microphone Mute function is Off (Default).



 BACK BUTTONS SETTINGS

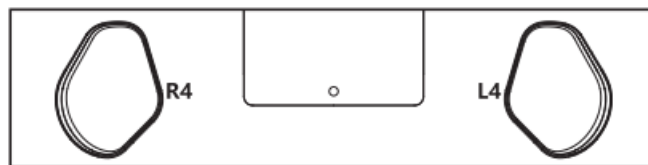



NO PRESET BUTTON VALUES

(Mappable buttons: A/B/x/v/L/RB/LT/RT/Ls/Rs/D-pad/Menu/View Button)

1. Set R4/L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to R4/L4. The indicator turns solid to indicate R4/L4 button value is set.
2. Cancel R4/ L4 button value: Hold the M+R4/L4 buttons simultaneously for 3s. When the indicator blinks slowly, tap R4/L4 button. The indicator turns solid to indicate R4/L4 button value is canceled.

JOYSTICKS & TRIGGERS CALIBRATION

1. Hold the View  + Menu  + Xbox buttons until the USB-C cable is inserted into the PC's USB port. The indicator will slowly blink white.

2. Ensure that LT & RT and the left & right joysticks are not touched. Then Press the A button. The indicator will go out.
3. Press LT & RT to their maximum travel. Rotate the joysticks at their maximum angles for 3 times. Press the A button. The indicator becomes solid white to indicate the calibration is over.
4. After the calibration is over, it's required to unplug and replug the controller before using.

PROFILE SWITCH

Press the M + A/X/Y buttons in sequence to switch to the corresponding profile.

- M + Y = Default
- M + B = Profile 1
- M + A = Profile 2
- M + X = Profile 3

CUSTOMIZATION VIA “GAMESIR NEXUS” SOFTWARE

Download “GameSir Nexus” software at Microsoft Store on Xbox/PC or gamesir.hk Use the “GameSir Nexus” software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc.

*If the R4/ L4 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.

PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT) Applicable in the European Union and other European countries with separate collection systems This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY

C E STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir G7 HE Controller is in compliance with Directive 2014/30/EU & 2011/65/EU and its amendment (EU) 2015/863.

JUST IN GAME.

www.gamesir.hk

 
Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X, Xbox Series S, Xbox Series XIS, Xbox One, Xbox Game Pass, Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.



<https://www.gamesir.hk/pages/ask-for-help>

(CUSTOMER SERVICE)

Documents / Resources

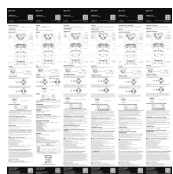

[GAMESIR G7 HE Wired Controller for Xbox](#) [pdf] User Guide

G7 HE Wired Controller for Xbox, G7 HE, Wired Controller for Xbox, Controller for Xbox, Xbox, Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.