



GAMESIR G7 Wired Controller User Manual

[Home](#) » [GameSir](#) » GAMESIR G7 Wired Controller User Manual

GAMESIR G7 Wired Controller User Manual



Contents [[hide](#)]

- [1 PACKAGE CONTENTS](#)
- [2 DEVICE LAYOUT](#)
- [3 VOLUME CONTROL](#)
- [4 BACK BUTTONS SETTINGS](#)
- [5 JOYSTICKS & TRIGGERS CALIBRATION](#)
- [6 CUSTOMIZATION VIA “GAMESIR NEXUS” SOFTWARE](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

 
PACKAGE CONTENTS

- GameSir-G7 *1
- Swappable White Faceplate *1
- 3m USB-C Cable *1
- User Manual *1
- Thank You & After-sale Service Card *1
- GameSir Sticker *1
- Certification *1

REQUIREMENTS


- Xbox One / Xbox Series X|S / PC (Win 10 or above) with USB port

DEVICE LAYOUT

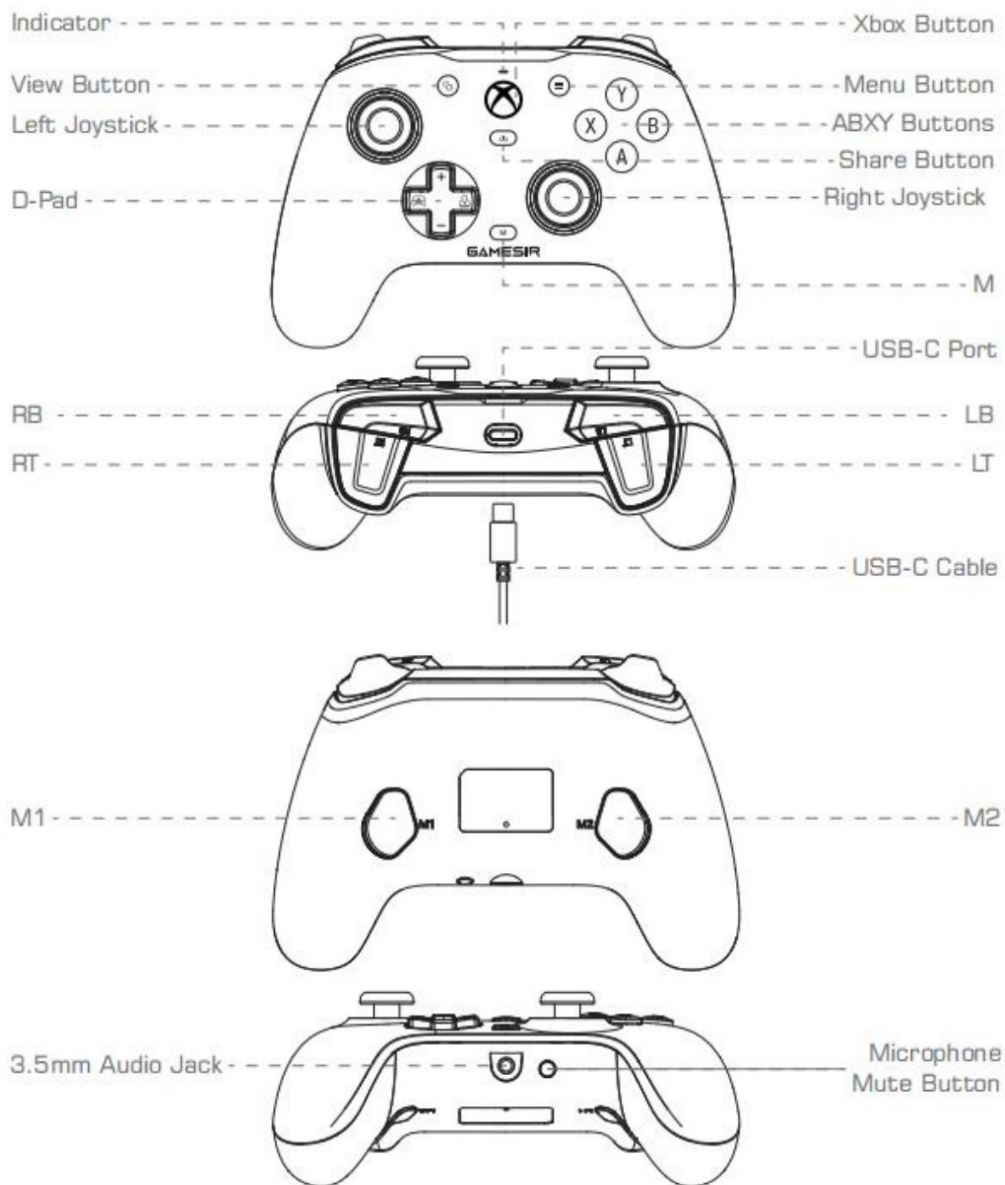


CONNECT

 Solid White=Connected

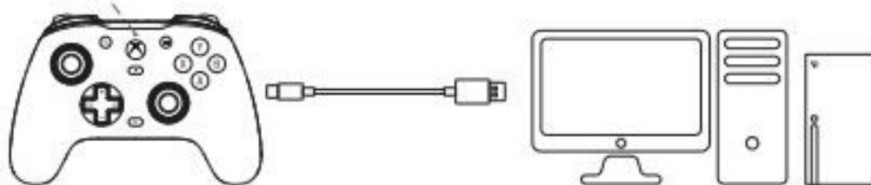


VOLUME CONTROL

 1. Hold the M button+D-pad's Up/Down to Increase/Decrease the Master Volume. (10 levels intotal) *There will be a beep when adjusting to the maximum/minimum level.

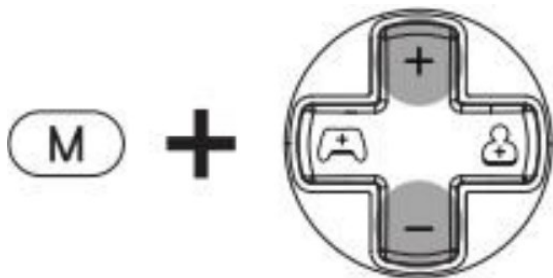


Solid Red=Microphone Mute

 2. Hold the M button+D-pad's Left/Right to Increase game volume while Decreasing voice chat volume/Decrease game volume while Increasing voice chat volume. *There will be a beep when adjusting to the maximum/ middle/ minimum level.

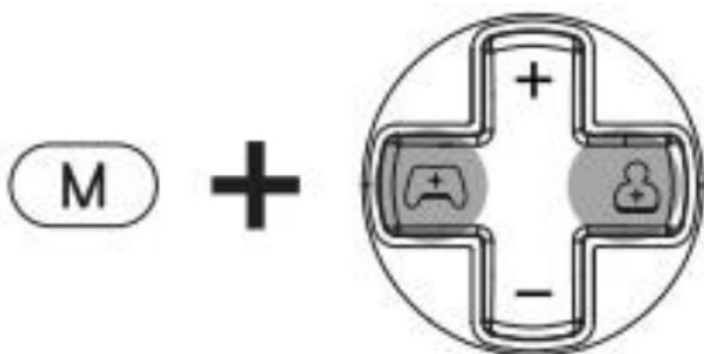

3. Microphone Mute Function: Tap the Microphone Mute button, the indicator will become solidred and the Microphone Mute function is On. Tap again the Microphone Mute button, theindicator will go out and the Microphone Mute function is Off (Default).

 BACK BUTTONS SETTINGS

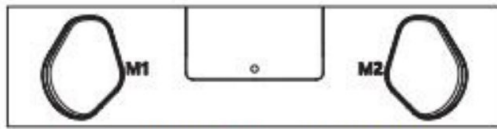



NO PRESET BUTTON VALUES

(Mappable buttons: A/B/X/Y/LB/RB/LT/RT/L3/R3/D-pad/Menu/Xbox/View Button)

1. Set M1/M2 button value: Hold the M+M1/M2 buttons simultaneously for 3s. When the indicator blinks slowly, tap the button you want to map to M1/M2. The indicator turns solid to indicate M1/M2 button value is set.
2. Cancel M1/M2 button value: Hold the M+M1/M2 buttons simultaneously for 3s. When the indicator blinks slowly, tap M1/M2 button. The indicator turns solid to indicate M1/M2 button value is canceled.

JOYSTICKS & TRIGGERS CALIBRATION


1. Hold the View  + Menu  + Xbox buttons until the USB-C cable is inserted into the PC's USB port. The indicator will slowly blink white.
2. Ensure that LT & RT and the left & right joysticks are not touched. Then Press the A button. The indicator will go out.
3. Press LT & RT to their maximum travel. Rotate the joysticks at their maximum angles for 3 times. Press the A button. The indicator becomes solid white to indicate the calibration is over.
4. After the calibration is over, it's required to unplug and replug the controller before using.

CUSTOMIZATION VIA "GAMESIR NEXUS" SOFTWARE

Download "GameSir Nexus" software at Microsoft Store on Xbox/PC or gamesir.hk
Use the "GameSir Nexus" software to upgrade firmware and create 3 custom profiles. The profile includes button mapping, joystick & trigger zones adjustment, vibration level control, etc. *If the M1/M2 button value set in the software is different from the manual setting, the latest setting shall prevail, and the former will be directly overwritten.



Documents / Resources

	<p>GAMESIR G7 Wired Controller [pdf] User Manual G7 Wired Controller, G7, Wired Controller, Controller</p>
---	--

References

-  [GameSir | The Global Leading Game Peripheral Brand – GameSir Official Store](#)