



T3 LITE

WIRED GAME CONTROLLER

Model No.: GameSir-T3 Lite

Scan the code for more tutorials

<https://gamesir.com/pages/support>



<https://gamesir.com/pages/manuals-gamesir-t3-lite>

Contents [[hide](#)]

- [1 T3 Lite Wired Game Controller](#)
- [2 BASIC FUNCTION INTRODUCTION](#)
- [3 ADVANCED TUTORIAL](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

T3 Lite Wired Game Controller

PACKAGE CONTENTS

Controller*1

Manual (QR code)*1

COMPATIBILITY

- Windows 10 or above
- Switch
- Android 8.0 or above
- IOS 13 or above

DEVICE LAYOUT



BASIC FUNCTION INTRODUCTION

BASIC OPERATIONS

Connect	Plug the cable at the top of the controller into the corresponding device. A solid indicator light indicates a successful connection.
---------	--

Standby	The controller will automatically power off if there is no operation while in connection status for 10 minutes.
Wake Up	Press the Home button to wake up the controller.
Check Mode	Press and hold the M button to view the current mode of the controller.


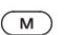



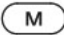






PLATFORM AND MODE

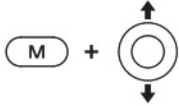
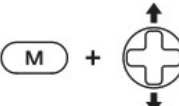
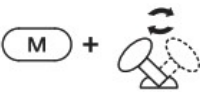
Platform	Mode	Indicator	Switching Method
PC	Xbox	Green	Hold the Home + X buttons for 2 seconds
iOS/PC/Android	DS4	Blue	Hold the Home + B buttons for 2 seconds
Switch	Switch	Red	Hold the Home + Y buttons for 2 seconds
Android	Android	Yellow	Hold the Home + A buttons for 2 seconds

* By default, the mode will be automatically detected. After manually switching the mode, the automatic detection function will be disabled. * Press and hold the Home button for 10 seconds to restore the automatic detection function.

ADVANCED TUTORIAL

Function	Button Combination	Description
----------	--------------------	-------------

Macro Button Setting	 + L4/R4	<p>Press and hold the M button and L4/R4 button simultaneously until the controller vibrates once. The indicator will flash slowly in white. Press the button you want to assign, then press the L4/R4 button again to exit and save.</p> <p>*If exiting the setting process without pressing any button, the assigned value for the L4/R4 button will be cleared.</p>
Toggle Stick Dead Zone	 +  / 	<p>Press and hold the M button and press down on the left/right stick to toggle the corresponding stick dead zone.</p>
Turbo Function	 + Corresponding Button	<p>While holding the M button, press A/8/X/Y/L1/R1/L2/R2 to activate the Turbo function for that button.</p> <p>Repeat this operation to deactivate.</p> <p>If the button with the Turbo function activated is held down, the indicator will flash red quickly.</p> <p>•Double-click the M button to clear all Turbo settings.</p>
Adjust Vibration Intensity	 +  / 	<p>While holding the M button, press View / Menu button to decrease/increase the vibration intensity level.</p>
D-pad and Left Stick Swap	M + D-pad Left  + 	<p>Press and hold the M button and the D-pad left button for 3 seconds to swap the functions of the left stick and the D-pad.</p>
Switch Layout	 + 	<p>Hold and press the M + A buttons to swap the button values of A-B and X-Y.</p>

Lighting Adjustment	M + Left Stick up/down 	Increase/Decrease the brightness level of the lighting. 5 Levels: 0%/25%/50%(default)/75%/100% The setup will still be saved after restart.
	M + D-pad up/down 	Increase/decrease the saturation level. 5 levels in total: 0%(default) /25%/50%/75%/100%. • The setup will still be saved after restart. The saturation is set to 0% (white) by default. Before adjusting the color, please increase the saturation first.
	M + Right Stick Rotation 	The color value can be adjusted based on the position where the right stick is held. • The setup will still be saved after restart.

FACTORY RESET

This controller has no physical reset button. If needed, try unplugging and reconnecting it. For functional reset (in case of any issues): Press and hold [Menu + Home buttons] simultaneously for 5 seconds.

CALIBRATION STICKS & TRIGGERS

Hold the View, Menu and Home buttons until the controller vibrates once to enter the calibration. The indicator will flash slowly in white during entry. Ensure that the triggers and sticks are not being touched. Press the A button once. Then, push both sticks fully to their limits and rotate them 2-3 times. Press each trigger fully down 3 times. Finally, press the A button to exit the calibration. The indicator will return to its normal state.

PLEASE READ THESE PRECAUTIONS CAREFULLY.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention. if swallowed or inhaled.
- DO NOT use the product near fire. DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.

- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light.
- It might damage your eyes. If you have any quality concerns or suggestions, please contact GameSir or your local distributor.



WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

Applicable in the European Union and other European countries with separate collection systems This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

DECLARATION OF CONFORMITY



STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this

GameSir T3 Lite Controller is in compliance with Directive 2014/30/EU & 2011/65/EU and its amendment (EU) 2015/863.

WARNINGS AND SAFETY INFORMATION

All information regarding the use of the products can be found in the attached user manual. Before using the product, please read the manual carefully and follow the manufacturer's recommendations. Also, please review the following safety information and warnings before use:

USAGE WARNINGS

RISK OF DEVICE DAMAGE:

- Controllers should be used exclusively for their intended purpose-video games. Do not use the device for any purpose other than those recommended by the manufacturer.
- If the device comes into contact with liquid, immediately disconnect it and dry it according to the manufacturer's instructions.
- Avoid applying excessive force when pressing buttons or operating the controller to prevent damage to the mechanisms.

RISK TO THE USER:

- During extended use, take regular breaks to avoid fatigue in your hands, wrists, and shoulders.
- Ensure the controller is placed securely to prevent it from slipping or tipping over during use.
- Controllers with force feedback systems may generate sudden movements-always hold them with both hands while playing.

POWER AND CONNECTION RISKS:

- Do not use damaged power cables or USB cables. Always use the original accessories provided by the manufacturer.
- Ensure that USB ports and power sockets are clean and free of debris to ensure a proper connection.
- For wireless devices, regularly charge the batteries or replace them with new ones to

ensure continuous operation.

PROPER USAGE INFORMATION PREPARATION AND SETUP:

- Before first use, install any software or drivers provided by the manufacturer if required.
- Place the controller on a stable surface, such as a desk, to ensure comfort and precision during use.
- Make sure all cables are properly connected and secured to prevent accidental disconnections.

SAFE USAGE:

- Adjust the device settings in games (e.g., sensitivity, vibrations) according to your preferences to ensure comfort and avoid strain on your hands or shoulders.
- Regularly check the condition of buttons, joysticks, and other components to ensure they are functioning properly.
- For controllers with force feedback, ensure the feedback settings are not too strong.

ADDITIONAL PRECAUTIONS:

- Cleaning and Maintenance: Regularly remove dust from the controller using a dry, soft cloth. Avoid using harsh chemicals that may damage the surface of the device.
- Storage: After use, disconnect the controller from the console or PC and store it in a dry, dust-free place.
- Cable Management: For wired controllers, ensure cables are organized to prevent tangling or damage.

COMPLIANCE DECLARATION

Controllers are designed in accordance with the safety requirements outlined in Regulation (EU) 2023/988. They meet the requirements for electromagnetic compatibility (EMC), durability, and user safety. This manual is a translation of the original user manual created by the manufacturer. Detailed information regarding the distributor/manufacturer warranty conditions is available on the website:

www.gamesir.com

The product must be regularly maintained (cleaned) by the user or through specialized service points at the user’s cost and responsibility. If the user manual does not provide information about necessary periodic or service maintenance actions, the physical condition of the product should be assessed regularly (at least once a week) to detect any deviation from the condition of a new product. If any deviation is detected or identified, immediate maintenance (cleaning) or servicing actions should be taken. Failure to perform proper maintenance (cleaning) and respond to identified issues may result in permanent damage to the product. The warranty provider is not responsible for damages resulting from neglect. EU Company: ENIF PEGASUS S.R.L


Address: Str. RADOVANU, № 7, Bloc 42, Scara I, Etaj 5, Apartament 29, 22882Bucuresti Sectorul 2, Romaia Manufacturer: Guangzhou Chicken Run Network Technology Co., Ltd. Address: Room 1001&1003, No. 19, Yard 2, Yuancun West Street, Tianhe District, Guangzhou, China GameSir and the GameSir logo are registered trademarks of Guangzhou Chicken Run Network Technology Co. Ltd. All other trademarks are the property of their respective owners.

Just in Game



<https://gamesir.com/pages/we-are-gamesir-global>

Documents / Resources

	<p>GAMESIR T3 Lite Wired Game Controller [pdf] Instruction Manual</p> <p>T3 Lite Wired Game Controller, T3, Lite Wired Game Controller, Wired Game Controller, Game Controller</p>
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.