



GAMESIR T4 Pro Multi-Platform Wireless Game Controller for Windows User Manual

[Home](#) » [GameSir](#) » GAMESIR T4 Pro Multi-Platform Wireless Game Controller for Windows User Manual 📄

GAMESIR T4 Pro Multi-Platform Wireless Game Controller for Windows



 
Contents

- 1 SYSTEM REQUIREMENTS
- 2 DEVICE LAYOUT
- 3 HOW TO USE THE PHONE HOLDER
- 4 HOW TO CHARGE THE GAMEPAD
- 5 BATTERY STATUS
- 6 HOW TO CONNECT TO A COMPUTER OR ANDROID TV BOX VIA USB RECEIVER
- 7 HOW TO CONNECT TO PC VIA A USB CABLE
- 8 HOW TO CONNECT TO SWITCH OR SWITCH LITE VIA BLUETOOTH
- 9 HOW TO CONNECT TO MOBILE PHONE VIA BLUETOOTH
- 10 BACK BUTTONS FUNCTION
 - 10.1 BACK BUTTONS LAYOUT
 - 10.2 OTHER FUNCTIONS
 - 10.3 TURBO COMBO FUNCTION
- 11 NOTICE PLEASE READ THIS PRECAUTIONS CAREFULLY.
- 12 Documents / Resources
- 13 Related Posts

SYSTEM REQUIREMENTS


- Android 8.0 or above
- iOS 13 or above
- Windows 7/10 or above

DEVICE LAYOUT

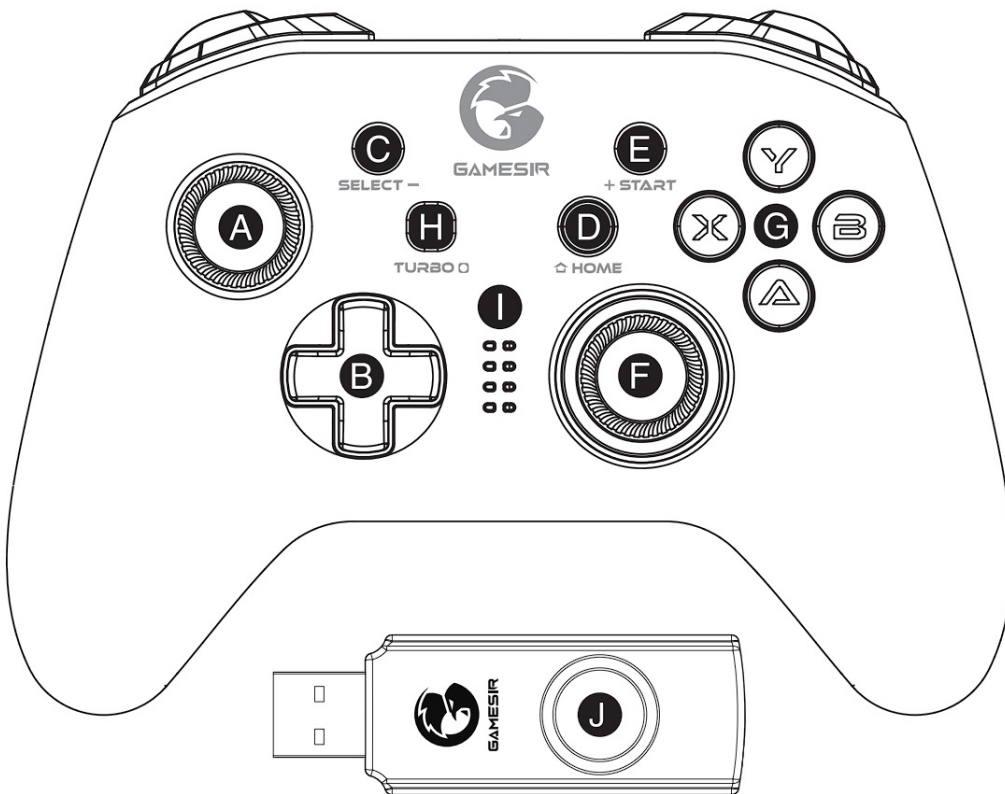

- A. Left Joystick
- B. D-Pad
- C. SELECT Button

 - D. HOME Button
- E. START Button
- F. Right Joystick
- G. ABXY Button
- H. TURBO Button
- I. Indicator

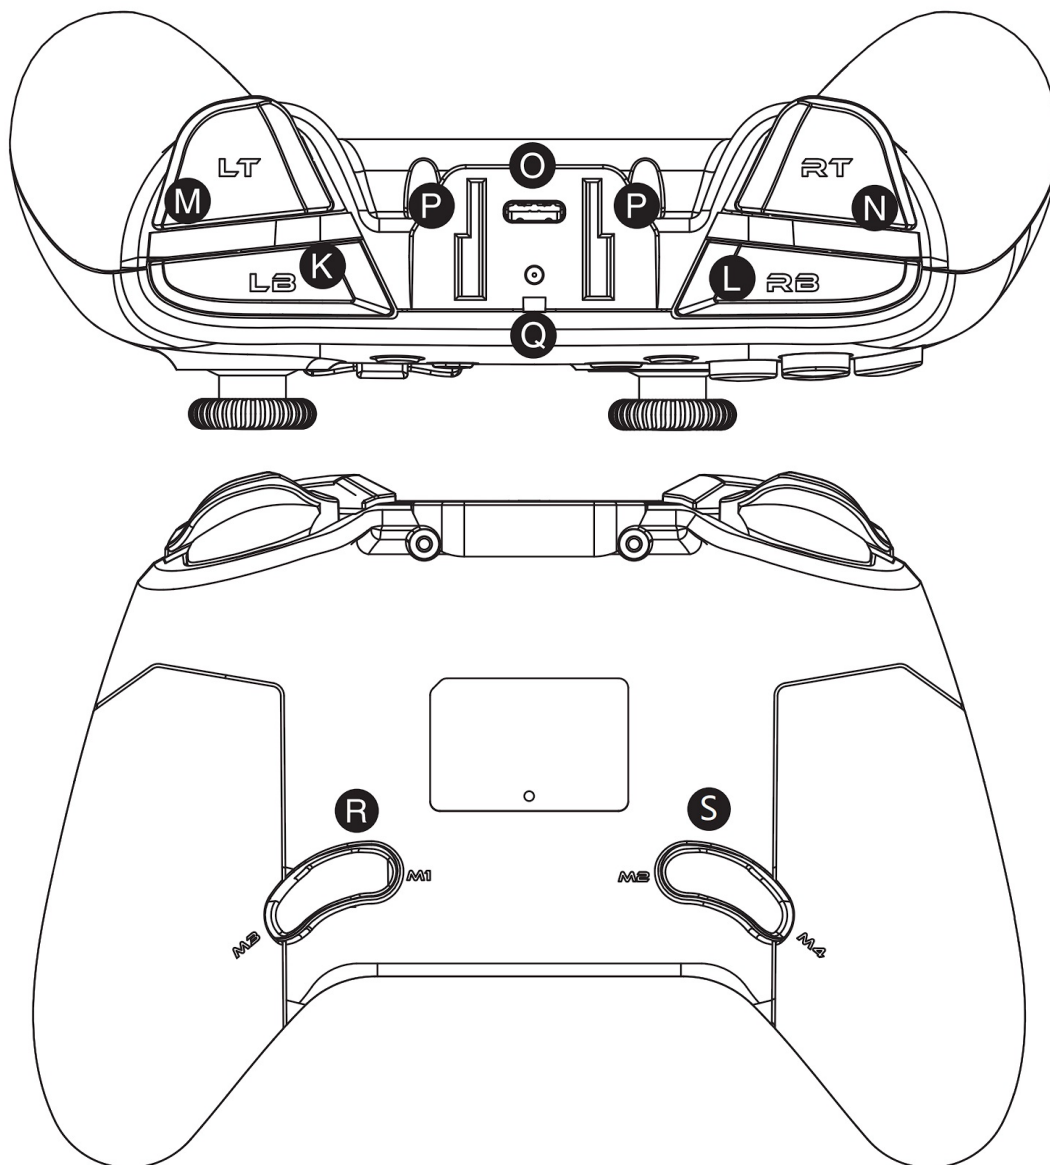

- J. USB Receiver
- K. LT Button
- L. Phone Holder Base
- M. M2 M4 Button
- N. LB Button
- O. RT Button
- P. Charging Indicator
- Q. RB Button
- R. Type-C Connector
- S. M1 M3 Button

 
Power On: Press and hold the HOME button for 2 seconds to power on. Power Off: Press and hold the HOME button for 5 seconds to power off. Pairing Mode: According to the gamepad mode you want to apply, select a button-combination to power on to enter the corresponding mode, which is to enter the pairing mode.

Reconnect: The game controller will remember the last pairing record.

The next time you turn on, you don't need the button-combination. Just press and hold the HOME button and power on will automatically reconnect to the last paired device.

HOW TO USE THE PHONE HOLDER


Please insert the phone holder from the top of the gamepad.

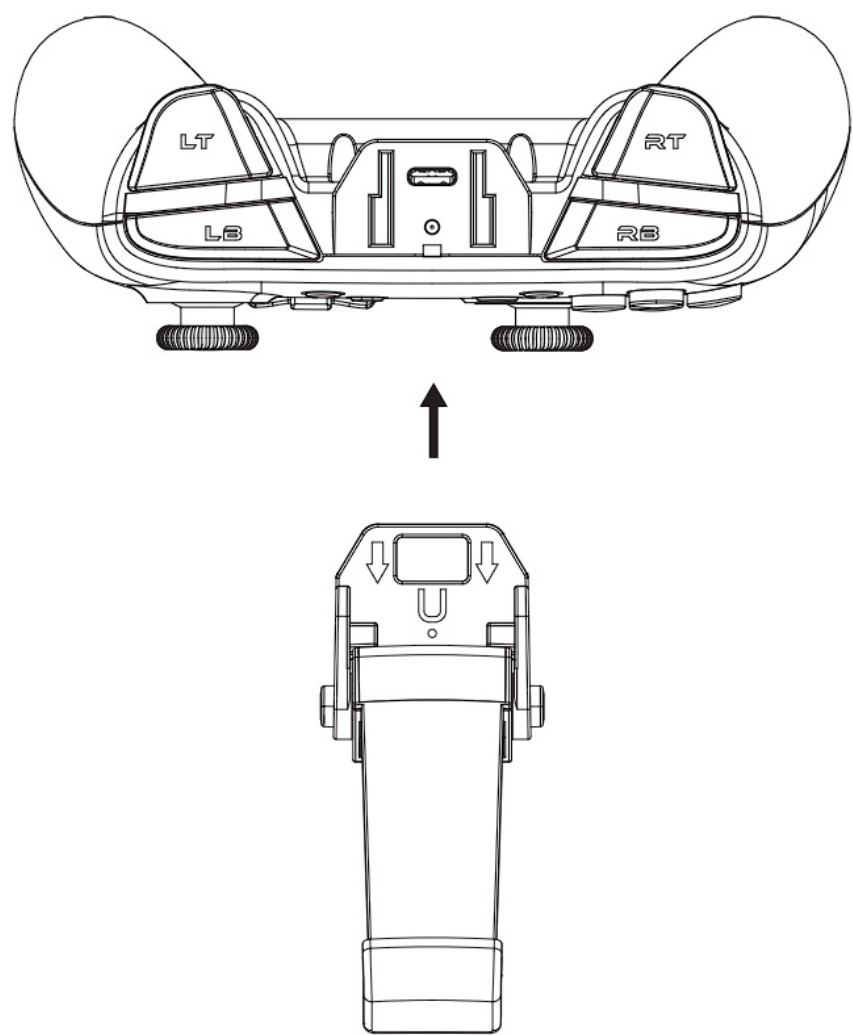


HOW TO CHARGE THE GAMEPAD

Use a charging cable to connect the Type-C interface on the top of the gamepad to the USB charging port

BATTERY STATUS

When the battery is below 15%, the current Charging Indicator  will flash in RED quickly

Charging indicator	Description
Red light stays on	Charging
Red light goes off	Fully charged

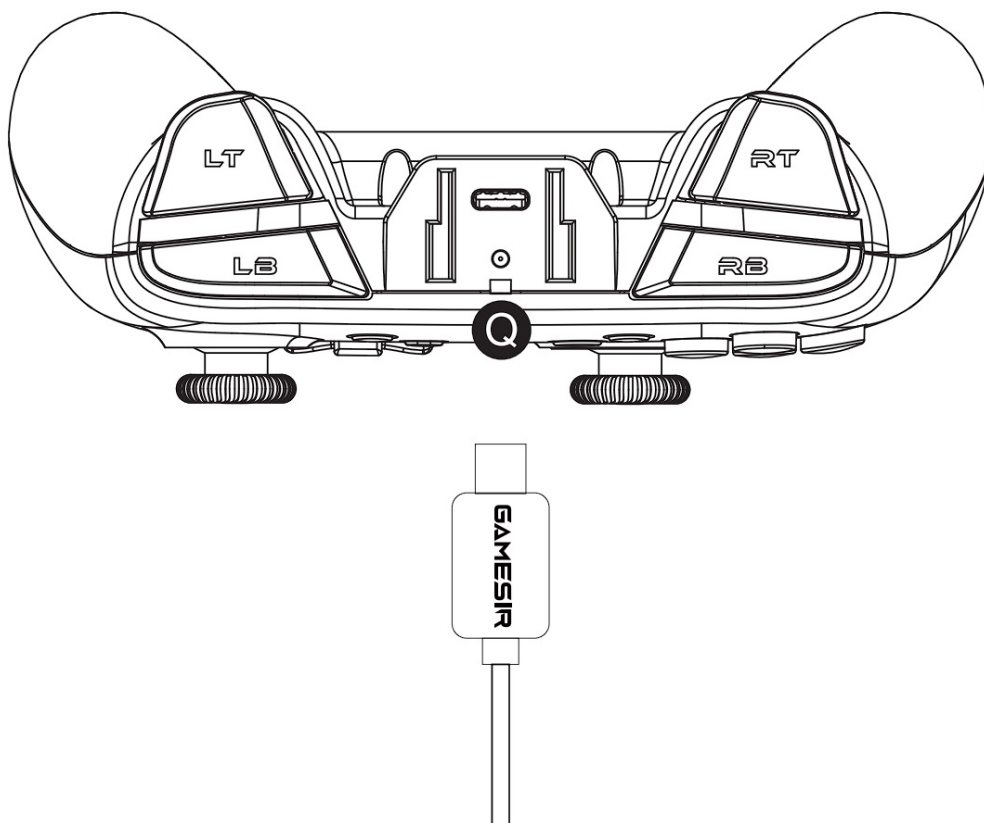 


HOW TO CONNECT TO A COMPUTER OR ANDROID TV BOX VIA USB RECEIVER

1. Plug the USB receiver into the USB port of your computer or Android TV box.
2. Press the X + HOME button until the gamepad is turned on.
3. The next time you connect to the computer, just press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.


HOME button indicator	Description
	Mode indicator
Slow Blinking Blue	Connecting
Fast Blinking Blue	Pairing
Solid Blue	Connected

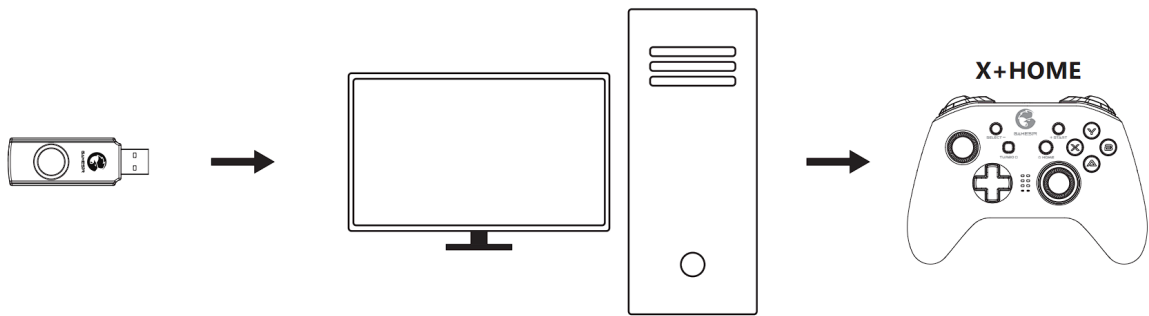 

HOW TO CONNECT TO PC VIA A USB CABLE

Plug the USB cable to the USB port of your computer


HOME button indicator	Description
	Mode indicator

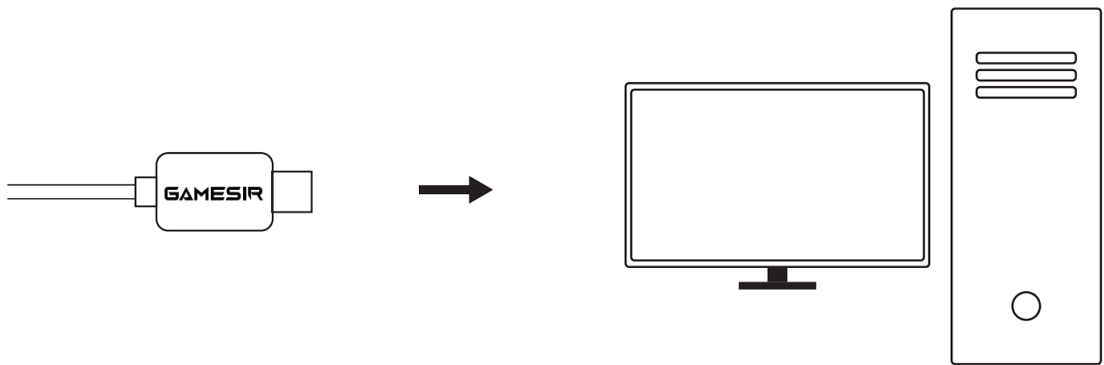 


HOW TO CONNECT TO SWITCH OR SWITCH LITE VIA BLUETOOTH


1. Go to the main interface of the Switch, and click: Controllers—Change Grip/Order to and enter the pairing interface.
2. Press the Y + HOME button until the gamepad is turned on.
3. Gamepad will automatically pair with Switch or Switch Lite.
4. The next time you connect to Switch or Switch Lite, as long as you press the HOME button to power on, the gamepad will automatically connect.

 NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

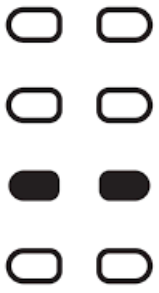HOME button indicator	Description
	Mode indicator
Slow Blinking Blue	Connecting
Fast Blinking Blue	Pairing
Solid Blue	Connected

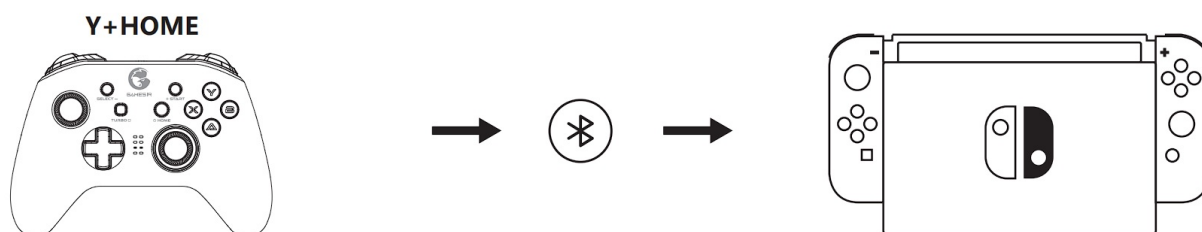 

 In Switch or Switch Lite mode, the key values of the A button & B button, and X button & Y button of the gamepad will be swapped.

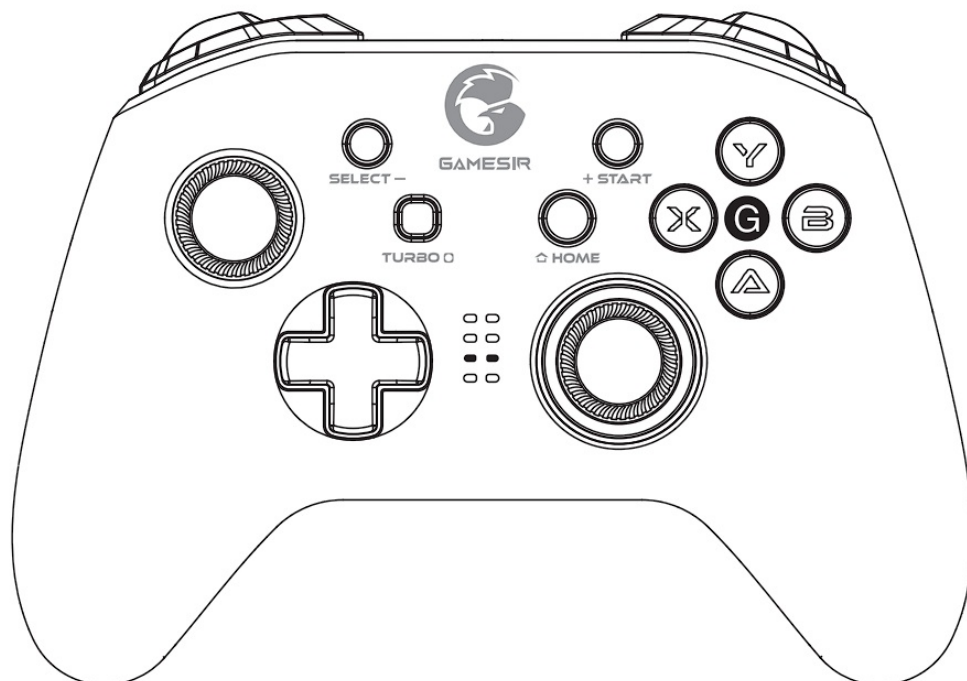


HOW TO CONNECT TO MOBILE PHONE VIA BLUETOOTH


PLAY ANDROID CONTROLLER-SUPPORTED GAMES

Refers to mobile games that support using a gamepad

1. Press the A + HOME button until the gamepad is turned on.
2. Turn on the phone's Bluetooth, search for GameSir-T4 pro gamepad, click and pair.
3. The next time you connect, as long as you press the HOME button to power on, the gamepad will automatically connect.

NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

HOME button indicator	Description
	Mode indicator
Slow Blinking Blue	Connecting
Fast Blinking Blue	Pairing
Solid Blue	Connected

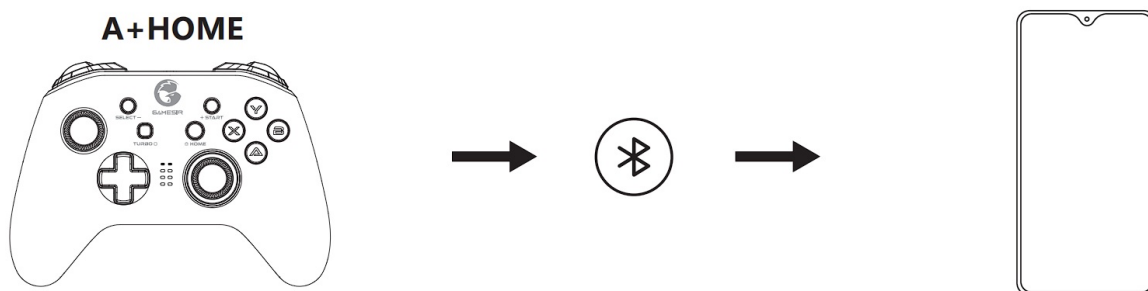 


PLAY APPLE ARCADE AND MFI GAMES

Refers to mobile games that support using a gamepad

1. Press the B + HOME button until the gamepad is turned on.
2. Turn on the phone's Bluetooth, search for Xbox Wireless Controller gamepad, click and pair.
3. The next time you connect, as long as you press the HOME button to power on, the gamepad will automatically connect.

 NOTE: If the gamepad has been switched to another mode, you need to use the key combination to restart.

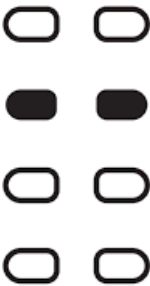HOME button indicator	Description
	Mode indicator
Slow Blinking Blue	Connecting
Fast Blinking Blue	Pairing
Solid Blue	Connected



 
To learn more about Android controller-supported games, Apple Arcade games, MFi games and how to use GameSir T4 pro, please scan the following QR code or refer to theonline advanced user guide.



doc.xiaoji.com

BACK BUTTONS FUNCTION

BACK BUTTONS LAYOUT

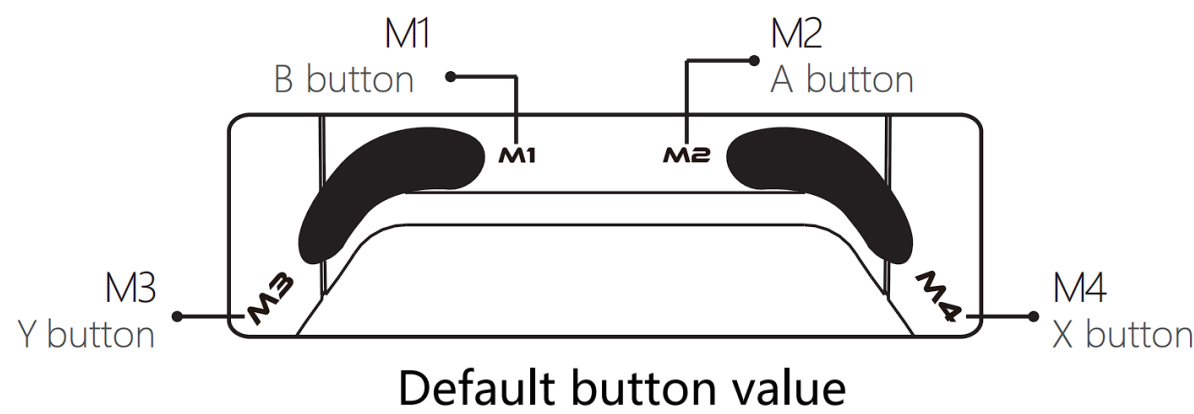

OTHER FUNCTIONS

Keybinds	Description
TURBO + D-Pad's Up & Down	Adjust the intensity of motor vibration (5 levels)
Hold LT, RT, R3 + D-Pad's Up & Down	Adjust the brightness of the backlight (5 levels, default: 1 level, the brightest)
Hold LB + RB for 5 Seconds	Open / Close backlight

TURBO COMBO FUNCTION

Combo Function	Set/Delete Combo	Light Indication	Programmable Buttons
	Press and hold	The backlight of the right	
Achieve fast attacks in the game	the button that needs a combo set, then press the TURBO button	joystick flashes red, meaning the set is done. After deleting the combo, the backlight of the right joystick becomes blue again.	A,B,X,Y,LB,RB,LT,RT

BACK BUTTONS PROGRAMMING
SINGLE BUTTON OR MULTIPLE BUTTONS CAN BE SET

Turbo mode	How to start	Description	Indicator tips
Triggered at the same time	Any M button + SELECT	<p>E.g:</p> <ol style="list-style-type: none"> 1. M1 + SELECT enters the Same Time Trigger programming mode 2. Press and hold the button you want to program 3. Press and hold the LB and R3 4. Press M1 again to confirm 5. Press M1 to enable the LB and R3 to be triggered simultaneously. 	<p>The backlight of the right joystick stays blue and red, meaning the programming mode is entered.</p> <p>The backlight of the right joystick stays blue, meaning the programming is completed.</p>
Triggered in sequence	Any M button + START	<p>E.g:</p> <ol style="list-style-type: none"> 1. M1 + START enters the Sequential Trigger programming mode, 2. Press and hold the button you want to program 3. Press and hold the LB first and then Press and hold the R3 4. Press M1 again to confirm 5. Press M1 to enable LB and R3 to be triggered in sequence. 	<p>The backlight of the right joystick stays blue and red, meaning the programming mode is entered.</p> <p>The backlight of the right joystick stays blue, meaning the programming is completed.</p>



NOTICE PLEASE READ THIS PRECAUTIONS CAREFULLY.

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage

when used for non-original purposes.

- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

Nintendo Switch™ is a registered trademark of Nintendo Inc. All rights reserved. All other trademarks are property of their respective owners. Photos and illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another. This product is not distributed under official license form or approved, sponsored or endorsed by Nintendo Inc. This product is not manufactured for Nintendo Inc.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Documents / Resources

	GAMESIR T4 Pro Multi-Platform Wireless Game Controller for Windows [pdf] User Manual T4 Pro, Multi-Platform Wireless Game Controller for Windows, Multi-Platform Wireless Game C ontroller, Wireless Game Controller, T4 Pro, Game Controller, Controller
--	---