**GAMESIR X2s Bluetooth Wireless Mobile Controller** 





# **GAMESIR X2s Bluetooth Wireless Mobile Controller User Manual**

Home » GameSir » GAMESIR X2s Bluetooth Wireless Mobile Controller User Manual



#### Contents

- 1 GAMESIR X2s Bluetooth Wireless Mobile Controller
- **2 PACKAGE CONTENTS**
- **3 REQUIREMENTS**
- **4 DEVICE LAYOUT**
- **5 CONNECTION STATUS**
- **6 INDICATOR STATUS**
- **7 POWER ON**
- **8 CONNECT TO ANDROID THROUGH BLUETOOTH**
- 9 CONNECT TO IOS THROUGH BLUETOOTH
- 10 POWER OFF
- 11 BUTTON COMBINATION
- 12 STICKS & TRIGGERS CALIBRATION
- 13 CUSTOMIZATION VIA "GAMESIR" APP
- 14 PRECAUTIONS
- 15 WASTE ELECTRICAL & ELECTRICAL EQUIPMENT

**INFORMATION** 

- **16 DECLARATION OF CONFORMITY** 
  - **16.1 FCC STATEMENT**
- 17 Documents / Resources
  - 17.1 References



**GAMESIR X2s Bluetooth Wireless Mobile Controller** 



## E-manual

https://www.gamesir.hk/pages/manuals-gamesir-x2s-bluetooth.




# **PACKAGE CONTENTS**

- GameSir-X2s Bluetooth \*1
- Type-C cable \*1
- Manual \*1
- Thank You & After-sale Service Card \*1
- Certification \*1

# **REQUIREMENTS**

- Android 8.0 or above
- iOS 13 or above

# **DEVICE LAYOUT**

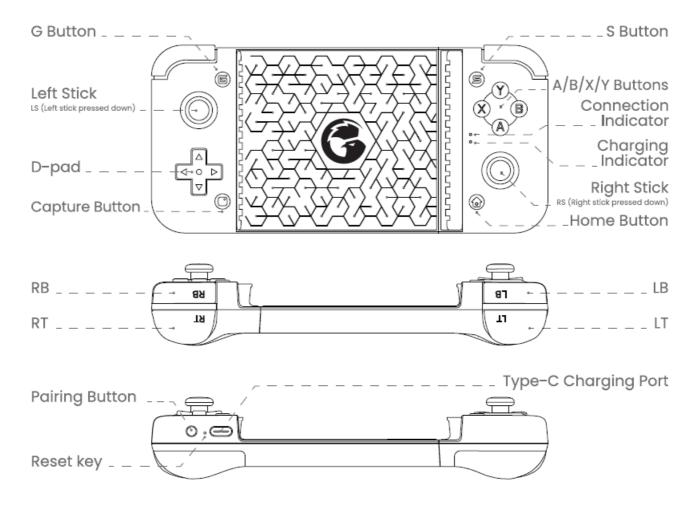

# **CONNECTION STATUS**

Connection Indicator	Description
Blink Slowly	Reconnection Status.  *When in reconnection status, the X2s-Bluetooth can only be connected to the last paired device on the last mode.  *Press and hold the Pairing Button for 2 seconds to forcibly switch to pairing mode.
Blink Rapidly	Pairing Status.  *When in pairing status, the X2s-Bluetooth can only be paired with a device through the Bluetooth function.
Solid	Connected.

# **INDICATOR STATUS**


Color	Mode	Connection Method	System
Yellow	HID	Pairing Button + (A)	Android 8.0 or above version
Navy Blue	DS4	Pairing Button + 📵	Android/iOS/PC
Light Blue	G-Touch	Pairing Button+ 💢	

## **POWER ON**

Power-on Method	Description
Pairing Button	Press and hold the Pairing Button for 2 seconds. X2s-Bluetooth will automatically pair with Bluetooth upon powering on. *This operation allow X2s-Bluetooth to unlink from the paired device and connect to a new one.
Home Button / Capture Button	Hold the buttons for 0.5 second to reconnect to the last pairing mode.  *The first boot is the default HID mode.
Pairing + A / B / X buttons	Press different combo keys to enter the corresponding reconnection mode. Combo A: HID mode. Combo B: DS4 mode. Combo X: G-TOUCH mode.

## **CONNECT TO ANDROID THROUGH BLUETOOTH**


- 1. With the controller powered off, press the Pairing + buttons to turn it on, and the connection indicator will flash rapidly.
- 2. Open the Bluetooth list on your phone, select the device: GameSir-X2s Bluetooth, and click to connect.
- 3. A solid Yellow connection indicator signifies a successful connection.
  - For subsequent use, simply press the button to power on, and the phone will automatically reconnect in reconnection status.
  - If the controller was not connected using the Pairing + buttons last time, it needs to be powered on again using the button combination.

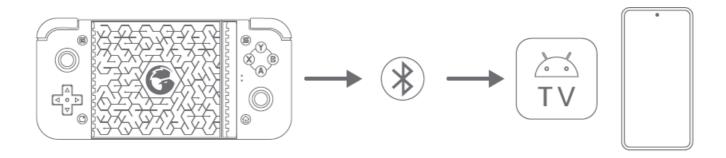

## PLAY MAPPING GAMES ON ANDROID VIA BLUETOOTH CONNECTION IN G-TOUCH MODE


- 1. With the controller powered off, press the Pairing + buttons to turn it on, and the connection indicator will flash rapidly.
- 2. Open the Bluetooth list on your phone, select the device: GameSir-X2s\_G, and click to connect.
- 3. A solid Light Blue connection indicator signifies a successful connection.
  - For subsequent use, simply press the button to power on, and the phone will automatically reconnect in reconnection status.

• If the controller was not connected using the Pairing + buttons last time, it needs to be powered on again using the button combination.

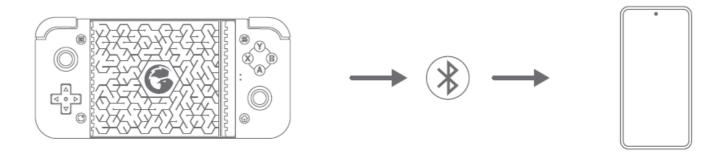

## **CONNECT TO IOS THROUGH BLUETOOTH**

- 1. With the controller powered off, press the Pairing + buttons to turn it on, and the connection indicator will flash rapidly.
- 2. Open the Bluetooth list on your phone, select the device: DUALSHOCK 4 Wireless Controller, and click to connect.
- 3. A solid Navy Blue indicator signifies a successful connection.
  - For subsequent use, simply press the button to power on, and the phone will automatically reconnect in reconnection status.
  - If the controller was not connected using the Pairing + buttons last time, it needs to be powered on again using the button combination.

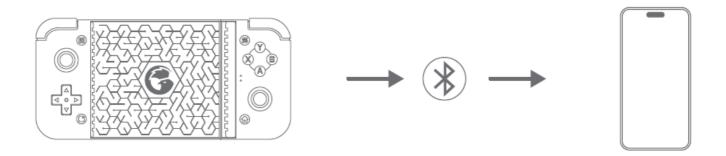

## **POWER OFF**

- 1. Press and hold the Home Button for 5 seconds to power off the controller.
- 2. If there is no activity for 10 minutes while the controller is powered on, it will automatically power off.

### **BUTTON COMBINATION**

Button Combination	Description
Press and hold Capture + LT/RT buttons for 2s	Enable/Disable Hair Trigger.  *The setting will still be saved after restart.  *After enabling the hair trigger mode, when pressing the trigger, the connection indicator will stay solid white.
Press and hold Capture + A buttons for 2s	Interchange A=B, X=Y key value. *The setting will still be saved after restart.
Press and hold Capture + any other button + Button	Hold the Capture Button without releasing, then press the button that needs a Turbo setting.  *When activation is successful, the connection indicator flashes red twice.  *Configurable buttons: A/B/X/Y/LB/RB/LT/RT.  *Clear Turbo function: Hold the Capture Button without releasing, then press the button that has a Turbo setting.  *The setting will still be saved after restart.
Press and hold Capture + Home buttons for 2s	Simultaneously clear the Turbo function for all keys after the connection indicator flashes green twice rapidly.  *The setting will still be saved after restart.
Press Home + D-pad's Up/Down  + +	Increase/Decrease volume. *Under the DS4 mode, volume is not adjustable. *Under the G-TOUCH mode, volume is not adjustable.
Press and hold Home + S buttons for 3s +	Clear all function settings.
Press and hold Pairing + A / B / X buttons for 2s  + A / B / X	Mode switch. Combo A: HID mode. Combo B: DS4 mode. Combo X: G-TOUCH mode.

### STICKS & TRIGGERS CALIBRATION

- 1. Connect your phone to the controller. Hold the buttons for 3s until the connection indicator and charging indicator blink rapidly indicating that the calibration mode is entered.
- 2. In calibration mode, follow the below steps to complete calibration:
  - Rotate the sticks at their maximum angles 3 times and let them return to the initial position naturally.
  - Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
- 3. Press the Button to complete and exit the calibration mode.
  - Calibration should be kept at a constant speed and gently operated to avoid errors while collecting data.
  - If the sticks and triggers can be used normally, please do not calibrate.

## **CUSTOMIZATION VIA "GAMESIR" APP**

Download the GameSir App at gamesir.hk on your phone or scan the QR code on the right. Use the GameSir App for firmware upgrades, button testing, sticks & triggers zone adjustment, etc.



#### **PRECAUTIONS**

#### PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch the USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- · Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are not responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

## **WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION**

## CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

Applicable in the European Union and other European countries with separate collection systems. This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally sate recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

#### **DECLARATION OF CONFORMITY**

#### **FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance between 20cm the radiator and your body Use only the supplied antenna.

#### **Just in Game**

### **CUSTOMER SERVICE**

www.gamesir.hk/pages/ask-for-help.



#### **Documents / Resources**



# References

# • User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.