

GAMESIR X2s Type Gamepad Mobile Game Controller



GAMESIR X2s Type Gamepad Mobile Game Controller Instruction Manual

[Home](#) » [GameSir](#) » GAMESIR X2s Type Gamepad Mobile Game Controller Instruction Manual 

Contents

- 1 GAMESIR X2s Type Gamepad Mobile Game Controller
- 2 PACKAGE CONTENTS
- 3 DEVICE LAYOUT
- 4 CONNECT AND POWER ON
- 5 STANDBY AND WAKE UP
- 6 BUTTON COMBINATIONS
- 7 STICKS & TRIGGERS CALIBRATION
- 8 PRECAUTIONS
- 9 FCC STATEMENT
- 10 Documents / Resources
 - 10.1 References



GAMESIR X2s Type Gamepad Mobile Game Controller




PACKAGE CONTENTS

- GameSir-X2s Type-C *1
- Convex Silicone Thumb Stick Cap *2
- Concave Silicone Thumb Stick Cap *2
- User Manual *1
- Thank You & After-sale Service Card *1
- Certification *1

REQUIREMENTS

- Android 8.0 or above
- Type-c connection

DEVICE LAYOUT

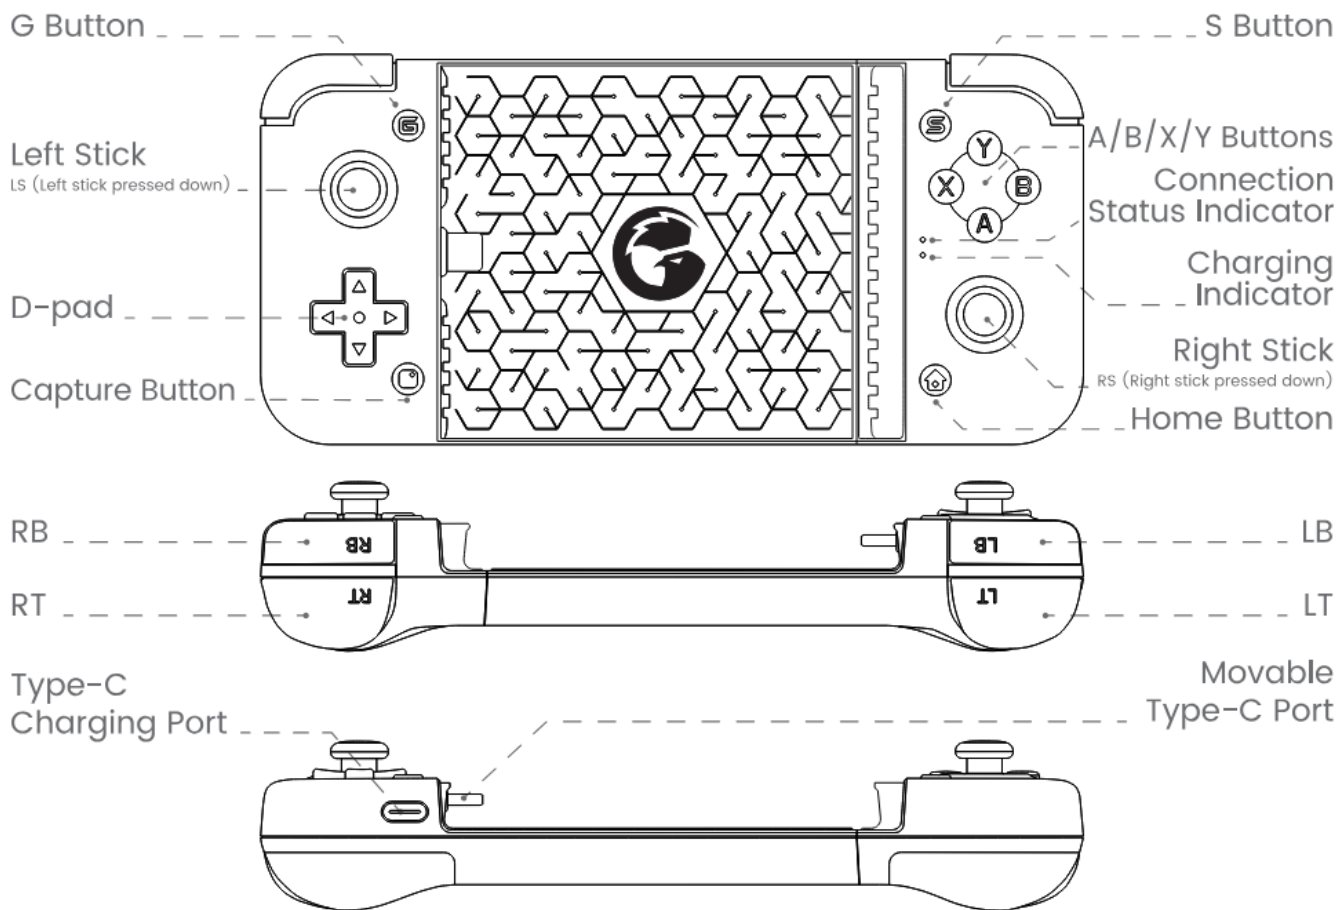

CONNECT AND POWER ON

Follow these steps to connect your phone to the controller.

1	Connect your phone to the controller using the provided Type-C port.	
2	Extend the controller and place your phone into it.	
3	Release the controller to complete the connection.	













- The connection status indicator will be solid white to indicate a successful connection.
- Some Android phones may need to be enabled OTG to power on and use the controller.

STANDBY AND WAKE UP

1. When the controller is turned on with 10 minutes of inactivity, the controller will enter standby mode.

- When the controller is in standby mode, press A/B/X/Y/Home button to wake up the controller.

BUTTON COMBINATIONS

Button Combinations	Instructions
Hold the capture + LT/RT buttons for 2s  +  / 	Enable/Disable hair trigger. *The setup will still be saved after restart.
Capture button + Button  + Button	Hold the Capture button without releasing, then press the button that needs a Turbo setup. *Configurable buttons: A/B/X/Y/LB/RB/LT/RT. *Clear Turbo function: Hold the Capture button without releasing, then press the button that had a Turbo setup. *The setup will still be saved after restart.
Hold the capture + Home buttons for 2s  + 	Clear all Turbo function.
Hold the capture + A buttons for 2s  + 	Interchange A-B, X-Y. *The setup will still be saved after restart.
Home + D-pad's Up/Down  + 	Increase/Decrease volume. *The DS5 mode does not support volume adjustment.
Hold the G + S buttons for 2s  + 	Switch modes. *White for DS5 mode. *Blue for HID mode. *Cyan for G-Touch mode. *To switch to G-Touch mode, use the GameSir App. *The setup will still be saved after restart.

STICKS & TRIGGERS CALIBRATION

- Connect your phone to the controller. Hold the G+S+Home buttons for 3s until the Connection Status indicator and Charging Indicator blink rapidly to indicate calibration mode is entered.
- In calibration mode, follow below steps to complete calibration:
 - Rotate the sticks at their maximum angles 3 times and let them return to the initial position naturally.
 - Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
- Press the A button to complete and exit the calibration mode.
 - Calibration should be kept at a constant speed and gently operated to avoid errors in the collected data.
 - If the sticks and triggers can be used normally, please do not calibrate.

CUSTOMIZATION VIA "GAMESIR APP"



- Download GameSir App at gamesir.k on phone or scan the QR code here. Use GameSir App for firmware upgrade, button testing, sticks & triggers zones adjustment, etc.

PRECAUTIONS

PLEASE READ THIS PRECAUTIONS CAREFULLY

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3. Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose. We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact GameSir or your local distributor.

WASTE ELECTRICAL & ELECTRICAL EQUIPMENT INFORMATION

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRICAL EQUIPMENT)

Applicable in the European Union and other European countries with separate collection systems.



■ This mark on the product or accompanying documents means that it should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to designated collection points where it will be accepted free of charge. Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier for further information. If you do so, you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling, thereby preventing negative potential effects on the environment and human health.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio tv technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance between 20cm the radiator your body Use only the supplied antenna.

STATEMENT OF COMPLIANCE WITH EU DIRECTIVE

Hereby, Guangzhou Chicken Run Network Technology Co., Ltd. declares that this GameSir X2s Type-C Controller is in compliance with Directive 2014/30/EU & 2011/65/EU and its amendment (EU) 2015/863.

Just in Game

- CUSTOMER SERVICE: www.gamesir.hk/pages/ask-for-help



E-manual

- <https://www.gamesir.hk/pages/manuals-gamesir-x2s>



Documents / Resources



[GAMESIR X2s Type Gamepad Mobile Game Controller](#) [pdf] Instruction Manual
X2s Type Gamepad Mobile Game Controller, Type Gamepad Mobile Game Controller, Gamepad Mobile Game Controller, Mobile Game Controller, Game Controller, Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.