


# **Gamo2 EZTOLLER 5 Arcade Style Controller User Manual**

Home » Gamo2 » Gamo2 EZTOLLER 5 Arcade Style Controller User Manual

# **Gamo2 EZTOLLER 5 Arcade Style Controller**

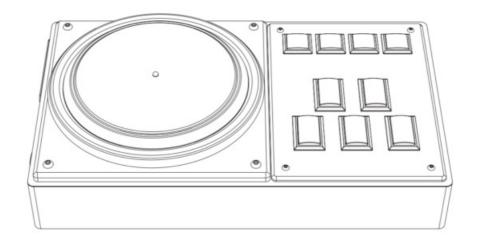


## **Contents**

- 1 Thank you
- **2 Product Overview**
- 3 Mode Switching
- **4 Connection**
- 5 Modes and key values
- 6 Warranty period: 180 days from delivery date
- 7 Customer Support
- 8 Documents / Resources
  - 8.1 References

# Thank you

Thank you for purchasing **EZTOLLER** 5. Please read the instructions before using the controller.

## **Product Overview**

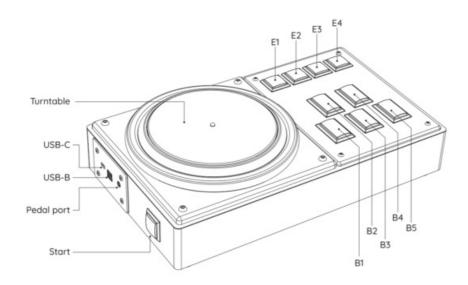

EZTOLLER 5 product diagram.

# **Mode Switching**

The key combinations need to be pressed and held for more than 3 seconds. When the corresponding button light illuminates, it indicates that the switch has been successful.

Key Combination	Mode	Compatible Games
E1+E2+E3+B1	HID mode	EZ2AC, beatoraja E1+
E1+E2+E3+B2	Keyboard mode	EZ2AC, LR2, DJMAX, Ez-Musell, OSU
E1+E2+E3+B3	Keyboard <b>EZ20N</b> mode	EZ20N, DJMAX, Ez-Musell
E1+E2+E3+B4	Keyboard & Mouse mode	Other games
E1+E2+E3+B5	Steam mode	EZ20N, DJMAX, Other games
E1+E2+E3	Display the current mode	

For the latest updates and support, please follow us on Twitter @GamoTwo.

# **EZTOLLER Options**

The **EZTOLLER** Options provide the following features:


- Customize key values
- Switch EZTOLLER modes
- · Firmware Upgrade

- · Adjust ring light brightness and button light brightness
- · Switch ring light modes and customize ring light colors
- · Set turntable dead zones



Please visit: dj-dao.com/en/support to download and consult the user manual.

#### Connection

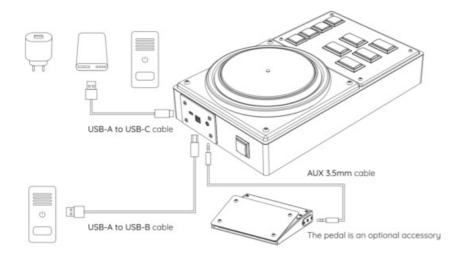





- If the device is not functioning properly, please connect the USB-C cable to the USB port on the back of the PC
  motherboard to ensure sufficient current supply.
- If a USB 3.0 port is available, please connect the USB-B cable to the USB 3.0 port.
- It is not recommended to use USB-HUB. If necessary, please use a USB-HUB with independent power supply.
- Connecting to the **USB-C** port can increase the brightness of the turntable lights. If turntable brightness is not a concern, connecting solely to the **USB-B** port is OK.

For the latest firmware updates, please follow us on Twitter @GamoTwo.

# Modes and key values

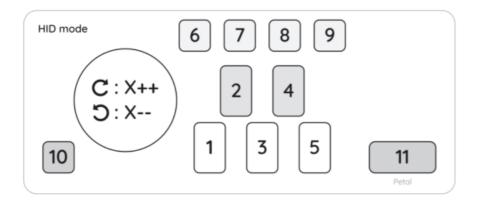


The turntable is analog and supports setting lights output.

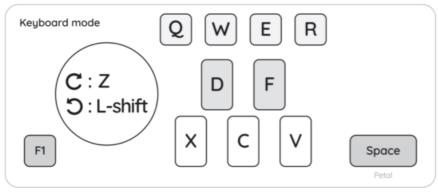


The key values can be customized according to personal needs.

The clockwise and counterclockwise rotations of the turntable can be set to the same key value or different key values.

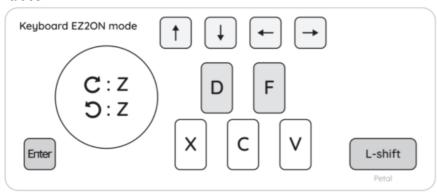


The default layout for EZ20N, but can also be customized according to personal needs.

The clockwise and counterclockwise rotations of the turntable can be set to the same key value or different key values.

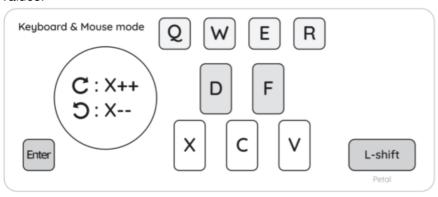

The turntable is analog, suitable for games that support analog input.

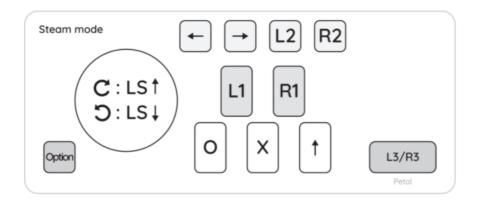

When connecting to **Steam**, the controller will be recognized as a **DS4** controller. You can set any key value according to your own needs.

The turntable can be set as a joystick analog or as a standard button.

## Warranty period: 180 days from delivery date

GAM02 warrant that we will comply with this aftermarket terms, and it doesn't cover the accessories of this product.

- Within 1-7 days, whatever problem happens, GAM02 will provide free maintenance, free replacement, and bear the shipping cost.
- Within 8- 30 days, only in the case of normal use, we will provide free maintenance, free replacement.
   The shipping cost need to be born by the customer.
- Within 31- 180 days, we will provide technical support via email, and free maintenance.
   The cost for replacement and shipping need to be born by the customer.
- If it were beyond 180 days, we only provide technical support via email. The other cost need to be born by the customer.

This warranty doesn't cover following cases, and GAM02 will provide paid maintenance service.


- Doesn't provide order number when asking for maintenance.
- Second- hand products.
- The failure/damage caused by fire, earthquake, flood, public nuisance, lighting strike, salt injury and the other natural disasters.
- The failure/damage caused by dropping or impacting this product during the shipment, movement.
- The failure/damage caused by wrong connection method, or the operation not in accordance with the guide.
- The failure/damage caused by the operation not in accordance with the notices.
- The failure/damage caused by unauthorized modification.

## **Customer Support**





## **Documents / Resources**

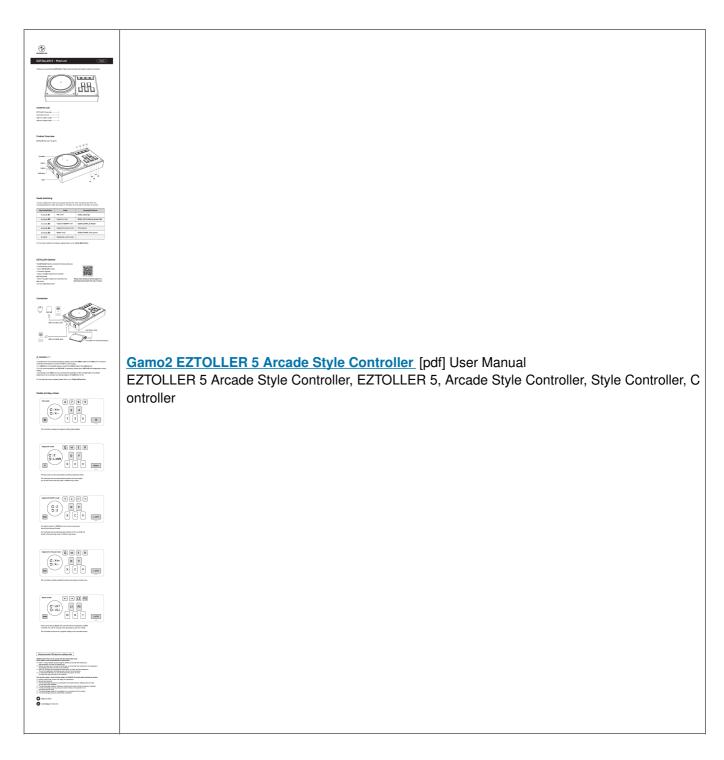

# References

• User Manual

SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsem	nent.