



# Home » GAMWING » GAMWING AB01 Telescopic Mobile Phone Game Controller Instruction Manual 📆

#### Contents [ hide ]

- 1 GAMWING AB01 Telescopic Mobile Phone Game Controller
- 2 Product Introduction
- 3 Product Layout
- 4 Connection and power on
- 5 Mode Instruction
- 6 Calibration Of Joystick And Triggers
- 7 Back Button settings
- 8 Button Combinations
- 9 FCC STATEMENT
- 10 Documents / Resources
  - 10.1 References



**GAMWING AB01 Telescopic Mobile Phone Game Controller** 



## **Product Introduction**

Product Name	Type-C Mobile Game Controller
Item No.	AoBing Max/AB01
Support System	Android,Harmony OS,iOS
Connection	Wired by Type-C & Wireless
Device requirement	Type-C Connection
Android mapping App	Moowii Gaming




Scan the above QR Code for tutorial




Scan the above QR code to download the mapping app for Android.

**Product Layout** 

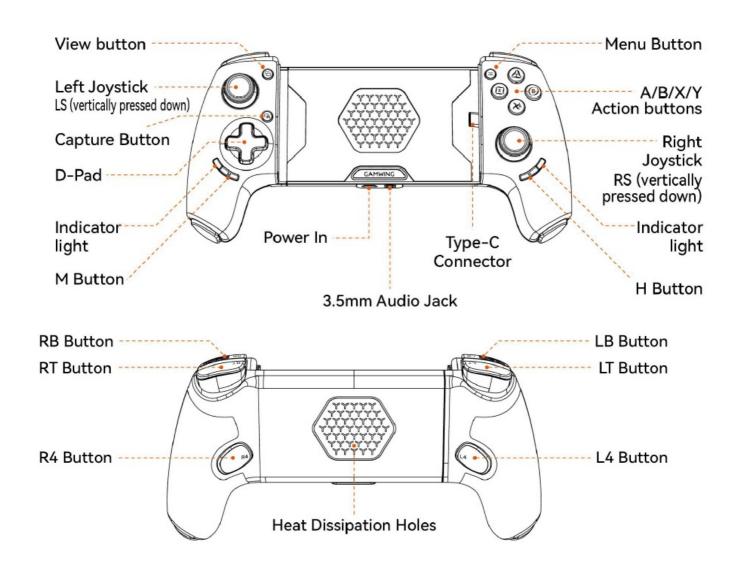

## Connection and power on

Follow these steps to connect your phone to the controller.

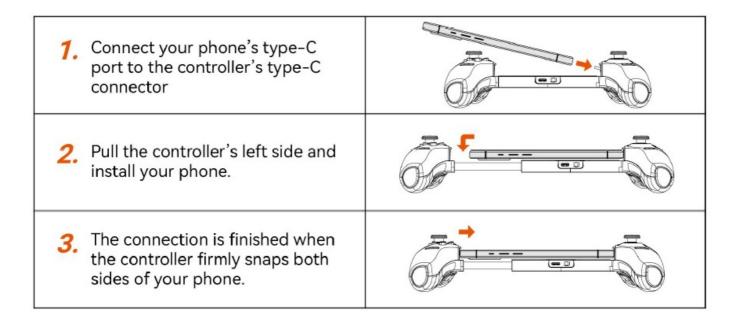

<sup>\*</sup> The indicators will be solid light on to Indicate a successful connection.

\* Some Android phones may need to be enabled OTG to power on and use the controller.

## Standby and Wake-up

- 1. When the controller is turned on with 10 minutes of inactivity, it enters standby mode.
- 2. When the controller is turned on, holding the H button for 10s can enter standby mode.
- 3. When the controller is in standby mode, pressing H/A/B/ X/Y button can wake up the controller.

## **Mode Instruction**

Connection	Mode	Buttons Combination	Indicator Light	Recommended	Wireless Code
Wired by Type-C	iOS MODE	H+B	Orange	iOS MFI games, Emulator games, PS/XBox/Steam streaming games	AoBing Max _Set_xx
	Android HID Mode	H+X	Yellow	Android HID Games, Emulator games	AoBing Max _Set_xx
	Android Mapping Mode	H+Y	Red	Hot games not support controllers such as pubg, LOL, Genshin Impact, Fun Party	/
	Android Streaming Mode	H+X	Purple	PS/XBox/Steam streaming games	AoBing Max _Set_xx
	Android Standard mode	H+B	Green	For phones not support Wired connection to play hid games, emulator games, PS/XBox/Steam streaming games	Xbox Wireless Controller
By wireless	Android Mapping mode	H+Y	Blue	For phones not support wired connection to play hot games not support controllers such as pubg	AoBing Max _Y_xxx
	Switch Mode	H+A	White	Play Switch games	Pro Controller

## **Calibration Of Joystick And Triggers**

- Power on the controller or connect it to your phone, hold the View+Menu+H
  combination buttons for 5 seconds till the indicator lights blink white rapidly to enter
  calibration mode.
- 2. Ensure the triggers and the joysticks are in their natural position without any contact.
- 3. Rotate the joysticks at their maximum travel 3 times and let them return to the initial position naturally.
- 4. Press the triggers to their maximum travel 3 times and let them return to their initial position naturally.
- 5. Press the A Button to complete and exit the calibration mode.


#### Note:

- 1. Calibration should be kept at a constant speed and gently operated to avoid errors in the collected data.
- 2. If the joysticks and triggers can be used normally, please do not calibrate.

## **Back Button settings**

can be mapped to

A/B/X/Y/LB/RB/LT/RT/LS/RS/D-Pad

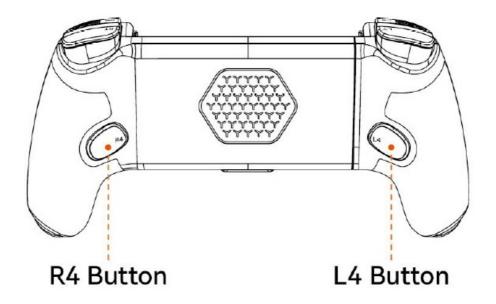

#### Set the L4/R4 value:

1. Hold the M+L/4 buttons combination buttons for 3 seconds till the indicators blink white

- slowly.
- 2. Press the button you want to map to L4/R4.
- 3. Press M button to finish the setting, the indicators return to the initial state. The L4/R4 buttons value is set.

#### Cancel the L4/R4 value:

- 1. Hold the M+L4/R4 combination buttons for 3 seconds till the indicators blink white slowly.
- 2. Double-click the button L4/R4.
- 3. The indicators return to the initial state. L4/R4 button value is canceled.

#### Note:

After 30 seconds of inactivity when setting, the controller will automatically exit the setting mode and the button value will remain the same.

#### **Button Combinations**

Buttons	Function
Hold H+MENU buttons for 5s	un-bonding the BT
Hold M+D-pad's up buttons for 5s	Interchange the left joystick and D-pad. The setup will still be saved after restart.
Hold M+H buttons for 5s	Restore factory settings.
Hold M+H+A buttons for 3s	Interchange A-B, X-Y. The setup will still be saved after restart.
M + Functional Button A/B/X/Y /LB/RB/LT/RT	* Set/Clear Turbo/Auto function: Click M + A/B/X/Y/LB/R-B/LT/RT button to set Turbo/Auto and Clear. (Click the first time: turn on Turbo, click the second time, turn on Auto, click the third time, clear auto.)  * Double click the M button to clear all turbo/auto functions for all buttons.
Hold the H+LT/RT buttons for 2s	Enable/Disable hair trigger *After hair trigger mode is on, the indicators blink for 3s when the LT/RT button is pressed. The setup will still be saved after restart.

#### **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# **Documents / Resources**



## GAMWING AB01 Telescopic Mobile Phone Game Controller [pdf] Instructi

on Manual

2BKK3-AB01, 2BKK3AB01, AB01 Telescopic Mobile Phone Game Controller, AB01, Telescopic Mobile Phone Game Controller, Mobile Phone Game Controller, Phone Game Controller, Game Controller, Controller

#### References

- User Manual
- GAMWING
- ♦ 2BKK3-AB01, 2BKK3AB01, AB01, AB01 Telescopic Mobile Phone Game Controller, controller, Game Controller, GAMWING, Mobile Phone Game Controller, Phone Game Controller, Telescopic Mobile Phone Game Controller

## Leave a comment

Your email address will not be published. Required fields are marked*
Comment *
Name
Email
Website

Save my name, email, and website in this browser for the next time I comment.

# **Post Comment**

#### Search:

e.g. whirlpool wrf535swhz

**Search** 

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.