

GARDCO CSFM Clear Scape Architecture Flood



GARDCO CSFM Clear Scape Architecture Flood Instruction Manual

[Home](#) » [GARDCO](#) » GARDCO CSFM Clear Scape Architecture Flood Instruction Manual 

Contents

- [1 GARDCO CSFM Clear Scape Architecture Flood](#)
- [2 RISK OF PRODUCT DAMAGE](#)
- [3 CSFS / CSFM CLEARSCAPE MAIN INSTALLATION](#)
- [4 SF – Slip Fitter Angle Adjustment](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



GARDCO CSFM Clear Scape Architecture Flood



Product Specifications

- Model: CSFS / CSFM ClearScape Architecture Flood
- Product Code: 443561208870 – CLEARSCAPE MAIN
- Revision: G

Installation – SF Slip Fitter Mount

1. **STEP 1:** Remove (2) splice cover screws and splice cover to access wire splice area.
2. **STEP 2:** Route the supply wire through the tenon and slip fitter arm into the splice area. Secure the wire to prevent sliding.
3. **STEP 3:** Carefully lower the luminaire onto the tenon ensuring wires are not pinched. Center the slip fitter on the tenon.
4. **STEP 4:** Fit the luminaire over the tenon and hand tighten the slip fitter set screws in a star pattern using a 3/16 Allen wrench.
5. **STEP 5:** Make electrical connections inside the splice area. Replace splice cover and screws, ensuring the gasket is correctly placed.

Slip Fitter Angle Adjustment

ANGLE ADJUSTMENT

1. **STEP 1:** After installation, adjust the luminaire angle in increments up or down.
2. **STEP 2:** Rotate the luminaire to the desired position using degree indicators.
3. **STEP 3:** Retighten the bolt to 47 ft.-lbs once the desired angle is achieved.

Yoke Mount – YK:

1. **STEP 1:** Mount yoke to the surface using (2) 1/2 bolts provided by others.
2. **STEP 2:** Route the supplied cord to the electrical junction box and secure it with a connector.
3. **STEP 3:** Make electrical connections inside the junction box as per Electrical Connection section.

Frequently Asked Questions (FAQ):

1. **Q: What should I do if I encounter difficulties during installation?**

A: If you face any challenges during installation, please contact Signify, Lumec at TSC@signify.com or call 1-833-744-6439 for assistance.

CSFS / CSFM

ClearScape Architecture Flood
443561208870 – CLEARSCAPE MAIN
443561208870 REV G

IMPORTANT: FOR YOUR PROTECTION, YOU MUST CAREFULLY READ ALL WARNINGS AND INSTRUCTIONS IN THEIR ENTIRETY PRIOR TO INSTALLATION, OPERATION, SERVICE OR MAINTENANCE. FAILURE TO DO SO CAN RESULT IN DEATH, PERSONAL INJURY AND PROPERTY DAMAGE. If you do not understand these warnings and instructions, or if additional information is desired, please contact Signify, Lumec. TSC@signify.com phone 1-833-744-6439.

- Installation, service and maintenance of luminaires must be performed by a qualified professional and in accordance with all federal, state and local laws, regulations and electrical codes. This professional should be familiar with the construction and operation of this product and any hazards involved. If not qualified, do not attempt installation, service or maintenance.
- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts, abrasions and other hazards, please read all warnings and instructions included with the luminaire, on the luminaire's packaging and affixed to the luminaire itself.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaire's construction and operation and any hazards involved.

WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Disconnect or turn off power before attempting any installation, service or maintenance.
- Verify that supply voltage is correct by referencing the luminaire label information.
- Make all electrical and ground connections in accordance with the National

Electrical Code (NEC) and any other applicable laws, regulations or codes.

- All wiring connections should be capped with UL-approved wire connectors.

WARNING

RISK OF FIRE OR PERSONAL INJURY

- Keep combustible materials away from LED/lamp & lens

- Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.

WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.

WARNING

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Allow Led/lamp & lens to cool before handling.
- Do not touch enclosure or light source
- Do not exceed maximum wattage marked on luminaire label.
- Follow all manufacturer's warnings, recommendations, instructions and restrictions for driver type, burning position, mounting locations and replacement.

CAUTION

RISK OF PRODUCT DAMAGE

- Never connect luminaires and/or components under load with supply voltage turned on.
- Do not mount or support these luminaires in a manner that can cut the outer jacket or damage wire insulation.
- Do not restrict fixture ventilation. Allow for some volume of airspace around luminaire. Avoid covering luminaire with insulation, foam or other material that will prevent convection or conduction cooling.
- Do not exceed luminaire maximum ambient temperature.
- Do not modify the luminaire.
- Only use luminaire in its intended application and location.
- Led products are polarity sensitive. Ensure proper polarity before installation.
- Electrostatic Discharge (ESD) can damage LED. Personal grounding equipment must be worn during all installation and servicing of the luminaire.
- Do not touch individual electrical components as this can cause ESD, shorten LED life, or impact LED performance.
- Some components inside the luminaire may not be serviceable. In the unlikely event your luminaire may require service, stop using it immediately and contact Signify.
- Always read the luminaires complete installation instructions prior to installation for any additional luminaire specific warnings.
- In the case of HID or Fluorescent luminaires, regular re-lamping is required to keep luminaire operating within safe limits
- Do not install damaged product. Handling and installing damaged products can potentially increase the risks mentioned In case of damage and/or missing parts upon arrival of the luminaire.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation or maintenance.
- Please see luminaire specific Installation and Maintenance Instruction for additional warnings or any applicable

FCC or regulatory statements. Failure to follow any of these Instructions could void luminaires warranties.


Luminaire Maintenance

- Regular luminaire maintenance programs are recommended.
- It is recommended to clean the outside of the luminaire and the refractor/lens.
- Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user.
- If clean water is not sufficient for cleaning, use a neutral, synthetic, not-scratching and not-abrasive cleaning substance.
- Never use alkaline and/or acetous cleaning substances.
- Make sure that the cleaning substance is carefully removed by rinsing with lots of clean water.
- Signify recommends using a cleaning solution that has a PH between 5 and 8.
- Recycle: For information on how to recycle electronic products and components, please visit www.epa.gov.

CSFS / CSFM CLEARSCAPE MAIN INSTALLATION


Electrical Connection: (Not all options shown below are included.)

- Connect the black fixture lead to the input voltage supply or Hot 1 (for 208/240V/480v wiring).
- Connect the white fixture lead to the neutral supply or Hot 2 (for 208/240V/480v wiring).
- Connect the green or green/yellow ground lead to the incoming ground wire.
- If Dimming is an option; connect the purple dimming positive lead to the supply dimming positive lead.
- If Dimming is an option; connect the grey dimming negative lead to the supply dimming negative lead.

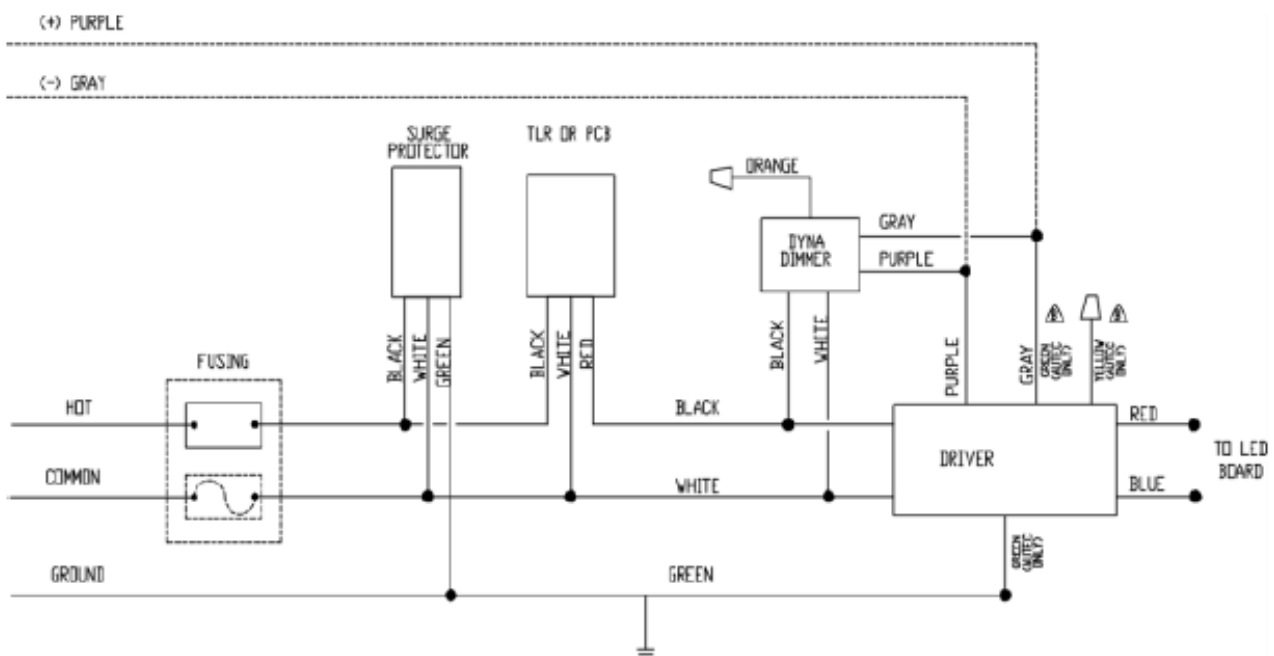

SF – Slip Fitter Mount

Note: Tenon must be 3.75" or longer.

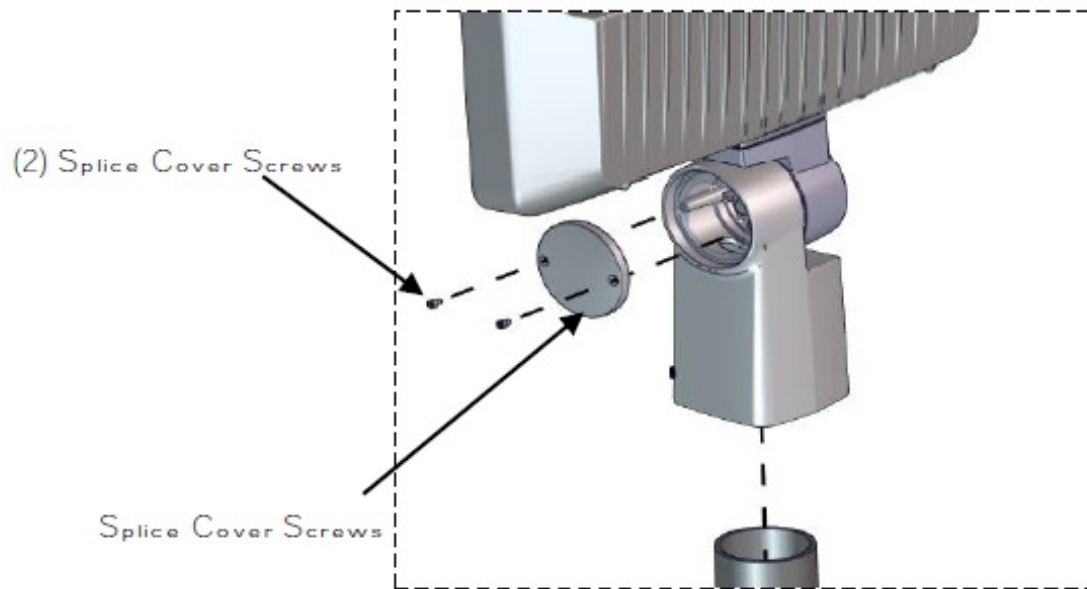

1. STEP 1:



Remove (2) splice cover screws and splice cover. To access wire splice area.

2. STEP 2:

Route the supply wire through the tenon. Secure the supply wire to keep from sliding back down the pole.
Route wire through slip fitter arm into splice area.

3. STEP 3:

Holding routed wires in splice area, carefully lower luminaire onto tenon. The slip fitter should be centered on the tenon. For 2-3/8" tenons a centering rib is cast into the slip fitter base to help guide the centering. Check to ensure that wires are not pinched between inside of slip fitter and top of tenon and that luminaire and wires rotate freely.

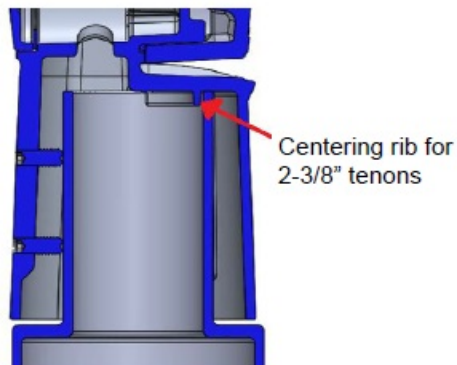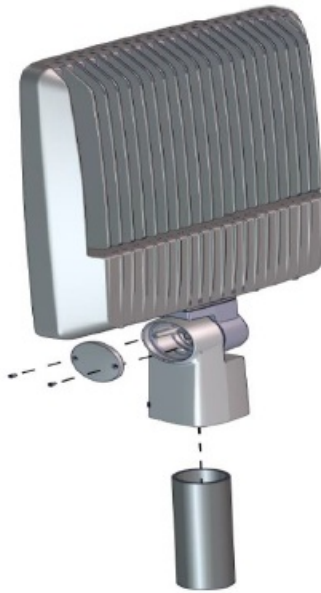

SF – Slip Fitter Mount – (Cont'd) Note: Tenon must be 3.75" or longer.



4. STEP 4:

Fit the luminaire over the tenon. To keep the luminaire centered on the tenon, hand tighten the slip fitter set screws in a star pattern around the slip fitter using a 3/16" Allen wrench until the tip of the screws just engage the tenon. (Do not fully tighten). Rotate to correct horizontal aiming position. Tighten set screws to 11 ft.-lbs. when final horizontal position is set.

5. STEP 5:

Make electrical connections per Electrical Connection section inside splice area. When complete replace splice cover and (2) screws removed in Step 1. Ensure that gasket is correctly in place before tightening splice cover and screws.



SF – Slip Fitter Angle Adjustment

ANGLE ADJUSTMENT

NOTE: Angle adjustment can be made before luminaire installation.

1. STEP 1:


After the luminaire is installed, the angle of the luminaire can be adjusted approximately 90° up or down in 5° increments.

2. STEP 2:

To adjust the angle, loosen the (1) 1/2–13 X 1.75” socket cap bolt located in slip fitter Arm. (Do not remove bolt.) Loosen only enough to allow rotation on cast teeth.


3. STEP 3:

Using the degree indicators, shown as a guide, rotate the luminaire to the desired position and retighten the bolt loosened in Step 2 to 47 ft.-lbs.

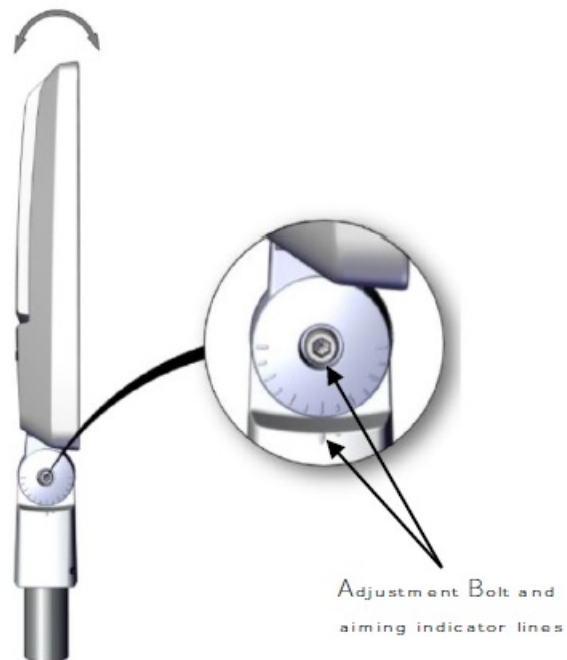


CSFS / CSFM CLEARSCAPE MAIN INSTALLATION

YK – Yoke Mount

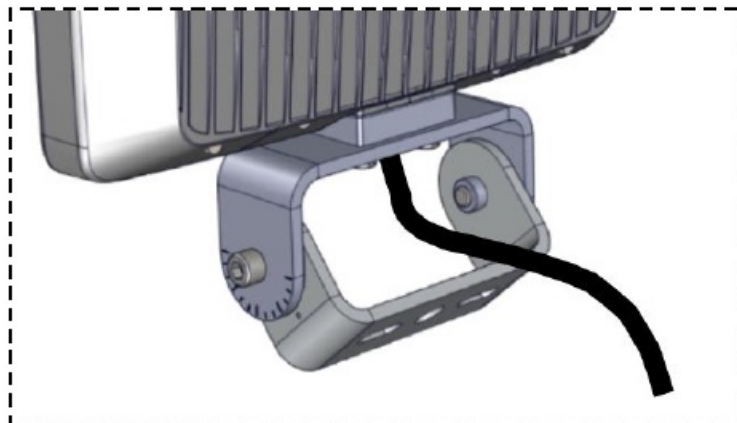

1. STEP 1:
Mount yoke to surface with (2)- 1/2" bolts provided by others.
2. STEP 2:
Route the supplied cord to electrical junction box provided by installer. Secure cord with connector.
3. STEP 3:
Make electrical connections per Electrical Connection section inside junction box.
NOTE: Electrical Connections can be made after installation is finished.
4. STEP 4: Replace junction box gasket and cover.

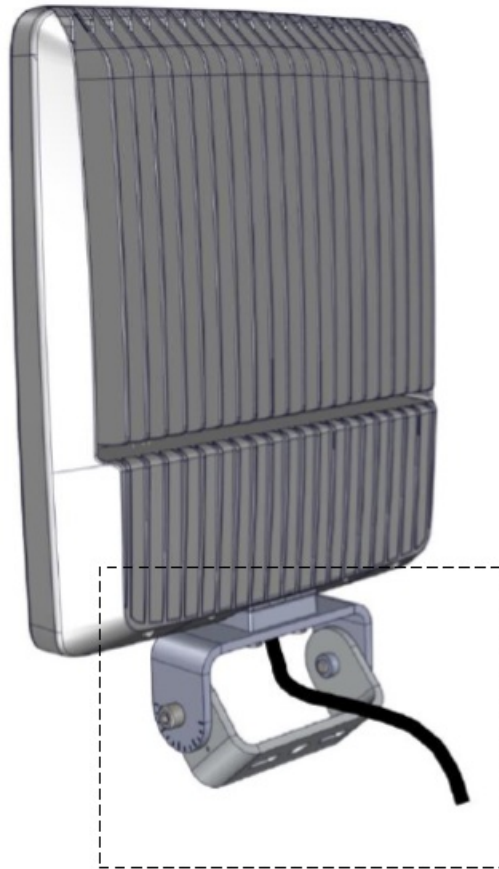

YK – Yoke Angle Adjustment

NOTE: Angle adjustment can be made before luminaire installation.

1. STEP 1:


After the luminaire is installed, the vertical angle of the luminaire can be adjusted up or down

2. STEP 2:

To adjust the angle, loosen the (2) 1/2–13 X 1.25” socket head cap bolts located in yoke arm. (Do not remove bolts.) Loosen only enough to allow rotation.

3. STEP 3:

Using the degree indicators, shown as a guide, rotate the luminaire to the desired position and retighten the bolt loosened in Step 2 to 75 ft.-lbs.

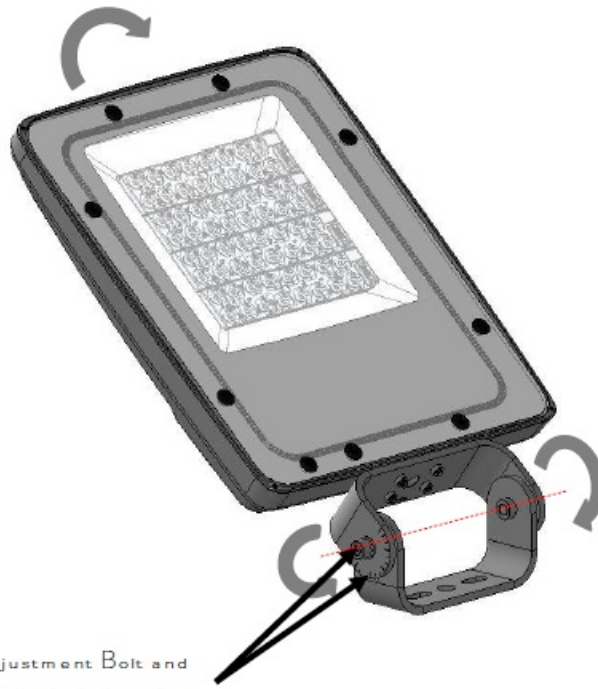


Adjustment Bolt and
aiming indicator lines


CLEARSCAPE CSFS / CSFM MAIN INSTALLATION

YK - Yoke Mount - (Cont'd)

Align aiming mark
with correct
degree marks on
bracket

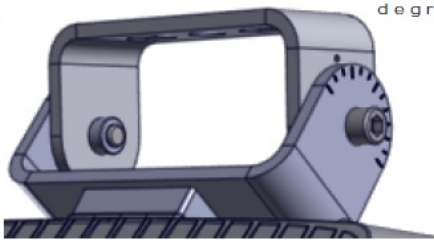

OK to mount
floodlight "down"
on yoke mount.

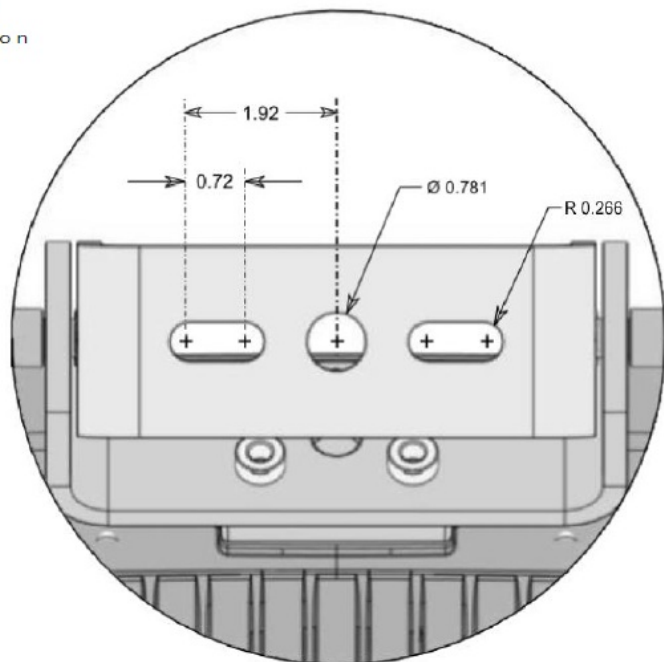

Opening Glass Door Frame

Note: Procedure to open glass door frame is the same on slip fitter and yoke mount fixtures. It is not necessary to remove glass to install luminaire.

STEP 1:


Unfasten the captive shoulder screw around the glass perimeter excluding the bottom left safety screw.

STEP 2:

Collect all screws and remove glass gently. Be sure that gasket is still seated on rib. Safety cable should remain attached while servicing luminaire.

STEP 3:

After servicing luminaire, carefully rotate glass door frame up into closed position and retighten screws loosened in Step 1.

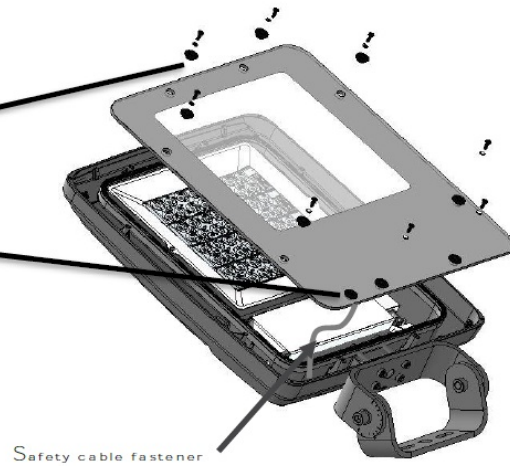

© 2021 Signify Holding. All rights reserved. This document may be subject to change. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. All trademarks are owned by Signify Holding or their respective owners.

Signify North America Corporation 200 Franklin Square Drive. Somerset, NJ 08873 Telephone 855-486-2216
Signify Canada Ltd. 281 Hillmount Road, Markham, ON, Canada L6C 253 Telephone 800-668-9008

Documents / Resources

 GARDCO by Signify	GARDCO CSFM Clear Scape Architecture Flood [pdf] Instruction Manual CSFM Clear Scape Architecture Flood, CSFM, Clear Scape Architecture Flood, Scape Architecture Flood, Architecture Flood
--	--

References

- [EPRA | ARPE | Electronic Products Recycling Association | Association pour le recyclage des produits électroniques](#)
- [U.S. Environmental Protection Agency | US EPA](#)
- [U.S. Environmental Protection Agency | US EPA](#)
- [Outdoor architectural solutions lighting | Gardco | Signify](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.