




Garnet Instruments 709-N2K NLP SeeLevel II Tank Monitor Instructions

[Home](#) » [Garnet Instruments](#) » Garnet Instruments 709-N2K NLP SeeLevel II Tank Monitor Instructions 

Contents


- [1 Garnet Instruments 709-N2K NLP SeeLevel II Tank Monitor Instructions](#)
- [2 Pigtail Wires](#)
- [3 NMEA Pinout](#)
- [4 Read More About This Manual & Download PDF:](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Garnet Instruments 709-N2K NLP SeeLevel II Tank Monitor Instructions

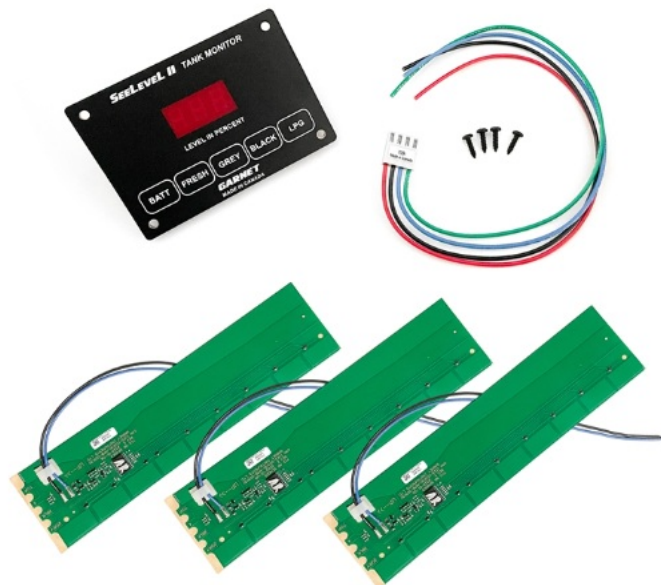

Pigtail Wires

Pin	Color	Function
1	—	—
2	Red	+12V
3	Black	Ground
4	Blue	Tank Senders
5		
6		

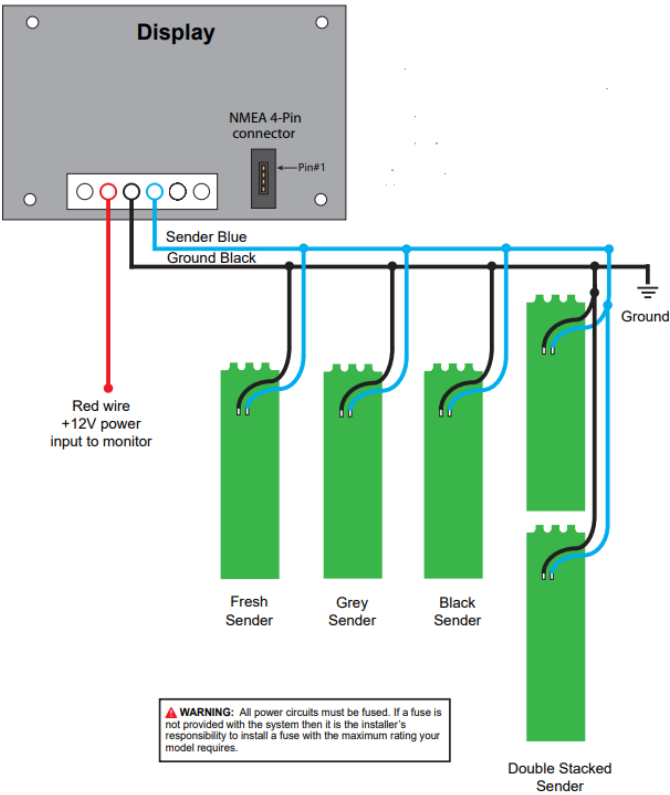


NMEA Pinout

Pin	Signal Description
1	+Voltage
2	CAN-Hi
3	CAN-Lo
4	-Voltage

WARNING: All power circuits must be fused. If a fuse is not provided with the system then it is the installer's responsibility to install a fuse with the maximum rating your model requires.

Read More About This Manual & Download PDF:

Documents / Resources

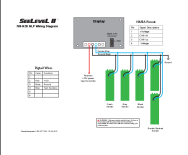

[Garnet Instruments 709-N2K-NLP SeeLevel II Tank Monitor](#) [pdf] Instructions
709-N2K-NLP SeeLevel II Tank Monitor, 709-N2K-NLP, SeeLevel II Tank Monitor, II Tank Monitor, Monitor