



GasMax GG Series
Two Burner
Griddle Top



GasMax GG Series Two Burner Griddle Top Instructions

[Home](#) » [GasMax](#) » GasMax GG Series Two Burner Griddle Top Instructions 

Contents

- [1 GasMax GG Series Two Burner Griddle Top](#)
- [2 Product Usage Instructions](#)
- [3 GAS GRIDDLE](#)
- [4 Dimensions](#)
- [5 Technical Information](#)
- [6 Installation](#)
- [7 Appliance Functions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



GasMax GG Series Two Burner Griddle Top



Specifications

- **Model GG-24:** Height 412mm, Width 610mm, Depth 761mm, Weight 80KG, Gas Consumption 56 MJ/h NG, 54 MJ/h ULPG
- **Model GG-36:** Height 412mm, Width 915mm, Depth 761mm, Weight 110KG, Gas Consumption 84 MJ/h NG, 81 MJ/h ULPG
- **Model GG-48:** Height 412mm, Width 1220mm, Depth 761mm, Weight 152KG, Gas Consumption 112 MJ/h NG, 108 MJ/h ULPG
- **Gas Connection:** Right side rear 50mm from side, 150mm from top

Product Usage Instructions

Safety Precautions

- Install the appliance in a well-ventilated area to prevent asphyxia.
- Ensure proper ventilation by not obstructing the appliance's vents or ducts.
- Only authorized personnel should carry out maintenance and gas type conversions.
- Do not use the appliance for any purpose other than cooking foodstuffs.

Cleaning and Maintenance

- Avoid using chlorine-containing products to clean the appliance.
- Avoid spraying aerosols near the appliance while it is in operation.
- Use non-metal tools to clean steel parts to prevent damage.
- Do not store chemicals near the appliance.

General Usage

- Ensure trained personnel operate the appliance and never leave it unattended when in use.
- Turn off the appliance if there is a fault, poor operation, or gas smell.

- Avoid allowing dirt or deposits to accumulate on the appliance.

Important Notes

- Read the installation, operation, and maintenance instructions thoroughly before using the equipment.
- Keep the area around the appliance clear of combustibles and flammables.

FAQ

- **Q: Can I clean the appliance with direct jets of water?**

A: No, do not clean the appliance with direct jets of water as it can compromise safety.

- **Q: What should I do if I smell gas while using the appliance?**

A: Turn off the appliance immediately and ensure proper ventilation before investigating the source of the gas smell.

- **Q: Can I use the appliance for purposes other than cooking foodstuffs?**

A: No, the appliance is intended for commercial food cooking only

GAS GRIDDLE

GG Series

- Read this manual carefully before using the appliance.
- Keep the manual for future consultation after installation. And to instruction of how to use This manual contains information for FED appliances.
- See the appliance data plate positioned at the front of appliance on the control panel in order to identify the appliance product code.
- Only install the appliance in a well ventilated place. Inadequate ventilation causes asphyxia. Do not obstruct the ventilation system in the place where the appliance is installed. Do not obstruct the vents or ducts of this or other appliances.
- Installation must be in accordance to AS /NZS 5601.1 GAS CODES Maintenance and conversion to other gas types must only be carried out only by an authorised person(s). For after sales assistance, contact an authorised service agent or the supplier. Demand original spare parts.
- This appliance is designed for cooking foodstuffs. It is intended for commercial use only. Any other use is to be considered improper.
- Personnel using the appliance must be trained. Do not leave the appliance unattended when it is working.
- Turn off the appliance in case of fault, poor operation or if you smell gas.
- Do not use products (even diluted) containing chlorine (sodium hypochlorite, hydrochloric or muriatic acid, etc) to clean the appliance or the floor under the appliance.
- DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.
- Do not use metal tools to clean steel parts (wire brushes or Scotch Brite type scouring pads).
- Do not store chemicals in or near this appliance.
- Do not allow dirt, fat, food or other to form deposits on the appliance.
- Do not clean the appliance with direct jets of water.
- Failure to observe the above instructions can compromise the safety of the appliance.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death, Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

The area where the appliance is installed must be kept clear of combustibles and flammables. This includes mops, rags, grease wrapping paper and electrical equipment (cords)

Dimensions

Model	Height	Width	Depth	Weight	Gas Cons MJ/h	
GG-24	412mm	610mm	761mm	80KG	56 NG	54 ULPG
GG-36	412mm	915mm	761mm	110kg	84 NG	81 ULPG
GG-48	412mm	1220mm	761mm	152kg	112 NG	108 ULPG
Gas Connection at right side rear 50mm from side, 150mm from top						

Technical Information

Gas:

Burner : Char – Grill	Natural Gas	ULPG
Gas Consumption MJ/h	28 / burner	27 / burner
Injector Size mm	2.7	1.7
Test Point Pressure kPa	1.0kPa	2.65kPa
Inlet Pressure Range KPA	1.13- 1.2 KPA	2.75- 2.80 KPA

Packaging

Packing materials are environmentally friendly and can be stored without risk, or burned in a special waste incineration plant OR recycled

Use

During operation some parts of the appliance may be very hot! Never touch any hot parts without gloves on. Our appliances offer high performance and efficiency. To reduce consumption of gas, electricity or water, do not use appliance when empty or in conditions that compromise its optimal efficiency (e.g. with doors or lids open, etc.). When possible, preheat only before use.

Cleaning

In order to reduce the emission of pollutants into the environment, clean the appliance (externally and when necessary internally) with products which are more than 90% biodegradable.

Installation

Installation must be carried out only by authorised, licensed installers in accordance with these instructions, local gas fitting regulations, local building codes, water supply regulations, electrical wiring regulations, the Gas Installation Code AS/NZS 5601.1 and any other relevant statutory regulations.

Unpacking

Remove the packing.
Carefully remove the protective film from metal surfaces.
Remove any traces of glue using a suitable solvent.

Importantly:

Immediately check for any caused during transport.
Inspect the packs before and after unloading.
The forwarder is responsible for the safety of the goods during transport and delivery. Notify the forwarder in the event of apparent or hidden damage. Specify any damage or shortages on dispatch note.
Keep all documentation contained in the packing.
PLEASE notify supplier of any damages

Positioning

The installation diagrams give the overall dimensions of the appliances and the positions of connections (gas, electricity and water)
Appliances can be installed separately or in combination with other appliances in the same range.
Leave at least 150mm between the appliance and the side or rear walls.
When positioned under a grease filter, the appliance must have at least 1000 mm between the top of the appliance and the grease filter
Maintain an adequate distance between the appliance and any combustible walls.
Leave an adequate distance between the appliance and any side walls in order to allow subsequent servicing or maintenance operations.
Suitably insulate any surfaces that are less than the specified distances from the appliance.

Securing To the Floor or Bench

To avoid accidental tipping of certain modules, fix them to the floor or bench surface. This must be done in situations where hose assemblies are used for gas connection.

Exhaust

The appliance must be installed under a ventilation exhaust system complying with the local building regulations and AS/NZS 5601.1 – Gas Installation code.
Place the appliance under the extractor hood to ensure removal of fumes and steam produced by cooking.
The correct clearance between the appliance outlet and the grease filter must comply with the current standards and be not less than 600 mm.
Where there is no exhaust hood, contact local authority for information and guidance on installation.

Connections

Refer to appliance data plate for information relating to gas consumption, pressures etc. 20mm BSP located at rear 150mm from top, 50mm in from side, or optional under appliance connection. Check the appliance connections to ensure the unused inlet is capped off and gas tight.
An appliance gas pressure regulator must be fitted for Natural gas and ULPG appliances. Refer AS4563 – Commercial Gas Catering Equipment (implementation Jan 2005)
Fit an appliance isolating valve before the inlet. This must be a ¼ turn type, and be AGA approved and be in an accessible location when the appliance is installed and working.
Test point for checking gas pressures is located on the manifold behind the front cover. Remove knobs, and screws to access test point. Ensure test point is resealed and leak tested after use.

Important!

For all gas appliances, the regulator supplied with the appliance must be fitted between the gas valve and the appliance inlet.
Clean the pipes to remove any dust, dirt or foreign matter which could block the supply.
Do not use pipes of a diameter smaller than that for which the appliance is designed. Refer AS/NZS 5601.1 Gas Installations for Pipe sizing tables.
After installation the pipework should be checked for gas leaks in accordance with standard operations. Use soapy water to check connections for leaks.
Make certain the appliance is arranged for the type of gas to be used. Otherwise the appliance will have to be converted to the applicable gas type. If not certain contact local gas supplier for confirmation of gas type. Any

conversion to be carried out must be undertaken by an authorised person in accordance with the supplied instructions.

Use of Flexible Hoses: Where it is intended to connect the appliance to the gas supply using a flexible, it is important to use the correct type assembly for the application. Refer to AS5601 for hose connection requirements. The hose assembly must comply with AS/NZS1869 – Class B and be kept as short as possible. A chain must be fitted to restrict the appliance movement to no more than 80% of the hose length. Ensure hose is adequate for appliance gas consumption.

Supply Pressure Check

Make sure the appliance is suitable for the type of gas available, according to that given on the data plate.

The supply pressure must be measured with the appliance operating, using a manometer (min 0.1kPa)

Ensure gas is turned off.

Remove control panel.

Remove test point screw from the pressure test point and connect the manometer.

Turn the gas on slowly, light the applicable burners and compare the value read on the manometer with that given on the data plate.

If the manometer gives a pressure outside the range adjust the gas regulator supplying the appliance. If the pressure cannot be adjusted to the correct value check the installation to determine problem.

Gas Pressure Regulator

The section of the gas supply line must be sufficient to ensure the gas flow necessary for full operation of all of the appliances connected to the piping.

The gas pressure regulator will ensure constant outlet pressure over varying inlet pressures. When the regulator is fitted, it must be adjusted to the correct pressure when the burners are operating.

Test point pressures are:

1. for Natural Gas
2. 65kPa for ULP GAS

Adjusting the Air for the Burners

When the primary air is correctly adjusted, the flame does not detach with the burner when cold and there is no flashback with burner hot. Burners can be adjusted accordingly.

At the completion of the installation, test the appliance for correct operation.

Advice on Service

At the completion of the installation, start the appliance and check operation – Refer 'operating instructions'. If the appliance does not operate correctly, check the following:-

- Appliance has been installed correctly to the correct gas type;
- Gas regulator has been installed and the pressure set to the correct pressure;
- Burner has been adjusted to correct flame type.
- Ignition set correctly and battery fitted to ignition module.
- Safety device (thermocouple) is being sufficiently heated during burner start up.

If after checking the above items, the appliance does not operate correctly, contact FED for advice and nearest service agent.

If you smell gas, immediately turn off the gas supply at the burner control valve. If smell still persists, turn appliance isolation valve off and call FED for advice. If smell is still evident, leak is probably on piping, therefore contact plumber and gasfitter for advice.

Where the burner flames begin to burn yellow, the appliance requires cleaning. Remove and clean burners, then thoroughly dry before restarting burners.


APPLIANCE OPERATION

The operation of this appliance must only be carried out by trained and competent personnel!

Preparing the appliance for use:


Before cooking food for the first time, we recommend cleaning the appliance thoroughly. Remove all packaging and adhesive films from the appliance very carefully and wash appliance with warm soapy water or similar cleaning agent.

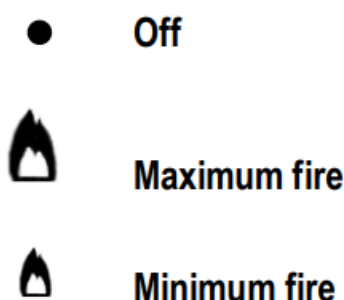


Appliance Functions



Using the appliance:

- The burners are ignited by the electronic ignition fitted to the front panel of the appliance or by using a match or similar ignition method. Ensure ignition is operated at the same time as the valve is operated. If the gas does not ignite immediately, turn valve off before build-up of gas becomes hazardous. Do not place any part of the body close to the burner, or have loose clothing near burner area.

- To light the burner, press the knob in and turn it anti-clockwise to the  position.
- Hold down the knob and at the same time depress the ignition button near the burner;
- After lighting the flame, hold down the knob for 15 more seconds to allow the thermocouple (safety device) to heat. If the flame goes out when you release the knob, repeat the operation;

- Turn the knob to the desired heat setting within the ranges between positions  and .
- To turn off the burner, turn the knob clockwise to the position '  ' .
e. g. 5 – 10 minutes.

Warning:

Do not leave the burners operating unattended. If the flame goes out, the burner will shut off and will have to be restarted as detailed above.

Do not place the hand (or other parts of the body) in a position where it may be affected during starting or operating the burners. Flames may be evident from the sides of utensils during ignition and operation of the burners.

Notes

- For best results, space foods evenly on the griddle and do not overload griddle.
- Only use wooden or plastic cooking utensils to prolong the life of the non-stick coating.
- Do not place any pot, pan, or dish on the non-stick griddle surface.

Appliance must only be serviced by an FED authorised person.

Appliance should be serviced at least every 2 years or more frequently depending on use. This service is not covered by warranty.

- Service should include check operation of valves, safety devices, all other components and for gas leaks.
- Any parts which have deteriorated or not working correctly should be replaced by genuine parts available from FED.

FOOD EQUIPMENT DISTRIBUTORS Pty Ltd

www.foodequipment.com.au

Troubleshooting

- If the appliance fails to operate, check gas supply to appliance



- Users are not allowed to perform any maintenance operations on any parts of this appliance. Maintenance must be carried out exclusively by authorized technical service personnel.


TROUBLE	CAUSE	SOLUTION
---------	-------	----------

		FOR THE USER	FOR THE TECHNICAL SUPPORT SERVICE
Griddle Burners			
Burner won't light:	the ignition plug is not securely fixed, or the connection with the cable is wrong;		check the connection;
	ignition plug insulator damaged / dirty;		Clean / replace the plug;
	clogged nozzle;		clean the pilot flame nozzle or replace it;
	pressure drop in gas pipe;		Check appliance inlet supply, pipe sizes, contact the gas utility company;
	gas valve damaged;		replace it

After releasing the knob, the flame goes out:	the thermocouple is not sufficiently heated by the burner flame;	Wait 2 minutes and repeat the ignition procedure;	Clean burner assembly and reposition thermocouple
	thermocouple faulty;		replace the thermocouple;
	gas valve faulty;		replace it
Main burner does not seem strong enough:	pressure drop in gas pipe;		Check inlet gas pressure, pipe sizes, contact the gas utility company;
	burner nozzle is clogged;		clean the burner nozzle (see chapter, Replacing the main burner nozzles);
	gas valve damaged;		replace it
Minimum flame adjustment			Light burner and turn to minimum setting. Remove knob, insert screw to adjust flame.
Burner aeration			Remove front panel, adjust aeration disc to suit correct colour flame.

Valves, igniter, aeration adjustment etc can be accessed by removing front panel. This can be done by removing knobs, undoing screws which hold the front panel. This will enable the equipment to be accessed and adjusted where necessary.

Documents / Resources

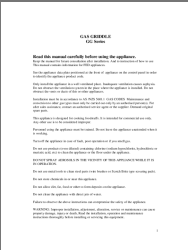	<p>GasMax GG Series Two Burner Griddle Top [pdf] Instructions GG Series Two Burner Griddle Top, GG Series, Two Burner Griddle Top, Griddle Top</p>
---	---

References

-  [Commercial Kitchen Equipment in Australia for Sale | F.H.E](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.