



GE APPLIANCES 2 Device Big Button Universal TV Remote Control User Manual

[Home](#) » [GE Appliances](#) » GE APPLIANCES 2 Device Big Button Universal TV Remote Control User Manual 

Contents

- [1 GE APPLIANCES 2 Device Big Button Universal TV Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 SETUP](#)
- [5 BUTTON FUNCTIONS](#)
- [6 DIRECT CODE ENTRY](#)
- [7 AUTO CODE SEARCH](#)
- [8 CODE IDENTIFICATION](#)
- [9 MASTER VOLUME CONTROL](#)
- [10 TROUBLESHOOTING](#)
- [11 RESET TO FACTORY SETTINGS](#)
- [12 CONTACT](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



GE APPLIANCES
a Haier company

GE APPLIANCES 2 Device Big Button Universal TV Remote Control



Product Information

The 2-Device Universal Remote is a versatile remote control that can be used to control your TV and cable box. It offers various button functions such as power, volume control, channel selection, mute, previous channel, numbers for direct channel selection, enter, setup, input selection, and sleep timer. The remote requires two AA batteries for operation (not included), and it is recommended to use alkaline batteries for optimal performance.

• Battery Installation:

- On the back of the remote, pull down on the textured surface and slide the battery cover downward to remove it.
- Match the (+) and (-) marks on the batteries to the corresponding marks inside the battery compartment, then insert two AA batteries. Make sure to use fresh batteries.
- Position the battery cover slightly below the opening and push upward to lock it into place.
- If the remote stops operating properly, replace the batteries with new ones.

• Battery Precautions:

- When disposing of batteries, follow local and national regulations for proper recycling or disposal.
- The remote has a battery saver feature that automatically turns it off if the buttons remain depressed for more than 8 seconds.
- This helps save battery life in case the remote gets stuck between sofa cushions or any other place.
- The remote also has a code saver feature that allows you up to 10 minutes to change the batteries without losing the programmed codes.

Product Usage Instructions

- **Setup:**
 - Press and hold the setup button until the red light stays on.
 - Press and release the mute button.
 - Press and release 0 (zero). The red light will blink twice.
- **Direct Code Entry:**
 - **Note:** The TV device button is preprogrammed for Samsung TVs.
 - In the Code List included with your remote, circle the 4-digit codes for the type and brand of device you wish to control.
 - Press and hold down the SETUP button until the remote's red light turns on. Release the SETUP button. The red light will remain on.
 - Enter the 4-digit code using the number buttons.
 - If the code is entered correctly, the red light will turn off. If not, the red light will blink twice. Repeat this step with another code.
 - For troubleshooting or further assistance, contact customer support at 1-800-654-8483 between 7 AM and 8 PM, Monday to Friday, Central Time.

SETUP

Your universal remote requires two (2) AA batteries (not included). Alkaline batteries are recommended.

Battery Installation

1. On the back of the remote, pull down on the textured surface and slide battery cover downward to remove.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AA batteries. Be sure to use fresh batteries.
3. Position battery cover slightly below opening and push upward to lock into place.
 - **NOTE:** If your remote stops operating properly, replace the batteries with new ones.

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.


Battery Saver

Your remote automatically turns off if the buttons are depressed more than 8 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

Code Saver

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.


BUTTON FUNCTIONS

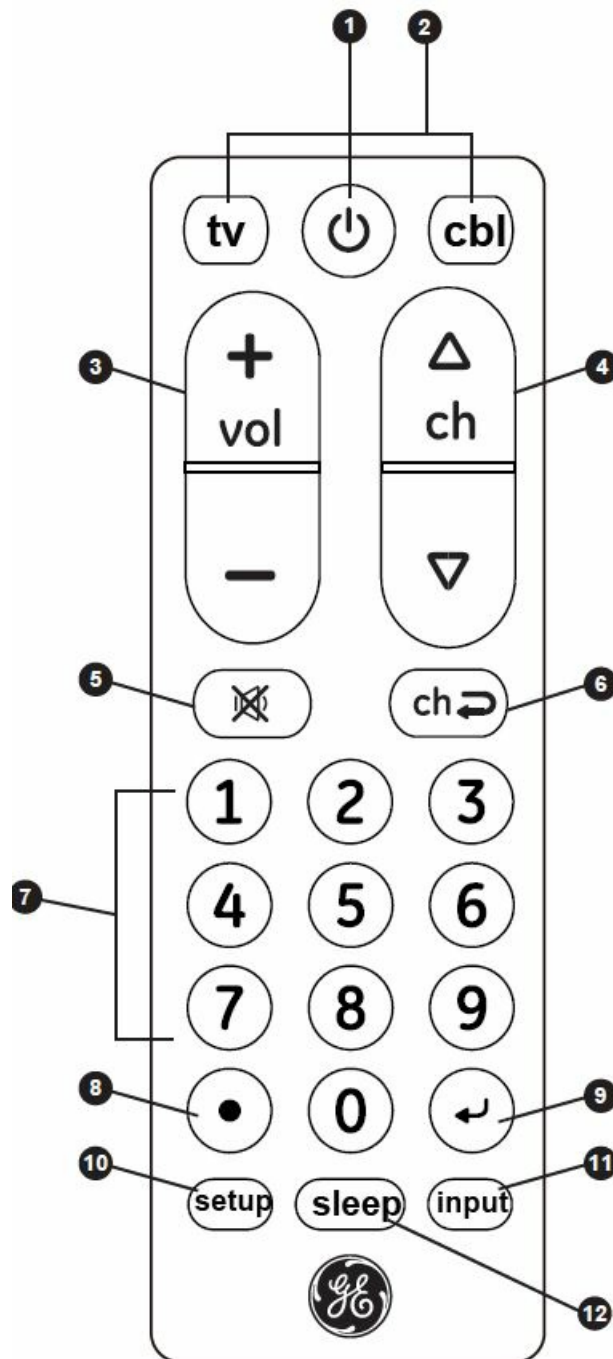

1. Power – Turns devices ON/OFF
2. TV, cbl – Selects the device to control
3. Volume Up/Down
4. Channel Up/Down
5. Mute – Mutes sound
6. Previous Channel – Returns to the previously selected channel
7. Numbers – Used for direct channel selection
8. Dot (•) – Used to select digital channels, e.g., 4.1
9. Enter – Some devices require Enter to be pressed after channel selection
10. Setup – Used to program the remote
11. Input – Selects video inputs
12. Sleep – Turns the device off after a selected period of time
 - This button accesses the preprogrammed sleep timer functions within a device — it does not provide

sleep timer functionality to a device lacking that feature.

DIRECT CODE ENTRY

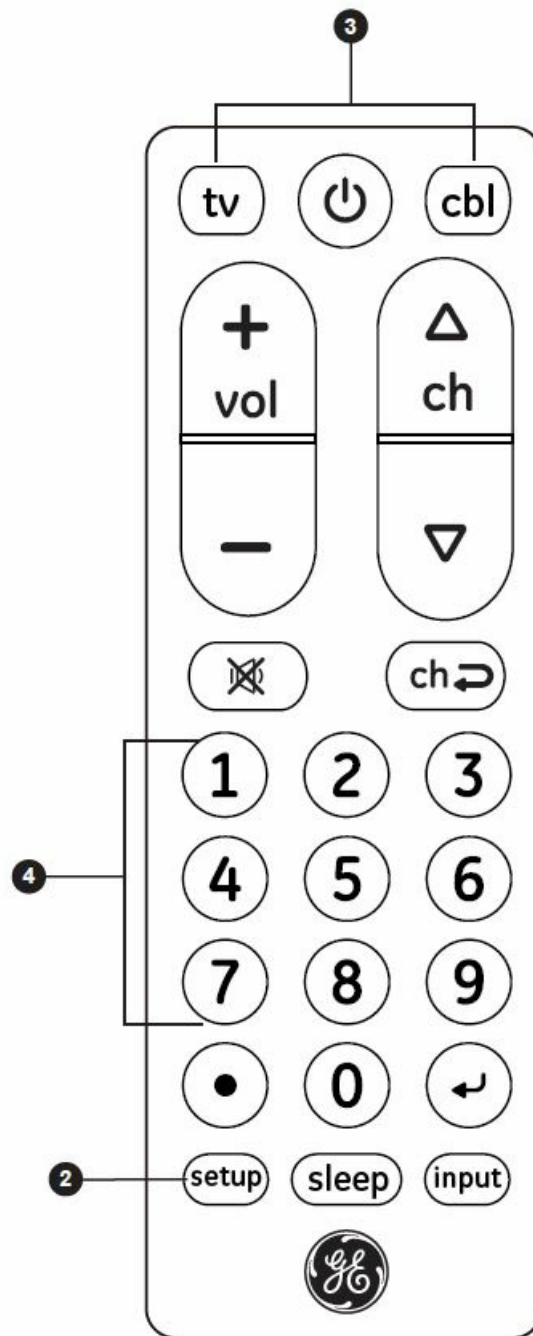

Direct code entry is recommended for quick and easy programming.

Note: The TV device button is preprogrammed for Samsung TVs.

1. In the Code List included with your remote, circle the 4-digit codes for the type and brand of device you wish to control.
2. Press and hold down the SETUP button until the remote's red light turns on. Release the SETUP button. The red light will remain on.
3. Press and release the chosen device button (e.g., TV, cbl). The red light will blink once and remain on.
4. Enter the first 4-digit code circled in Step 1. The red light will turn off.
5. Point the remote at the device and test the buttons. If they don't work as expected, repeat Steps 2-5 with the


next circled code.

6. Repeat the process for each device you wish to control.

Programming Notes

- Some codes may operate only a few device functions, so test other codes for more functionality.
- Trouble finding a code? Program the remote using the auto code search method.
- Keep your device codes for future reference.

AUTO CODE SEARCH

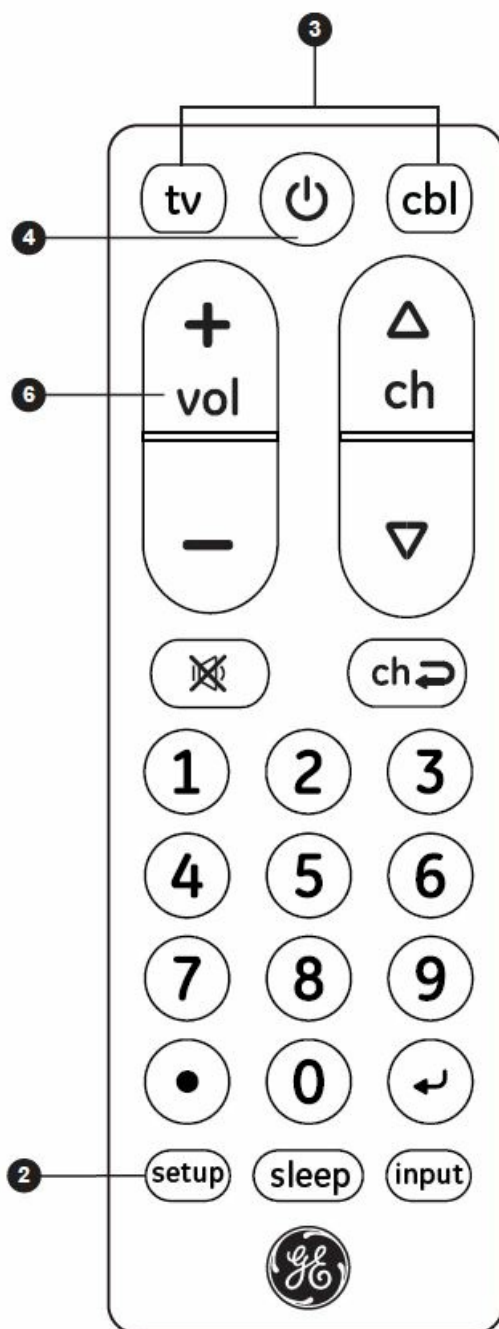

Auto code search cycles through all codes in the remote to find one for your device. Before you begin, read through the steps below to familiarize yourself with the auto code search process.

1. Manually turn on the device you wish to control. (Use direct code entry method for devices without ON/OFF capability.)
2. Press and hold down SETUP until the remote's red light turns on. Release the SETUP button. The red light will remain on.
3. Press and release the chosen device button (eg., TV, cable). The red light will blink once and remain on.
4. Point the remote at the device and press the POWER button. The red light will blink and then remain on after cycling through 10 codes.


Did the device turn off?

- YES – Go to Step 5.
 - NO – Repeat Step 4 to test the next 10 codes.
5. Manually turn on the device.
 6. Point the remote at the device and press the VOL+ button. The red light will blink once and remain on.

Did the device turn off?

- **YES** – Press and release the same device button pressed in Step 3. Then go to Step 7.
 - **NO** – Repeat Step 6 until the device turns off. Wait 3 seconds between each VOL+ button press.
7. Use the remote to turn on the device. Test the remote's buttons. If they don't work as expected, repeat Steps 2-7.
 8. Repeat the process for each device you wish to control.


CODE IDENTIFICATION

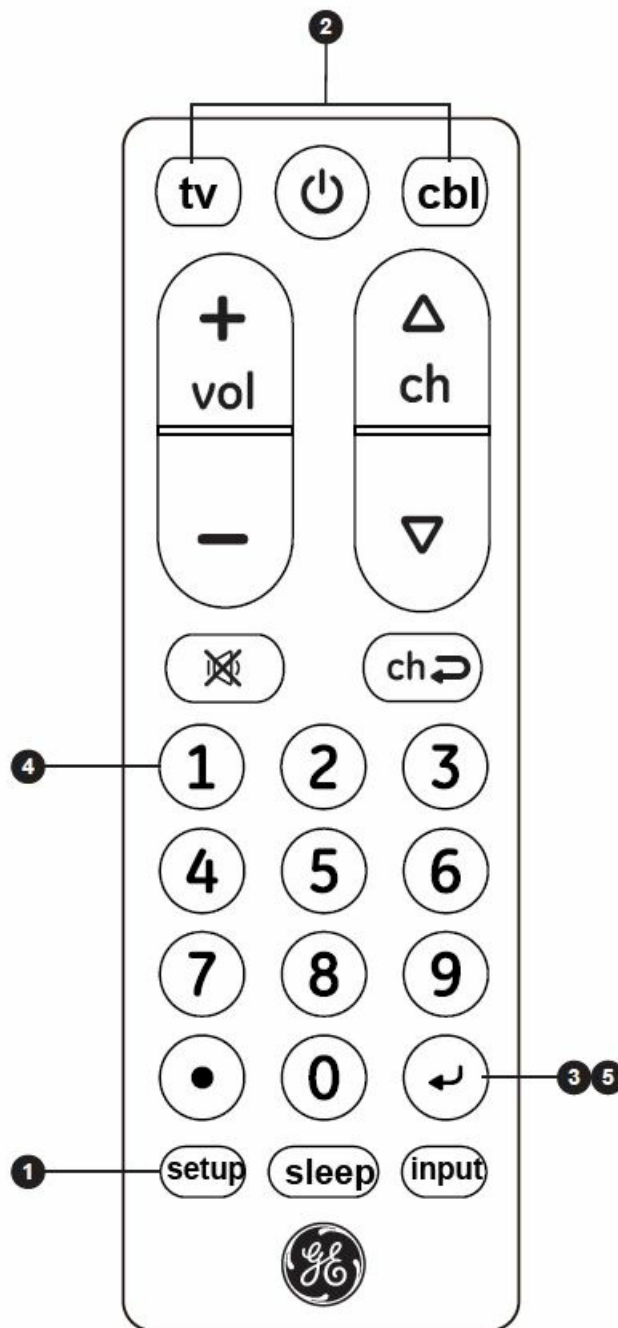

Code identification lets you retrieve the 4-digit code used to program each of your device buttons.

1. Press and hold down the SETUP button until the red light turns on, then release it. The red light will remain on.
2. Press the device button for the code you seek.
3. Press ENTER.
4. Press #1 and count how many times the red light blinks. This is the first digit in your code. Repeat the process by pressing #2, #3, and #4 for the remaining digits.
5. Press ENTER to exit this mode.

MASTER VOLUME CONTROL

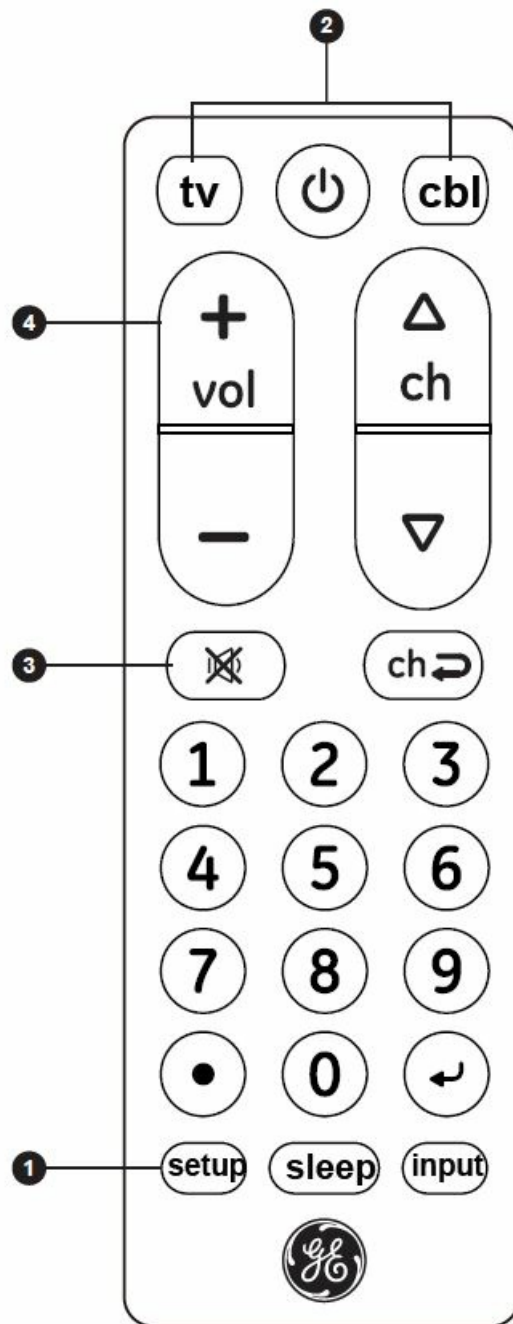

Master volume control lets you select an audio device to control the volume no matter which component you're operating.

Enabling Master Volume Control

1. Press and hold the SETUP button until the red light remains on.
2. Press the device button for the audio component you wish to use.
3. Press the MUTE button.
4. Press the VOL+ button. The red light will blink twice and turn off.

Disabling Master Volume Control

1. Press and hold the SETUP button until the red light remains on.
2. Press the device button programmed for master volume control.
3. Press the MUTE button.
4. Press the VOL- button. The red light will blink twice and turn off..

TROUBLESHOOTING

Remote does not operate your device

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device and make sure there are no obstructions between the remote and the device.
- Make sure you select the appropriate device on the remote you wish to control (TV for TV, cbl for cable, etc.).
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.
- Remote does not operate some features of your device
- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the Code List. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

RESET TO FACTORY SETTINGS

1. Press and hold the setup button until the red light stays on.
2. Press and release the mute button.
3. Press and release 0 (zero). The red light will blink twice.

See reverse for easy-to-follow instructions and exclusive deals.

Thank you for your purchase!

Instructions made easy

Read instructions or watch an easy-to-follow video.



Scan code or visit byjasco.com/33701i.

Register your product

Receive exclusive deals and register your product.



Scan code or visit byjasco.com/deals.

Enhance your home entertainment experience at byjasco.com/ce.

Like our product?

- Leave a review on your favorite
- retailer's website or amazon.com.

 
Having problems?

- 😊 Let us know how we can help.
- ☹️ Call 1-800-654-8483 between 7 AM-8 PM, M-F, Central Time.

CONTACT

- MADE IN CHINA
 - GE is a trademark of General Electric Company and is under license by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.
 - This Jasco product comes with a limited lifetime warranty.
 - **Visit** www.byjasco.com for warranty details.
 - **Questions?** Contact our U.S.-based Consumer
 - Care at 1-800-654-8483 between 7 AM-8 PM,
 - M-F, Central Time.
 - For product patent information,
 - **visit** www.byjasco.com/patents.
 - 33700_33701
 - Man v2
 - 12/22
-

Documents / Resources



[GE APPLIANCES 2 Device Big Button Universal TV Remote Control](#) [pdf] User Manual
2 Device Big Button Universal TV Remote Control, 2 Device, Big Button Universal TV Remote Control, Universal TV Remote Control, TV Remote Control, Remote Control, Control

References

- [amazon.com](#)
- [YouTube](#)
- [Home Entertainment](#)
- [Product Registration](#)
- [Recycling Matters at Jasco](#)
- [Jasco](#)
- [Patents](#)
- [User Manual](#)