




# GE 93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED Instruction Manual

[Home](#) » [GE](#) » [GE 93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED Instruction Manual](#) 

## Contents

- [1 GE 93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



**GE 93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED**



## Product Information

- The Dual Color Microbright Lights are LED lights designed for seasonal use. They come in different models: 93980LO, 93981LO, 93982LO, and 93930LO. These lights are manufactured by Nicolas Holiday Ltd. and are distributed by GV-23.
- The lights are suitable for indoor and outdoor decorations. They feature dual-color technology, allowing you to switch between warm white and multicolor lighting options. The LED lights are energy-efficient and long-lasting.
- The NHLModel No. refers to the specific model number of the lights, while the GV-23 represents the distributor's information. The address of Nicolas Holiday Ltd. is Suite 2706 Skyline Tower, 39 Wang Kwong Road, Kowloon Bay, Kowloon, Hong Kong.

## Product Usage Instructions

1. Choose a suitable location for installing the Dual Color Microbright Lights.
2. Ensure that the power source is compatible with the lights' voltage requirements.
3. Unpack the lights and carefully unravel them to avoid tangling.
4. Plug in the seasonal-use LED driver into a power outlet.
5. Connect the LED driver to the first light strand using the provided connectors.
6. If desired, select the lighting color by using the switch or remote control (if included).
7. Hang or arrange the lights according to your decoration preferences.
8. Secure the lights in place using clips, hooks, or other appropriate fasteners.
9. Inspect the lights for any damaged or broken bulbs before turning them on.
10. Switch on the lights and enjoy their festive illumination!

Remember to follow all safety guidelines and precautions provided in the user manual. Store the lights in a safe

place when not in use to prolong their lifespan.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using electric products, basic precautions should always be followed including the following:

### **READ & FOLLOW ALL SAFETY INSTRUCTIONS**

1. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. Do not use this product for other than its intended use.
4. This seasonal use product is not intended for permanent use or installation.
5. Unplug when leaving the house, when retiring for the night, or if left unattended.
6. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
7. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
8. Do not hang ornaments or other objects from cord, wire, or light string.
9. Do not lace Tinsel string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.
10. Do not perform any maintenance or troubleshoot for bad or broken lamps while the power is on.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when in use.
13. Do not let lamps rest on the supply cord or on any wire.
14. Do not use in a bathroom.
15. Please plug into a 120V 60Hz electrical outlet.
16. Mount the unit at a height greater than 1 foot(0.3m) from the ground surface.
17. Read and follow all instructions that are on the product or provided with the product.

### **SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS**

1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
2. Before storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.
4. When the product is used on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
5. If the product is placed on a tree, the tree should be well secured and stable.
6. Do not impact or drop the transformer, if enclosure is broken or cracked discard product.
7. The product and power unit shall not be installed within 10 feet of a pool, spa, fountain, or other areas of standing water.

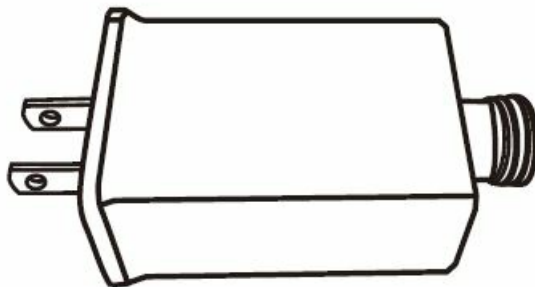
**WARNING:**

1. Do not use where only part of the power unit is protected from rain or water (outlet SIDE boxes where there is only a partial cover shall not be used for outdoor installations).
2. This power unit is intended to be correctly oriented in a vertical or floor mount position.
3. If the connector of this lighting string does not properly fit into the connector of the driver, do not modify the product and discard product if the connector is damaged.

**NOTE:** Use Quality this GE branded,

- **Model** TS-8W29Y, manufactured by Guang Zhou Ting shen
- Electric Co, Ltd that was provided with this product.
- DO NOT use this adapter with any other product.

**NOTE:** LEDs in this set are non-replaceable. Tampering with this set will void the warranty.

**CAUTION:**

1. This lighting string is rated 19.2Watts (0.16Amps), do not overload. GE StayBright® light sets come pre-attached to a plug. For end-to-end connections up to four(4) sets, you will need only one (1) plug. To begin, choose one (1) set as your master set. This set would be the only set connected to a plug. Next, unscrew the coaxial connector between the light set on all of the sets you would connect to your master set. Lastly, connect each set of lights end-to-end using the coaxial connections, screwing each connection cap tightly.  
**Note:** you may only add three(3) additional sets to your master set for a total of four( 4) connected sets.
2. To reduce the risk of fire electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials that look like metal, and b)Do not mount or support strings in a manner that can cut or damage wire insulation.

**FCC**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance

could void the use's authority to operate the equipment.

#### NOTE:


- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radionv technician for help.

For questions and/or assistance, call customer service at 1-877-398-7337 or visit us on the web at [www.GEHolidaylighting.com](http://www.GEHolidaylighting.com)

**FOR INDOOR AND OUTDOOR USE MADE IN CHINA  
PRINTED IN CHINA**

© **Nicolas Holiday lit, Suite 2706 Skyline** Tower, 39 Wang Kwong Road, Kowloon B 2023 ay, Kowloon , HongKong All rights reserved

#### Documents / Resources

	<p><a href="#">GE 93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED</a> [pdf] Instruction Manual</p> <p>93980LO Color Choice 150 Count 43.4-ft Multi Function Color Changing LED, 93980LO, Color Choice 150 Count 43.4-ft Multi Function Color Changing LED, Function Color Changing LED, Color Changing LED, Changing LED, LED</p>
---	--