

GeckoMan BUGZILLA2201 Electrical Sparks User Manual



Attentions

- The product generates electrical sparks during operation. Keep away from flammable materials, gases, and explosive dust. ng operation
- Avoid touching the electric grid with your hands or metal objects during use Keep out of reach of children.
- Do not wipe the electric grid with water or a damp cloth. Keep the product dry.
- When not in use, switch the device to the “O” position to turn it off.

Instructions

Rotating the Mesh Push the bottom of the mesh to one side to rotate it and adjust the

angle for optimal use.

Switch Operation

- Off Mode: Slide the long switch to the bottom position to turn the device off
- Manual Mode: Slide the long switch to the middle position. Press the square button to activate the electric grid.
- Auto Mode: Slide the long switch to the top position to keep the electric grid continuously active.

Using the Extension (For models with an extension)


When using the extension wand, switch the device to Auto Mode. In this mode, The electric grid will remain active, and you do not need to press the square button.

Auto Mode Notes

- Ensure that the fly swatter's light is the only light source in the room.
- If you intend to use it overnight, plug in the charging cable to ensure sufficient **battery power**.
- The automatic mode (UV light) is an auxiliary method of mosquito control. Due to its limited power, it is not as effective as a professional bug zapper.

Charging Instructions

- The product does not come with a charger. You may use any standard phone Charger to charge the device.
- When charging, the indicator light will be red. It takes about 2 hours to fully Charge. Once fully charged, the indicator light will turn green,
- charge. fully charged, the light will turn green,
- If the device is not used for an extended period, please charge it every three months to extend battery life.

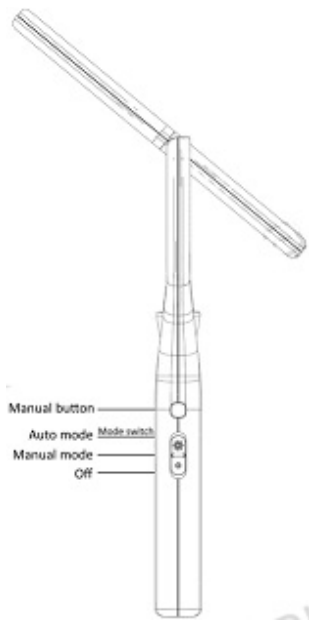

Satisfaction Guaranteed Question, return, refund or warranty claim please contact us at support@geckoman.net

Manufactured for

GeckoMan LLC, Sheridan, WY 82801, USA

Manufacture Part Number: BUGZILLA2201 Manufacture

Symbols



EPA Est No. 100514-CHN-1



UK Authorized Representative

Company name: YH Consulting Limited

Address: C/O YH Consulting Limited Office 147,

Centurion House, London Road, Staines-upon-Thames Surrey, TW18 4AX, London

Mail: H2YHUK@gmail.com


Phone: +44 07514-677868

Contents [[hide](#)]

[1 Documents / Resources](#)

[1.1 References](#)

Documents / Resources

	<p>GeckoMan BUGZILLA2201 Electrical Sparks [pdf] User Manual</p> <p>BUGZILLA2201, BUGZILLA2201 Electrical Sparks, BUGZILLA2201, Electrical Sparks, Sparks</p>
---	---

References

- [User Manual](#)

🔍 BUGZILLA2201, BUGZILLA2201 Electrical Sparks, Electrical Sparks, GeckoMan,

📁 GeckoMan Sparks

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.