

Geefuun 100-LED Christmas Snowflake String-Lights User Guide

Home » Support » Geefuun 100-LED Christmas Snowflake String-Lights User Guide 🖫

Contents

- 1 Geefuun 100-LED Christmas Snowflake String-
- Lights
- **2 INTRODUCTION**
- **3 SPECIFICATIONS**
- **4 WHAT'S IN THE BOX**
- **5 FEATURES**
- **6 SETUP GUIDE**
- **7 CARE & MAINTENANCE**
- **8 TROUBLESHOOTING**
- 9 PROS & CONS
- **10 WARRANTY**
- 11 FREQUENTLY ASKED QUESTIONS
- 12 References



Geefuun 100-LED Christmas Snowflake String-Lights



INTRODUCTION

Add the Geefuun 100-LED Christmas Snowflake String Lights to your winter paradise and celebrate the charm of the season! This Christmas set, which was introduced by Geefuun and is reasonably priced at \$15.99, comes with two packs of lights, each measuring 42.6 feet and totalling 100 white LED snowflake lights. With two lighting modes—steady on and flashing—these battery-operated lights (batteries not included) are ideal for both indoor and outdoor use, allowing you to create any kind of décor. Because they are made of premium epoxy resin, the snowflakes are strong and resilient to the demands of seasonal decorating. You can simply shape the string around Christmas trees, windows, doorways, and other objects because the wire is malleable. The snowflake lights from Geefuun will add glistening charm and cosiness to your Christmas setup, whether you're decorating for a festive party or having a little family get-together. With each sparkle, create memories that will last a lifetime!

SPECIFICATIONS

Product Name	Geefuun 100-LED Christmas Snowflake String Lights	
Price	\$15.99	
Brand	Geefuun	
Color	White	
Material	Epoxy Resin (high hardness snowflakes)	
Light Source Type	LED	
Power Source	Battery Powered (3 AA batteries per pack, 6 AA batteries total, not included)	
Total Length	42.6 feet (for 2 packs combined)	
Snowflake Size	1.54 inches diameter	
Number of LEDs	100 Snowflake LEDs (across 2 light strings)	
Modes	2 Modes: Steady On / Flashing	
Flexibility	Bendable wire for custom shaping	
Indoor/Outdoor Usage	Yes (Note: battery case not waterproof)	
Special Features	2-way switching, flexible wire, battery operated for portable decorating	
Use Locations	Christmas trees, tabletops, door frames, railings, gardens, weddings, windows	
Care Notes	Snowflakes may detach; reattach with glue if needed; supervise children; avoid water	
Photography Note	Snowflake light color may appear different with camera filters	

WHAT'S IN THE BOX

- String-Lights
- User Guide

FEATURES

• 100 LED Lights: For a cheery, festive ambiance, each set contains 100 white LED snowflake lights.



- Two Packs Included: With two distinct light strings included in the kit, you may double your decorating possibilities.
- Each Pair is a Generous 42.6 Feet Long: Making it perfect for wrapping, hanging, or draping over wide spaces.
- Snowflake Design: For a mystical winter mood, this design features cute snowflake symbols with a diameter of 1.54 inches.
- Battery Powered: Each string is cordless and runs on three AA batteries (6 AA total for two packs).
- Two Light Modes: To create the ideal mood, there are steady-on and flashing modes available.
- Flexible and Bendable Wire: Silver wire may be readily bent to form unique patterns and shapes.
- High Hardness Epoxy Resin: Baked epoxy resin is used to create each snowflake, giving them strength and durability.
- Non-Waterproof Battery Case: Safe for indoor use; make sure the battery pack stays dry when used outdoors.
- Simple Battery Access: The "Open" label and buckles are clearly indicated for easy access to the battery compartment.
- Indoor and Outdoor Use: Perfect for fences, windows, doorways, Christmas trees, gardens, and more.
- No Plugs Required: This portable decoration may be placed anywhere without worrying about outlets.
- Festival Gift Option: This is a lovely way to give friends or family a holiday present.
- Warm White Color: Gives off a comforting white light (note that it may seem differently in photographs that have filters applied).

• Lightweight for Hanging: This makes it simple to hang delicate decorations anywhere.



Note: The snowflake light string will have the problem of tangling and knotting, it takes a little patience to open it!

SETUP GUIDE

- Unpack Gently: To prevent tangling or breaking the wire, carefully unpack both string lights.
- Installing Batteries: Place three AA batteries in each battery box, making sure they are polarized correctly.
- Properly Open the Battery Compartment: To unlock, press "Open" on the lid and move in the direction of the arrow.
- **Untangle Slowly:** The string lights may knot during packaging, so take your time untangling them.
- Test Light Modes: After putting in the batteries, check the flashing and steady-on modes.
- Select Display Area: Choose whether to install on trees indoors or on railings or fences outdoors.
- Secure the Battery Case: For convenient access, keep the battery case in a place that is both hidden and easily accessible.
- Shape and Bend as Needed: To make unique arrangements or wrap items, gently bend the flexible wire.
- Anchor with Hooks or Clips: To securely fasten the string lights, use transparent tape, adhesive hooks, or clips.
- Distribute Lights Evenly: For a well-balanced and eye-catching display, place the lights evenly.
- **Protect Battery Pack Outside:** If the battery pack is outside, use a waterproof container or plastic bag to protect it from the rain.

- Blend with Foliage: For a smooth appearance, wrap lights around wreaths, garlands, or foliage.
- Build Layers: For larger presentations, use both light strings to produce layered effects.
- Change Lighting Modes: Depending on the situation, change the lighting mode from flashing for exciting gatherings to stable for calm evenings.
- Make a Final Check: Walk around your setup to make sure all of the lights are functioning correctly and appear the same.

CARE & MAINTENANCE

- Store Properly: After use, store the lights properly by coiling them loosely to prevent tangling.
- Remove Batteries for Storage: Always remove batteries to avoid corrosion or leaks.
- Clean Gently: Use a dry towel to gently wipe the wires and snowflake icons.
- Prevent Water Exposure: The battery pack is not waterproof, therefore keep it dry at all times.
- Handle Carefully: Although snowflakes are resilient, severe handling can shatter them.
- Use Indoors in the Rain: To prolong the life of the decorations, relocate them inside if it is raining or snowing.
- Secure Connections: Make sure the battery case is correctly closed and operating by checking it on a regular basis.
- Fix Falling Snowflakes: Use a tiny bit of transparent glue to repair any snowflakes that break off.
- Check Before Use: Check for loose snowflakes or damaged lights before putting up each season.
- Store in a Cool, Dry Location: When not in use, keep the lights out of the direct sunlight and moisture.
- Replace Weak Batteries: To keep lights bright, change all of the batteries at once if they are flickering or dimming.
- Don't Stretch Too Much: Although the wires are flexible, don't stretch them too much to keep them from breaking.
- Use Low Power Batteries: For more reliable and long-lasting illumination, use premium AA batteries.
- Watch Over Kids: Make sure kids handle or install the lights only while an adult is watching.
- Avoid Rough Unpacking: To avoid harming the fragile wire, always open box cautiously.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Lights not turning on	Dead or incorrectly inserted batter ies	Replace or correctly install batteries
Only half of the lights work	Loose connection inside battery b ox	Reopen and adjust battery positioning
Lights flicker unexpectedly	Low battery power	Replace all batteries with fresh ones
Snowflakes falling off	Weak glue due to heat or aging	Reattach using clear craft glue
Flashing mode not functioning	Switch not properly set	Toggle switch again to ensure correct m ode
Lights too dim	Batteries are running low	Install new batteries
Battery box overheating	Faulty batteries or prolonged usag e	Replace batteries and allow cooling time
Wire difficult to straighten	Tightly coiled packaging	Gently uncoil and straighten before use
Lights stop during decoration	Battery box loose or open	Secure battery compartment tightly
Snowflakes look colored in phot os	Camera filter effect	Use no filter for accurate color capture

PROS & CONS

PROS

- · Two lighting modes flashing and steady-on
- Flexible, bendable wire for custom decorating
- · Battery powered for easy, cordless setup
- Durable epoxy resin snowflakes for lasting use
- Long 42.6-foot total length, ideal for large spaces

CONS

- Batteries not included (needs 6 AA batteries total)
- · Snowflakes may detach over time without extra glue
- The battery box is non-waterproof (indoor or sheltered use recommended)
- String lights can tangle easily when unpacking
- Snowflake colour may appear different in filtered photos

WARRANTY

Geefuun offers a **30-day satisfaction guarantee** on their 100-LED Christmas Snowflake String Lights. If you encounter any issues such as manufacturing defects, missing parts, or damage upon arrival, you can request a full refund or replacement within 30 days of purchase. For warranty claims, customers must provide proof of purchase and contact Geefuun's customer support through the seller page on Amazon. The warranty does not cover user damage, exposure to water, or normal wear and tear.

FREQUENTLY ASKED QUESTIONS

What is the total length of the Geefuun 100-LED Christmas Snowflake String Lights?

The Geefuun 100-LED Christmas Snowflake String Lights have a total length of 42.6 feet, perfect for both indoor and outdoor decorating.

How many LED lights are included in each set of Geefuun 100-LED Christmas Snowflake String Lights?

Each package of Geefuun 100-LED Christmas Snowflake String Lights contains two strings with a total of 100 LED snowflake lights combined.

What powers the Geefuun 100-LED Christmas Snowflake String Lights?

The Geefuun 100-LED Christmas Snowflake String Lights are battery powered, requiring 6 AA batteries in total (3 for each string), which are not included.

How many lighting modes are available on the Geefuun 100-LED Christmas Snowflake String Lights?

The Geefuun 100-LED Christmas Snowflake String Lights offer two lighting modes: flashing and steady on, easily controlled via the battery box switch.

How do you open the battery compartment on the Geefuun 100-LED Christmas Snowflake String Lights?

To open the battery compartment on the Geefuun 100-LED Christmas Snowflake String Lights, locate the open sign, press gently on it, and slide the lid toward the arrow direction.

What should I do if a snowflake falls off the Geefuun 100-LED Christmas Snowflake String Lights?

If a snowflake falls off your Geefuun 100-LED Christmas Snowflake String Lights, you can simply reattach it using glue (not included), as the adhesive may weaken over time.

Why do the snowflake lights on the Geefuun 100-LED Christmas Snowflake String Lights look a different color in pictures?

When photographed with a camera filter, the color of the Geefuun 100-LED Christmas Snowflake String Lights might appear different; without a filter, the lights are a true white.

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.