



Geehy APM32F072VB Mini Board User Manual

[Home](#) » [Geehy](#) » Geehy APM32F072VB Mini Board User Manual 

Contents

- [1 Geehy APM32F072VB Mini Board](#)
- [2 Performance](#)
- [3 Interface and Resources](#)
- [4 Appearance](#)
- [5 Schematic Diagram](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Geehy APM32F072VB Mini Board



Performance

- 32 bit Arm® Cortex® M0+
- Max frequency: 48MHz
- Flash: 128KB
- SRAM: 16KB

Interface and Resources

- USB: 1 (Type B)
- SWD: 1
- LED: 2
- KEY: 2
- RESET KEY: 1
- GPIO: 81
- USART: 1 (Switch to USART1 or USART2 by jumper)

Start

1. Ensure a solid connection for jumper J6, J8, J9 and J10.
2. Connect the USB in development board with PC by a USB Type B cable and power the development board.
3. Connect the emulator with SWD interface for MCU programming and debugging.

System Requirements

- Windows OS (7/8/10)

Development Tool

- Keil: MDK ARM

Appearance



Schematic Diagram

Refer to APM32F072VB MINIBOARD V1.0.0 PDF

Geehy Semiconductor Co.,Ltd.

Bldg.1, No.83 Guangwan Street, Zhuhai, Guangdong, China

+86 0756 62999999

www.geehy.com

Documents / Resources

	Geehy APM32F072VB Mini Board [pdf] User Manual APM32F072VB Mini Board, APM32F072VB, Mini Board, Board
--	---

References

- [G geehy.com](http://www.geehy.com)