



Geek Aire CF1SE Portable Cordless Fan Instruction Manual

[Home](#) » [Geek Aire](#) » Geek Aire CF1SE Portable Cordless Fan Instruction Manual 

Contents

- [1 Geek Aire CF1SE Portable Cordless Fan](#)
- [2 Specification](#)
- [3 Important Safety Introductions](#)
- [4 Product Description](#)
- [5 Clean And Maintenance](#)
- [6 Troubleshooting](#)
- [7 Warranty](#)
 - [7.1 This Limited Warranty Does Not Apply To](#)
- [8 FAQ's](#)
- [9 Related Posts](#)



Geek Aire CF1SE Portable Cordless Fan



Specification

Model	CF1
Voltage	24V DC
Re-Charge Time	2.5-3Hrs
Duration Time	3.5-24 Hrs
Power	25 Watts

Important Safety Introductions

Thank you for choosing our products. This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference.

Intended Use

This product is intended to circulate the air in indoor and outdoor spaces. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

Warning: Risk To Children And Impaired Persons

Supervision is required during the installation, operation, cleaning, and maintenance of this product by children and anyone with reduced physical, sensory, or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts, and packaging material.

Safe Use Warning— To reduce the risk of fire, electrical shock, and injury to persons, observe the following

This fan is designed to be powered by a 24-volt AC/DC power adapter or the Li-ion battery pack built into the product. Do not attempt to use it with any other power supply.

1. When using this product, please refer to the description in this manual. Other unauthorized use may cause fire, electric shock, or injury.
2. Please put the fan out of children's reach. This product is not for children to use alone.
3. Please turn off the fan when moving and leaving.
4. Please place the fan on a horizontal, stable, and stable surface to avoid overturning.
5. When using the fan, do not put fingers, pens, or other objects into the net cover.
6. Unplug the power plug before cleaning the fan.
7. Do not disassemble, modify or use for other purposes.
8. Do not expose the battery to liquid, and do not let the battery suffer a strong impact.
9. Do not plug the charger into or out of the power socket with wet hands.
10. Do not operate the fan without the protection of the mesh cover, as it may cause serious personal injury.
11. If the charger or power cord is damaged, it must be replaced by the manufacturer or its service agent or a person with similar qualification to avoid danger.
12. The charger provided by us is special, and no other charger can be used.
13. Please do not use the charger provided by us to charge other products, because the charger is dedicated.
14. In order to reduce the risk of fire or electric shock, please do not use any solid-state governor to control the fan.
15. Before inserting the power supply, make sure that the voltage and frequency of the power supply are the same as those shown on the charger label.
16. Do not put the fan in the fire, because there is a battery in the fan, which may explode.
17. The continuous charging time shall not exceed 24 hours, and the charger shall be unplugged after charging.
18. Do not remove or modify the fan battery.
19. When cleaning the fan, first discharge the power of the fan until the product does not run and is not in the state of charging, then remove the net cover and the fan blade, wipe off the oil stain and dust trace with a soft cloth moistened with detergent or alcohol (never use gasoline or other corrosive liquid to plastic and paint), and then use a dry cloth to wipe off, pay attention not to collide with the fan blade and change the angle of the fan blade.
20. The user is not allowed to dismantle and replace the internal parts of the fan at will. In case of any fault, the user must contact the after-sales service department for maintenance.
21. Do not forget to shut down and charge.
22. This product can only be charged indoors.
23. Do not incinerate this fan and its batteries, even if it is severely damaged. The batteries can explode in a fire.

Disposal

We actively encourage you to participate in the electronic recycling program, so please properly dispose of waste electronic products in accordance with local regulations, and do not treat the products as household garbage.

FCC Consumer Advisement

This equipment may generate, use, and/or radiate radio frequency energy that may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. / Increase the separation between the equipment and receiver. / Connect the equipment to an outlet on a circuit different from that to which

the receiver is connected. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the product.


Product Description




2500mAh x6 cells
LITHIUM-ION BATTERY



 IPX4
FOR OUTDOOR USE





BLDC
COPPER MOTOR

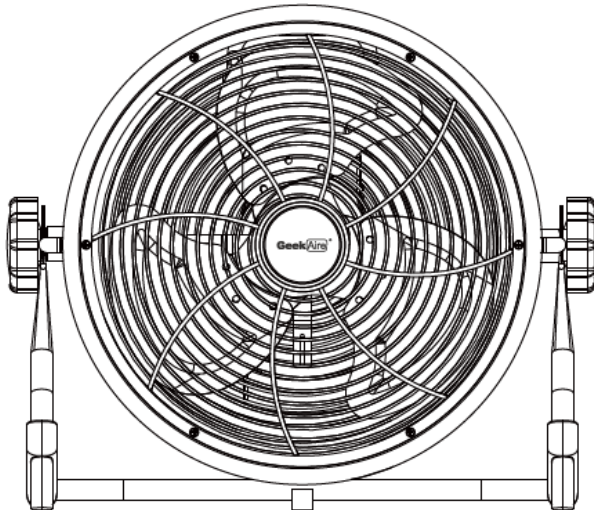 


Power Charger

Adjusting Fan Angle

   To adjust the fan angle, grasp the fan by the back handle and tilt the fan forwards or backward. The fan can pivot to a range of 120°.

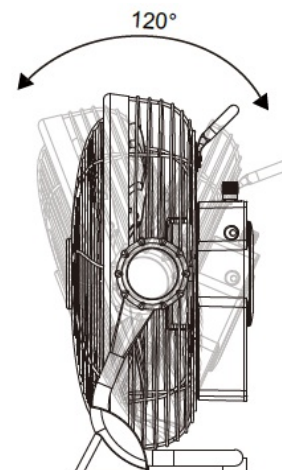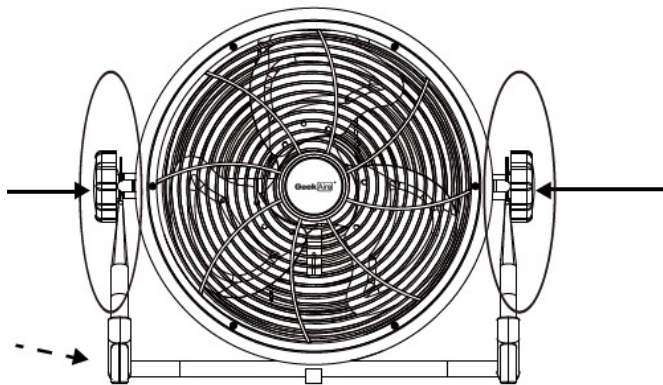

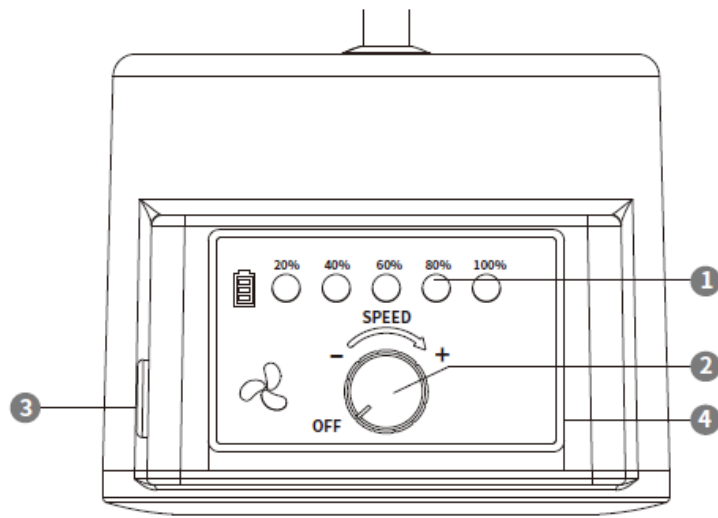

1. Power Indicator Light

There are 5 LED lights to indicate the battery gauge in every 20%. The light will blink if the battery is in charging status. When the battery is fully charged, all lights will be on and stop blinking. When battery power is between 20% – 40%, the first indicator light will leave in red to remind recharging. When battery power is below 20%, all lights will be off, please use the power charger to recharge.

2. Rotary Switch

 
To turn the fan On, rotate the switch from “off” to “+”. This fan has a variable speed setting. Rotate the switch clockwise (+) or counterclockwise (-) to adjust the speed. To turn the fan Off, return the control switch to “off”.

3. Power Supply Jack

When used with the power charger, connect the power cord to the power supply jack, and plug the charger into a suitable electrical outlet.

4. USB Charging Port

The USB charging port on the control box can be used to recharge digital devices such as smartphones (USB cable NOT included). The output of the USB port is 5V 1A.

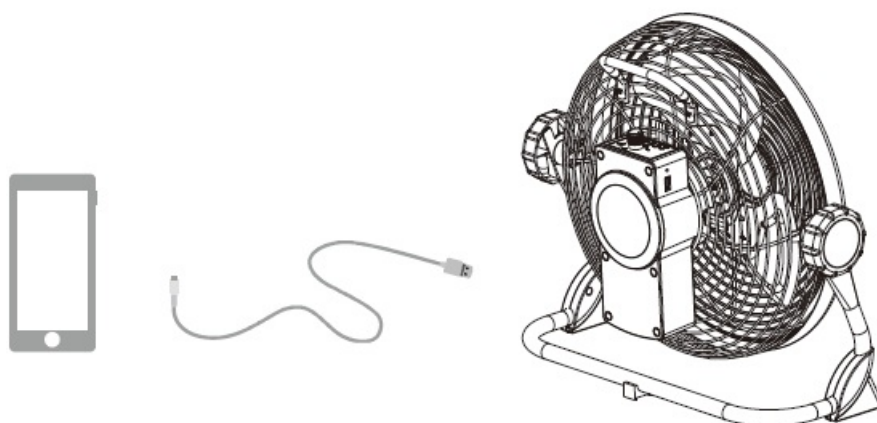

Clean And Maintenance

Before cleaning, firstly discharge the battery until the fan does not run, make sure it is not in the state of charging and unplug. Do not use gasoline, thinners, solvents, ammonia, or other chemicals for cleaning. Pay attention not to collide with the fan blade and change the angle of the fan blades

Cleaning The Grill

Always turn off the fan and disconnect the power supply from the fan before cleaning. Clean the fan grill periodically with a vacuum cleaner.

Maintenance

When the product is not used, it shall be placed in a dry and ventilated environment. When the product is not used for a long time, it shall be fully charged within 3 months.

Troubleshooting

PROBLEM	CASE	POSSIBLE CAUSE	SOLUTION
The fan is not turning on	If Power Indicator Light is OFF	The unit has ran out of battery	Use the charger to recharge the unit
	If Power Indicator Light is ON	Motor malfunction	Please contact customer service
	The unit only works with the power charger	Battery malfunction	Please contact customer service
Battery fails to get charged	If Power Indicator Light is OFF	Check the socket if the power is disconnected	Replace the power socket
		The power charger is malfunctioned	Replace the power charger
	If Power Indicator Light is ON	Battery malfunction	Please contact customer service
The power charger overheated during charging	/	The power charger might be of have lost contact to the power socket	Replace the power socket
		The power charger is malfunctioned	Replace the power charger
The battery life is too short	/	The battery is not fully charged	Charge the battery more than 2.5 hours
		Exceed battery lifespan	Please contact customer service
Can NOT change the speed	Check the Rotary Switch	PCB malfunction	Please contact customer service

PROBLEM	CASE	POSSIBLE CAUSE	SOLUTION
All indicator lights flash at the same time	/	PCB malfunction	Turn the rotary switch off to reset
USB port fails to charge digital devices	Check the battery status	The USB cable might have loose contact to the USB port	Replace the USB cable
		PCB malfunction	Please contact customer service
The fan speed is sometimes fast and sometimes slow or stops intermittently	Check the battery status	It is difficult to start when the battery is less than 20%	Charge the battery for more than 2.5 hours
		Motor or PCB malfunction	Please contact customer service

Warranty

HOME EASY LTD warrants to the original consumer or purchaser this Geek Aire Rechargeable Outdoor High-Velocity Fan (“**Product**”) is free from defects in material or workmanship for a period of one (1) year from the date of purchase. If any such defect is discovered within the warranty period, HOME EASY LTD, at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in the United States.

For warranty or repair service: Call **844-801-8880** and choose the appropriate prompt or email info@homeeasy.net. Please have your Product’s model number, your name, address, city, state, zip code, and phone number ready.

No other warranty is applicable to this product. This warranty is in lieu of any other warranty, express or implied. Including without limitation, any warranty of merchantability or fitness for a particular purpose. To the extent, any implied warranty is required by law. It is limited in duration to the express warranty period above. Neither the manufacturer nor its U.S. distributor shall be liable for any incidental, consequential, or indirect. Special, or punitive damages of any nature. Including without limitation. Lost revenues or profits, or any other damage whether based on contract, tort, or otherwise, some states and/or territories do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts. So, the above exclusion or limitation may not apply to you. This warranty gives you, the original purchaser, specific legal rights and you may also have other rights that vary from state to state or territory to territory.

This Limited Warranty Does Not Apply To

1. Failure of the product to perform during power failures and interruptions or inadequate electrical service
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance.
Improper use includes using an external device that alters or converts the voltage or frequency of electricity
5. Any unauthorized product modification, repair by an unauthorized repair center, or use of non-approved replacement parts.
6. Normal maintenance as described in the User’s Guide, such as cleaning or replacing filters, cleaning coils, etc.
7. Use of accessories or components that are not compatible with this product.

FAQ’s

What is the Geek CF1SE Aire Fan?

The Geek CF1SE Aire Fan is a portable and compact personal fan designed to provide cooling and airflow in various settings.

How does the Geek CF1SE Aire Fan work?

The fan operates by drawing air in through the front and expelling it through the vents, creating a refreshing breeze.

What power source does the Geek CF1SE Aire Fan use?

The fan is usually powered by a rechargeable battery, which can be charged via USB or using a power adapter.

How long does the battery last on a single charge?

The battery life of the Geek CF1SE Aire Fan varies depending on the fan speed setting and usage. Typically, it can last several hours to a whole day on a full charge.

How many fan speed settings does the Geek CF1SE Aire Fan have?

The fan usually offers multiple speed settings, allowing you to adjust the airflow according to your preference.

Is the Geek CF1SE Aire Fan portable?

Yes, the fan is designed to be portable and easy to carry. It is compact in size, making it convenient for use at home, office, or while traveling.

Does the Geek CF1SE Aire Fan have a timer function?

Some models of the Geek CF1SE Aire Fan may offer a timer function, allowing you to set a specific duration for the fan to operate before automatically turning it off.

Can the fan oscillate or rotate?

Yes, some versions of the Geek CF1SE Aire Fan may have an oscillation feature, allowing the fan head to rotate and distribute airflow in a wider area.

Is the fan noise level adjustable?

The noise level of the Geek CF1SE Aire Fan may vary depending on the fan speed setting. Higher speed settings may produce more noise than lower ones.

How do I clean the Geek CF1SE Aire Fan?

To clean the fan, you can use a soft cloth or brush to remove dust and debris from the fan blades and exterior. Avoid using water or liquid cleaners on the fan.

Download this PDF link: [Geek CF1SE Portable Cordless Aire Fan Instruction Manual](#)