



Geek Chef 4 Slice Electric Toaster Instructions

[Home](#) » [Geek Chef](#) » Geek Chef 4 Slice Electric Toaster Instructions 

Geek Chef

Contents

- [1 Geek Chef 4 Slice Electric Toaster](#)
- [2 How to Use](#)
- [3 Documents / Resources](#)

Geek Chef 4 Slice Electric Toaster



How to Use

1. Insert the bread
2. Press down the toaster lever

3. Set the shade knob



4. Toast finished, auto pop up!

5. Slide-out the removable crumb tray and clean it.

6. 360° rotate cord of the toaster base easy for store.



Documents / Resources

	Geek Chef 4 Slice Electric Toaster [pdf] Instructions EC-TR-4223, 761016300774, 0761016300774, 1008842347, 4 Slice Electric Toaster, Electric T oaster, Toaster
---	--