

Geek Chef GTS4B-2 1650W 4 Slice Extra Wide Slot Toaster **Instructions**

Home » Geek Chef » Geek Chef GTS4B-2 1650W 4 Slice Extra Wide Slot Toaster Instructions



Contents

- 1 Geek Chef GTS4B-2 1650W 4 Slice Extra Wide Slot **Toaster**
- **2 Product Description:**
- 3 Documents / Resources
- **4 Related Posts**



Geek Chef GTS4B-2 1650W 4 Slice Extra Wide Slot Toaster



Product Description:

- · Stainless steel housing
- · Cancel, Bagel, Defrost functional options
- · Dual independent control panels
- 6 Bread shade settings
- 1.5 inch Extra Wide Slots for Bagels and thicker bread
- Double High Lift Level
- 2 Removable Crumb Trays in back



- 1.5" EXTRA-WIDE 4-SLOT TOASTER Extra Wide 4-slice Toaster for you, toasting thin bread, thick bagel, English Muffin with Easy!
- CANCEL, BAGEL and DEFROST It features with Cancel, Bagel, and Defrost functions. Toasting the bread easy by pressing the button, breakfast will be ready fast. One press "CANCEL" to stop toasting, "Bagel" for thick bread/bagels, and "Defrost" for recover room temp.
- 6 TOAST SHADE SETTINGS 6-level settings and Automatic Pop-Up Toaster -6 accurate shade modes for your option to prepare your favorite taste bread. Warm-up, light brown, golden brown, crispy, and dark satisfied with your taste.
- DUAL INDEPENDENT CONTROL PANELS Dual Independent Control Panels It equivalent to 2 toasters,
 prepare breakfast twice fast than a 2-slice toaster! Easy to Clean with Removable Crumb Tray!
- Toasting bread faster and efficient, save time and prepare breakfast for your family members in minutes.

• Each panel has 3 Function Buttons: CANCEL, BAGEL, DEFROST. And a 6 Bread shade settings knob.



Slot in Width: 1.5 inchSlot in Length: 5.47 inch

- Wide Slots make it easy to toast a bagel, thicker bread, and English muffins.
- · Auto Pop-up, easy take out and don't worry to get scalded



- On the back of the toaster is 2 removable crumb trays for you to easily cleanup the toaster.
- You don't have to put upside down the toaster to clean it, cleaning becomes easy by sliding out the tray.



- The cord can be rotated under the bottom of the toaster for store.
- · Save space on your counter.



Documents / Resources



<u>Geek Chef GTS4B-2 1650W 4 Slice Extra Wide Slot Toaster</u> [pdf] Instructions GTS4B-2, 1650W 4 Slice Extra Wide Slot Toaster, GTS4B-2 1650W 4 Slice Extra Wide Slot Toaster

Manuals+,