

# geemarc AMPLIDECT 595 PHOTO Cordless Big Button Answerphone User Guide


Home » geemarc » geemarc AMPLIDECT 595 PHOTO Cordless Big Button Answerphone User Guide 🖺




Cordless Big Button Answerphone User Guide




# QUICK USER GUIDE Base

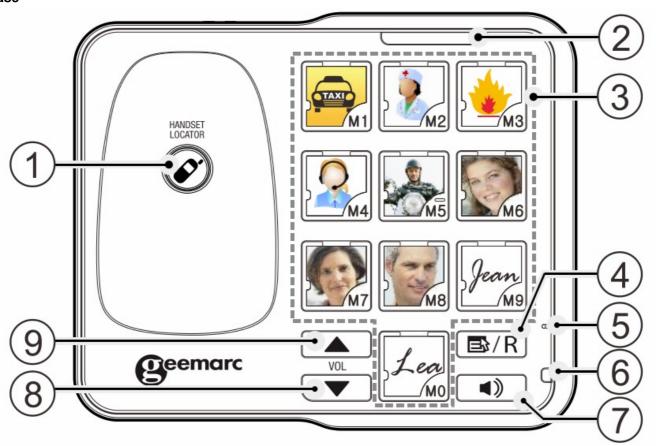

Handset

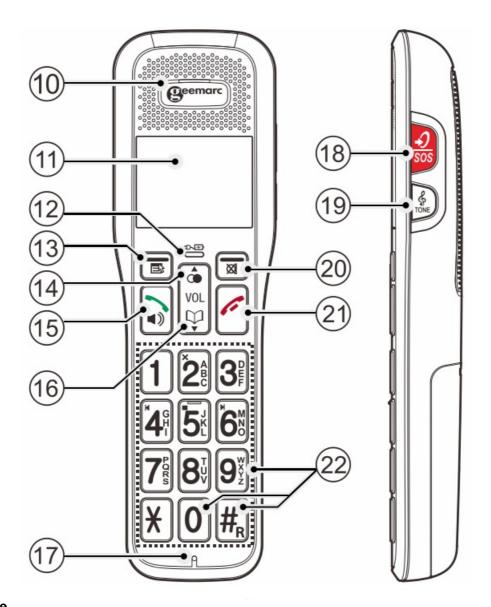

**Connection base** 

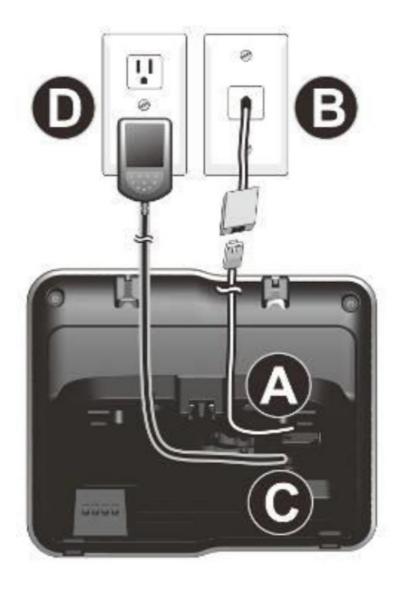

!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

#### **Contents**

- 1 PACKAGE CONTENTS
- **2 INSTALLATION**
- **3 OVERVIEW**
- **4 FIRST USE OF YOUR**
- **HANDSET**
- **5 MENU SETTING**
- 6 Handset
- **7 HANDSET REGISTRATION**
- **8 INTERCOM**
- 9 PHONEBOOK
- 10 SOS EMERGENCY CALL
- 11 REMOTE OPERATIONS
- 12 ALARM function
- 13 Talking Digits.
- 14 TECHNICAL
- **SPECIFICATIONS**
- 15 MAINTENANCE
- **16 GUARANTEE**
- 17 DECLARATIONS:
- 18 Documents / Resources
  - 18.1 References
- **19 Related Posts**

# **PACKAGE CONTENTS**

1 Telephone base, 1 cordless Handset, 1 power adapter, 1 Telephone line cord, 3 NiMh batteries, 1 Quick user guide.

### **INSTALLATION**

# Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B). Connect the power adapter jack to the base (and DC charger) (C) then connect the power adapter plug-in mains power (D). Note: Use only the power adapters supplied with the phone.

#### Connecting the battery

Slide the battery cover downwards. Install the 3 batteries into the socket as indicated, matching the correct polarity(+,-).

Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

#### Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

#### **OVERVIEW**

### Base

- 1. /HANDSET LOCATOR While the phone is idle, press to page all handsets.
- 2. **IN USE ON** when handsets or the base are in use, or when the answering system is answering an incoming call. ON when a handset is being registered. Flashes when there is an incoming call or in page mode.
- 3. **PICTURE BUTTONS** 10 big picture memory buttons or to dial a phone number from the base.



Online: Press the key to make a recall."

**In idle mode:** Press this key to program the picture memory buttons.

#### 5. MICROPHONE

#### 6. SPEAKER MODE INDICATOR

On when the speaker is on.

# 7. SPEAKERPHONE KEYNOTE:



wait 2 seconds before to dialing the phone number with the picture memory buttons.]

# 8. **VOL** ( ▼ )

During speaker mode, press to decrease the speaker volume. While in idle mode, press to decrease the base ringer volume.

# 9. **VOL** (

While in idle mode, press to increase the base ringer volume. During speaker mode, press to increase the speaker volume.

Handset

#### 10. EARPIECE

#### 11. LCD DISPLAY

# 12. CHARGE LIGHT ( DIC)

Steadily on when the handset is charging in the charger.

# 13. **MENU/OK** (

In idle mode: Press to access the main menu.

**In sub-menu mode:** Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list /Call log.\

# 14. UP/CALL LIST ( )

In idle mode: Press to access the redial list.

**In menu mode**: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

**During a call:** Press to increase the listening volume.

**During ringing:** Press to increase the ringer volume.

# ) SPEAKERPHONE ( 15. **TALK ON** (

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode.

**During ringing**: Press to answer a call in earpiece mode.

On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.

# 16. **DOWN/PHONEBOOK** ( ▼

In idle mode: Press to access the phonebook.

**In menu mode:** Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

**During a call:** Press to decrease the listening volume.

**During ringing:** Press to decrease the ringer volume.

# 17. MICROPHONE

# 18. VOLUME BOOST/SOS ( → )/SOS )

During a call: Press to activate/deactivate the VOLUME BOOST function.

In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset.

Incall mode: press and hold for 2 seconds to stop the emergency call.

19. **TONE** During a call: press this key to increase the high frequency or the low frequencies.

# 20. CANCEL/MUTE ( )

In main menu mode: Press to go back to the idle screen.

**In sub-menu mode:** Press to go back to the previous menu. **In editing/pre-dial mode:** Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters/digits.

**During a call:** Press to mute/resume the microphone. **During ringing:** Press to silence the handset ringer.| **In idle mode:** Press to intercom another handset.

# 21. TALK OFF (

**During a call:** Press to end a call and go back to the idle screen.

In menu/editing mode: Press to go back to the idle screen.

22. ALPHANUMERIC KEYPAD, STAR (0), HASH (\*# R)

**In predial or editing mode:** Press to insert a digit / character / / .

R during a call: Press and hold to make a Flash (Recall).

**0** key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.

#### FIRST USE OF YOUR HANDSET

After you have inserted the batteries, the display asks you to select your language with the keys /, press **MENU/OK** to valid.

Then enter the date with the keypad and validate by pressing **MENU/OK** Enter the correct hour with the keypad and validate by pressing **MENU/OK**.

### **MENU SETTING**

The phone settings are always set in the same manner: Press Menu/OK button to open the main menu.

Then use the buttons to select an entry and confirm it by pressing the Menu/OK button.

#### **Handset**

#### **CALL LOG**

► VIEW LIST

under an entry: DETAILS ► ADD TO PB ► ADD TO BL ► DELETE

► DELETE ALL

PHOTO MEM: M1 to M0

#### **PHONEBOOK**

► ALL ► SPEED DIAL ► VIP

under an entry: ►ADD ► VIEW ► EDIT ► DELETE ► DELETE ALL

► DEL VIP ► ADD TO SD ► STATUS

#### **CALL BLOCK**

BLACK LIST (under an entry: ► ADD ► VIEW ► EDIT ► DELETE
► DELETE ALL ► STATUS) ► SETTING (BLOCK MODE ► W/O

INTERCOM: ► HANDSET\* ► BASE ► ALL

#### **BS SETTINGS**

► BS RINGER ► RING VOLUME ► FLASH TIME ► FIRST RING

#### **HS SETTINGS**

- ► RING SETUP ► TONE SETUP ► TEXT LANG ► DATE & TIME
- ► REGISTER ► DEFAULT

SET SOS: SOS NUMBER ► SOS MSG ► SOS LANGUAGE

#### **REMINDER**

- ► ON/OFF (ALARM 1 TO 10)
- ► (ONCE/DAILY/MON-FRI/SAT-SUN)

TLK DIGITS: ► ON ► OFF

#### ANS. SYS.

- ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF
- ► SET TAM (TAM LANG ► CALLSCREEN, TAM MSG, ANS. DELAY,

RECORD TIME, REMOTE ACC, CHANGE PIN► MSG ALERT)

# HANDSET REGISTRATION

Note: Handset and base station are pre-registered.

Up to five handsets can be registered to a single base station.

# Registering a handset

On Base: press and hold /HANDSET LOCATOR on the base until you hear a beep to enter the registration mode.

At the same time On Handset: Press MENU/OK



Use ▼ ▲ to select HS SETTING and press MENU/OK





 $^{\prime}$  and **REGISTERING** is displayed.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

包

# **INTERCOM**

#### Internal Call

1) Press MENU/OK and ▼ ▲ to select INTERCOM, Press MENU/OK

2) Choose the desired handset number, Base or ALL, and press MENU/OK

If you receive a call on the base in speaker mode, the call is automatically transferred to the handset if the handset is removed from the charger.

#### **Call All Handsets**

Make point 1 in the chapter internal call and choose ALL.

#### **Transfer an External Call**

Make point 1 in the chapter internal call and choose the desired handset number with the key UP/DOWN.

After connection quit the call on the handset by pressing



### **Conference Call**

Make point 1 in chapter internal call and choose the desired handset number with the keys ▼/▲.

After connection press and hold **X** until **CONFERENCE** is shown.

**NOTE:** Any party that hangs up during a conference call will leave the other party still connected with the external call.

#### **PHONEBOOK**

Your phone can store up to 50 private phonebooks in the cordless handset with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 10 characters for the name. Phonebook entries are stored alphabetically by name.

# To add a new entry

In idle mode:

Press MENU/OK

, and ▼/▲ to select PHONEBOOK and press MENU/OK to access the phonebook list ( or empty).

Press MENU/OK

2 times to select ADD.

Press MENU/OK

to select NUMBER, and enter a number.

Press MENU/OK

to select NAME,enter the name.

#### SOS EMERGENCY CALL

#### **SOS Settings**

You need to set the SOS numbers before you can make SOS emergency calls. Using the handset:

Press **LEFT SOFTKEY** and ▲/▼ to select SET SOS.

Press **LEFT SOFTKEY** and ▲/▼ to select SOS NUMBER.

Press LEFT SOFTKEY and ▲/▼ to select the SOS number to edit (SOS 1, SOS 2, SOS 3 or SOS 4).

Press **LEFT SOFTKEY** and select ADD to enter a new number or EDIT to modify the number stored already.

Press LEFT SOFTKEY and enter a new name or edit the name stored already.

Press LEFT SOFTKEY to confirm or RIGHT SOFTKEY to delete.

# **Make SOS Emergency Calls**

Press and hold 3 seconds SOS key on the handset to enter the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call be will made to the SOS 2 number, and so on.

Note: The other party receiving the SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open else the phone stops the call 10 seconds after.

# **Record SOS Messages**

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.



and ▼/▲ to select RECORD. Press LEFT SOFTKEY to start SOS message recording and "RECORDING" will be displayed. to save your SOS message. Press LEFT SOFTKEY Play SOS Messages Press LEFT SOFTKEY and ▲/▼ to select SET SOS. and **A**/▼ to select SOS MSG. to show PLAY. Press LEFT SOFTKE Press **LEFT SOFTKEY** to start SOS message playback. Press 5 key to stop SOS message playback. SET SPEED DIAL KEYS IN THE HANDSET Press LEFT SOFTKEY and ▲/▼ to select PHONEBOOK. Press LEFT SOFTKEY and ▲/▼ to select SPEED DIAL. Press LEFT SOFTKE use. ▲/▼ to select the speed dial key. Press LEFT SOFTKEY. select ADD or EDIT. Press LEFT SOFTKEY and enter the phone number. to enter the NAME. Press LEFT SOFTKE Press LEFT SOFTKEY .to confirm.

To use the one-speed dial key, press and hold in idle mode the key between 1 to 9 for 3 seconds (you hear a beep of confirmation).

### PICTURE BIG BUTTON MEMORIES

#### On the base

You have the choice to store 10 picture memories.

In idle mode: Press, enter the phone number with the key

M0 to M9 of the base, Press and press the picture memory button that you have chosen.

#### Using the handset:

- 1. Press MENU/OK, select ▼ ▲ PHOTO MEM,
- 2. Press MENU/OK, select ▼ ▲ M1 to M0,
- 3. Press MENU/OK, and select ADD or EDIT.
- 4. Press **MENU/OK**, enter the number
- 5. Press MENU/OK, enter a name then OK to save

You have the option to enter a voice name in choosing VOICE TAG and RECORD at point 3.

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

NOTE: To use a picture big button memory in idle mode, press and hold the picture until the LED turns on, on the base.

If you want to pass the number from the base to the handset, lift the handset off the base to make the call. If the handset is not placed on the base, press to take the line and press on the base to stop the call.

#### **ANSWERING MACHINE**

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 30 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

# **Switching Answering Machine On/Off**

Using the handset:

1. Press **LEFT SOFTKEY** and **▼**/**▲** to select ANS.SYS.

2. Press **LEFT SOFTKEY** and ▼/▲ to select TAM ON / OFF.

3. Press **LEFT SOFTKEY** and **▼**/**▲** to select ON or OFF.

4. Press **LEFT SOFTKEY** to confirm.

#### **Play Messages on TAM**

If you have new messages, the display will show e.g.2 **NEW MESSAGE**, which means you have 2 new messages. The new messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

#### Using the handset:

- Press LEFT SOFTKEY and ▼/▲ to select ANS. SYS.
- 2. Press LEFT SOFTKEY to show PLAYBACK
- 3. Press **LEFT SOFTKEY** again to start message playback and the screen displays the date and hour of the message received.
- 4. During message playback, press ▼/▲ to adjust the message playback volume respectively.

**NOTE:** After the new message is played, the new message will be saved as an old message automatically unless it is deleted.

- 5. Press LEFT **SOFTKEY** and ▼/▲ to select STOP, **FORWARD**, **PREVIOUS** or **DELETE** to perform the following functions during message playback.
- STOP: Stop the current message playback and return to the ANS. MACHINE menu.
- FORWARD: Skip playing the next message. The date and hour information of the next message will display if there is a text message.
- **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.
- **DELETE**: Delete the current message and the next message will be played.
- 6) Press **LEFT SOFTKEY** to confirm the setting.

### **Set the Answer Delay**

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or TIME SAVER. The TIME SAVER function answers call after 6 ring signals until the first new message has been registered – then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings it means there are no messages recorded and you can hang up before you are charged for the call.

### Using the handset:

- Press LEFT SOFTKEY and ▼/▲ to select ANS. SYS.
- 2. Press **LEFT SOFTKEY** and **▼**/**▲** to select SET TAM.
- 3. Press **LEFT SOFTKEY** and ▼/▲ to select ANSWER DELAY (Available options: 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS or TOLL SAVE).
- 4. Press **LEFT SOFTKEY** to confirm

# **REMOTE OPERATIONS**

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

- 1. Place a call from a tone-dialing phone.
- 2. When the answering machine answers the call and starts playing OGM, press
- 3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
- 4. Press the following keys to carry out your desired function.

key	Functions	
	While the message is not playing	While the message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Pre ss twice to skip backward to the previous message.
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

**NOTE:** When your answering machine memory is full, the answer mode will change to ANSWER ONLY automatically.

It will change to ANS & RECORD mode automatically after some messages have been deleted. You cannot delete new messages until they have been listened to.

### **ALARM** function

You have the choice to enter 10 Alarms.

- 1. Press **LEFT SOFTKEY** and **▼**/**▲** to select REMINDER.
- 2. Press **LEFT SOFTKEY** and **▼**/**▲** to select your alarm.

- 3. Press **LEFT SOFTKEY** and ON/OFF to select ON.
- 4. Press **LEFT SOFTKEY** and enter the time.
- 5. Press **LEFT SOFTKEY** and choose the frequency.
- 6. Press **LEFT SOFTKEY** to save.

# **TALKING** function

You have the can choose to activate or deactivate the function

# **Talking Digits.**

Activate: this function announces the digit dial.

- Press LEFT SOFTKEY and ▼/▲ to select TLK DIGITS.
- 2. Press **LEFT SOFTKEY** and ▼/▲ to select ON or OFF.
- 3. Press **LEFT SOFTKEY** to save.

# **TECHNICAL SPECIFICATIONS**

Basic Information		
Valid Range	Indoor : 50m / Outdoor:300m	
Handset Operating time	Standby time: 100 hours Talk time: 10 hours approx.	
RF Parameter		
Frequency	1.88 GHz to 1.9GHz	

Nb Channels	10	
RF power	< 250mW	
Power Supply		
Base	Input 100-240V 50/60Hz: Output DC6V ==== 0.6A. 3.6W adapter	
Charger	Input 100-240V 50/60Hz: Output DC6V ====0.45A. 2.7W adapter	
Handset	3 batteries AAA 1.2V/600mAh rechargeable	

# **MAINTENANCE**

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

#### **GUARANTEE**

From the moment your Geemarc AMPLIDECT595 Photo is purchased, the Geemarc guarantee is for a period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our helpline or visit our website at <a href="https://www.geemarc.com">www.geemarc.com</a>.

The guarantee does not cover accidents, negligence, or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

#### **DECLARATIONS:**

#### **CE Directives**

Geemarc Telecom SA hereby declares that AMPLIDECT595 Photo is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The CE declaration of conformity may be consulted at <a href="www.geemarc.com">www.geemarc.com</a>

#### **Electrical connection:**

The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as hazardous voltage according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To switch off the apparatus, disconnect the power adaptor.

When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection: Voltages present on the telecommunication network are classified as TNV-3 (Telecommunication Network Voltage) according to the EN62368-1 standard.

#### **Recycling Directives**

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life to be recycled in the best way.

When this product is finished, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at <a href="www.geemarc.com">www.geemarc.com</a>
2 rue Galilée, 59791 GRANDE-SYNTHE CEDEX, FRANCE

E-mail: <a href="mailto:help@geemarc.com">help@geemarc.com</a> telephone 01707 387602 lines are open 09h00 to 16h00 Mon to Fri This product is made in China To Geemarc Telecom



**Documents / Resources** 



**geemarc AMPLIDECT 595 PHOTO Cordless Big Button Answerphone** [pdf] User Guide AMPLIDECT 595 PHOTO, Cordless Big Button Answerphone, AMPLIDECT 595 PHOTO Cordle ss Big Button Answerphone



**geemarc Amplidect 595 Photo Cordless Big Button Answerphone** [pdf] User Guide Amplidect 595 Photo Cordless Big Button Answerphone, Amplidect 595 Photo, Cordless Big Button Answerphone

# References

- **B** Home Geemarc UK
- **B** Home Geemarc UK

Manuals+,