

geemarc Amplidect Combi 295 Photo Amplified Corded and **Cordless Phone User Guide**

Home » geemarc » geemarc Amplidect Combi 295 Photo Amplified Corded and Cordless Phone User Guide 🖺







!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

Congratulations on purchasing your Geemarc AMPLIDECT COMBI 295 telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications-DECT standard) together with an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible. It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.


Contents

- 1 Base
- 2 Handset
- **3 Connection**
- **4 Wall Mounting**
- **5 PACKAGE CONTENTS**
- **6 INSTALLATION**
- **7 OVERVIEW**
- **8 MENU SETTING**
- 9 DECLARATIONS
- 10 Documents /


Resources

- 10.1 References
- 11 Related Posts


Base

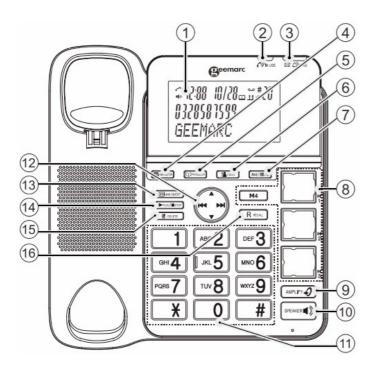

Handset

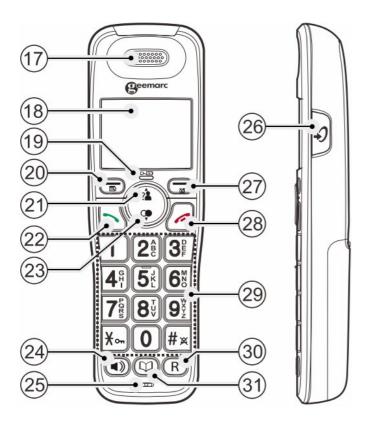

Connection

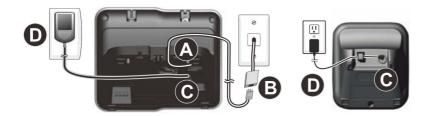


CAUTION: Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions. Normal operating temperature for the product (e.g.0oC~40oC). Use only the adapters and battery listed below.

Power adapter information: output:6V DC 0.45A,2.7W. Vtech Telecommunications Limited. **Model:** VT05EEU06045 (EU), VT05EUK06045 (UK)

Rechargeable Battery Pack: Model: NI-MH AAA500x2. 2.4V, 500mAh. Corun.

Wall Mounting

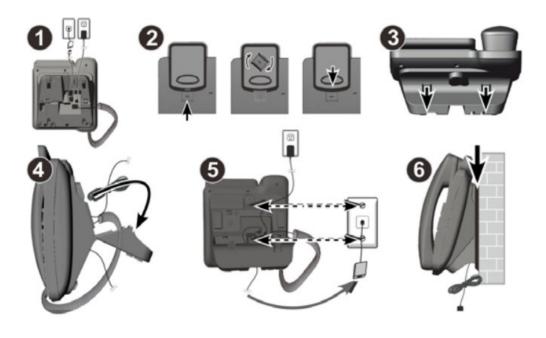

PACKAGE CONTENTS

1 Telephone base, 1 Corded handset, 1 cordless Handset, 2 power adapter, 1 Charger, 1 Telephone line cord, 1 NiMh battery pack, 1 Quick user guide.

INSTALLATION

Connecting the telephone

Connect the telephone cable to the telephone line socket (**A**) and to the telephone wall socket (**B**). Connect the handset curly cord to the base. Connect the power adapter jack to base and charger (**C**) then connect the power adapter plug in mains power (**D**).

Note: Use only the power adapters supplied with the phone.

Connecting the battery

Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery as indicated. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.



Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

OVERVIEW

Base

- 1. LCD DISPLAY
- 2. IN USE (): On during a call.
- 3. RING light (\(\sigma^2 \hat{\infty}\))

Flashes when there is an incoming call. Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.

4. MENU/OK ()

In idle mode: Press to access the main menu. In sub-menu mode: Press to confirm the selection. In Redial list/Call list: Press to store the number into Phonebook.

5. PHONEBOOK ()

In Idle: Press to access the phonebook.

6. CALLS (CALL LIST) (?)

7. In Idle mode: Press to access the call list.

8. INT/MUTE/CLEAR ()

In main menu mode: Press to go back to idle screen. In sub-menu mode: Press to go back to previous level. In sub-menu mode: Press and hold to go back to idle screen. In editing / predialing mode: Press to clear a character / digit. In editing / predialing mode: Press and hold to delete all the character /digits

During a call: Press to mute / unmute the microphone.

In ringing: Press to silence the base ringer.

In idle mode: Press to intercom another system handset

9. MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 MEMORY KEY - M4)

In idle mode: Dial your phone number and Press and hold the memory key until to hear a beep.

To use: Press to dial out to the number stored in the memory key.

10. **SPEAKER** (■))

In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.

11. ALPHANUMERIC KEYPAD, STAR (), HASH ()

In predial or editing mode: Press to insert a digit.

key in predial or editing mode: Press and hold to insert a pause.

12. 12- NAVIGATION KEYS UP (▲)

In menu mode: Press to scroll up the menu items. In Phonebook list / Redial list / Call list: Press to scroll up the list. In editing mode: Press to move the cursor one character to the left. During a call or **TAM message playback:** Press to increase the volume.

REPEAT/OGM (►)

In Idle mode: Press and hold to record OGM. Press to playback OGM. In TAM message playback mode: Press to go back to previous message.

MEMO/SKIP FORWARD (▶)

In Idle mode: Press and hold to record a memo. In TAM message playback mode: Press to skip to next message.

DOWN/REDIAL LIST (▼)

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items. In Phonebook list / Redial list / Call list view mode: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call or TAM message playback: Press to decrease the volume.

13. **ANS ON/OFF** ()

In Idle: Press to switch the answering machine ON or OFF.

14. PLAY/STOP (\(\bigs\sum_{1}\)

In idle mode: Press to playback messages. During TAM message playback: Press to stop playing messages.

15. **DELETE** ()

In TAM message playback mode: Press to delete the current TAM message playback. In idle mode: Press and hold to delete all old messages.

16. RECALL (R)

During a call: Press to activate Recall for use with Telephone Network Services such as Call Waiting during a call. During message playback: Press to call back the caller if the caller's number is available

Handset

- 17. EARPIECE
- 18. LCD DISPLAY
- 19. CHARGE LIGHT (DATE)

Steadily on when the handset is charging in the charger.

20. **MENU/OK** ()

In idle mode: Press to access the main menu. In sub-menu mode: Press to confirm the selection. During a call: Press to access Intercom / Phonebook / Redial list / Call list.

21. **UP/CALL LIST (** ?)

In idle mode: Press to access the call list. In menu mode: Press to scroll up the menu items. In phonebook list/redial list/call list: Press to scroll up the list. In editing mode: Press to move the cursor one character to the left. During a call: Press to increase the listening volume. During ringing: Press to increase the ringer volume.

22. **TALK ON** ()

In idle/pre-dial mode: Press to make a call in earpiece mode. In phonebook/redial list/call list: Press to make a call to the selected entry in the list in earpiece mode. During ringing: Press to answer a call in earpiece mode.

23. DOWN/REDIAL LIST (

In idle mode: Press to access the redial list. In menu mode: Press to scroll down the menu items. In phonebook list/redial list/call list: Press to scroll down the list. In editing mode: Press to move the cursor one character to the right. During a call: Press to decrease the listening volume. During ringing: Press to decrease the ringer volume.

24. SPEAKERPHONE ())

In idle/pre-dial mode: Press to make a call in speakerphone mode. Press again to switch to earpiece mode. In phonebook list/redial list/call list: Press to make a call to the selected entry in the list in speakerphone mode. Press again to switch to earpiece mode. During ringing: Press to answer a call in speakerphone mode. Press again to switch to earpiece mode.

25. MICROPHONE

26. VOLUME BOOST () During a call: Press to activate/deactivate the VOLUME BOOST function.

26. **CANCEL/MUTE** (→ **?**)

In main menu mode: Press to go back to idle screen. In sub-menu mode: Press to go back to previous menu.

In sub-menu mode: Press and hold to go back to idle screen.

In editing / pre-dial mode: Press to delete a character/digit.

In editing / pre-dial mode: Press and hold to delete all the characters / digits.

During a **call**: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom another handset.

27. TALK OFF (//)

During a call: Press to end a call and go back to idle screen In menu/editing mode: Press to go back to previous menu. In menu/editing mode: Press and hold to go back to idle screen. In idle mode: Press and hold to power off the handset. Press and hold to power on when it is off.

28. ALPHANUMERIC KEYPAD, STAR (★ 🖙), HASH (# 🕱)

In predial or editing mode: Press to insert a digit /character / / .

key in idle mode: Press and hold to enable or disable the keypad lock.

key in idle mode: Press and hold to turn on/off the ringer.

#×

0 key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.

29. **R**

During a call: Press to answer a new call if you subscribed to Call Waiting service from your service provider.

30. PHONEBOOK ()

In idle mode: Press to access the phonebook. The phone settings are always set in the same manner: Press Menu/OK button to open the main menu. Then use the ▼ ▲ buttons to select an entry and confirm it by pressing the Menu/OK button.

The factory preset PIN code is 0000

Example:

Set the language on the base Press MENU / OK, then select ▼ ▲ language, press MENU / OK, then select ▼ ▲ desired language and then press MENU / OK to confirm.

Set the language on the handset

Press MENU / OK , then select ▼ ▲ HS settings, press MENU / OK , then select ▼ ▲ language, press MENU / OK , than select ▼ ▲ desired language and then press MENU / OK to confirm.

MENU SETTING

Base

PHONEBOOK ► VIEW ► ADD ► EDIT ► DELETE ► DELETE ALL ► PB STATUS CALL LOG : ► MISSED ► RECEIVED ► DIALLED DATE & TIME : ► TIME FORMAT ► SET CLOCK LANGUAGE ► ENGLISH ► DEUTSCH ► FRANÇAIS ► ITALIANO ► NEDERLANDS... SETTINGS ► RING SETUP ► DELETE HS ► DIAL

MODE ► FLASH TIME ► KEY TONE ► CHANGE PIN ► BS DEFAULT PAGE ALL HS REGISTRATION ANS.

MACHINE ► MSG PLAYBACK ► DELETE ALL ► MEMO ► TAM ON/OFF ► TAM SETTINGS (ANSWER MODE, OGM SETTINGS.

ANSWER DELAY, RECORD TIME, TAM LANGUAGE, BS SCREENING, REMOTE ACC, COMPRESSION, CHANGE PIN, TAM DEFAULT)

Handset

PHONEBOOK

► VIEW LIST

under an entry:

► ADD ► VIEW ► EDIT ► DELETE ► DELETE ALL ► PB STATUS ► FASTDIAL

CALL LIST

- ► VIEW LIST under an entry:
- ► ADD TO PB ► DELETE ► DELETE ALL ► DETAILS ► CATEGORY

BS SETTINGS

► BS RINGER ► RING VOLUME ► DELETEHS ► DIAL MODE ► FLASH TIME ► CHANGE PIN

HS SETTINGS

► RING SETUP ► TONE SETUP ► SELECT BASE ► LANGUAGE ► RENAME HS ► HS DISPLAY

► AUTO ANSWER

DIRECT MEM: ► M1-M2-M3-M4

DATE & TIME

► DATE FORMAT ► TIME FORMAT ► SET TIME ► SET DATE

ALARM: ►ON ►OFF

REGISTRATION: ► BASE 1, 2, 3 or 4

DEFAULT: ► PIN? —-

During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATIONS

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as hazardous voltage according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To switch off the apparatus, disconnect the power adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection:

Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN62368-1 standard.

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way. When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

• Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate

WEEE skip.

• Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at

www.geemarc.com

E-mail: help@geemarc.com

telephone 01707 387602 lines are open 09h00 to 16h00 Mon to Fri Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe, France. Manufacturer: Vtech (Dongguan) Telecommunications Limited. Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan, Guangdong



Documents / Resources



References

- **B** Home Geemarc UK
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.