



gembird 3DP-PEND-01 Freeform 3D Printing Pen For ABS/PLA Filament OLED Display User Manual

[Home](#) » [GEMBIRD](#) » gembird 3DP-PEND-01 Freeform 3D Printing Pen For ABS/PLA Filament OLED Display User Manual 



**FREE FORM 3D PRINTING PEN FOR ABS/PLA FILAMENT, OLED DISPLAY
USER MANUAL
3DP-PEND-01**



Contents

- [1 Features](#)
- [2 Specifications](#)
- [3 WARNING!](#)
- [4 PRODUCT OVERVIEW AND OPERATION](#)
- [5 TROUBLESHOOTING](#)
- [6 FILAMENT CUT](#)
- [7 WARRANTY CONDITIONS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Features

- Free form 3D printing pen
- OLED display: shows temperature and filament type indication
- Suitable for use with ABS and PLA filament of 1.75 mm diameter

Specifications

- Case material: plastic, purple
- Model build size: free form
- Filament: ABS, PLA, 1.75mm
- Nozzle diameter: 0.60 mm
- Extruder temperature: 130 – 230 C
- Power consumption: 5 VDC up to 2A
- Net weight: 40 g
- Dimensions: 175 x 17 x 20 mm




Thank you for using this product, in order to operate the equipment better, please read this manual carefully!

WARNING!

1. This equipment is suitable for children over 8 years old and adults.
Children are only allowed to use under adult guardianship.
2. The nozzle is at a high temperature, do not touch it by hand.
3. It is strictly prohibited to input any other material into the filament loading hole.
4. Prohibited to use the power adapter provided by other companies.
5. Prohibited to use the filament provided by other company, cause different parameter of filament.
6. Keep the pen away from water.
7. Keep the pen in a safe place, where the children can not reach it.

PRODUCT OVERVIEW AND OPERATION

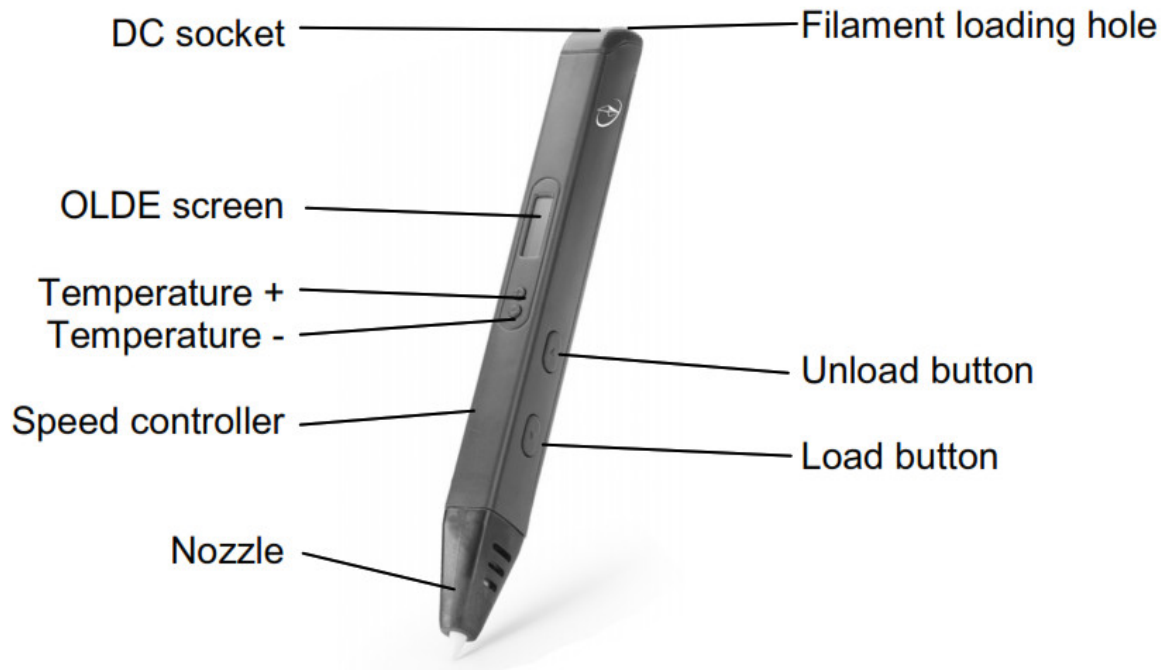

1. Connect AC/DC adapter to AC power socket and 3D pen DC power socket (or use the USB cable to connect with the power bank which output is more than 2A), when the OLED screen is on – it means power connected.
2. Press the filament loading button, it starts to heat, and the screen will display the temperature. When it reaches the target, it means it is ready for loading filament.
3. Insert the 1.75mm filament into the “filament loading hole”. Keep pressing the “filament loading button”, the material will be loaded. Hold the loading button till plastic material comes out from the nozzle, it means the filament is ready.
(Double press the button can load the filament automatically, press the button again to exit automatic mode).
4. Temperature adjustment: press the temperature “+” or “-” button to adjust the temperature, the temperature range is 130°C-240°C, each step is 15°C
5. Speed adjustment: slip the speed controller to adjust the speed.
6. Unload filament: to do so – press unloads filament button, the filament will move out automatically. (Double press the button can unload the filament automatically, press the button again to exit automatic mode).
7. Press the increase temperature button “+” and unload the filament button at the same time to switch ABS/PLA mode.
8. Replace nozzle set: open the back cover with the plastic screwdriver, and remove the screw, then plug off the nozzle set.
9. The pen will enter standby mode after 2 minutes of no operation, press the loading filament button to wake it up.
10. Do not touch the nozzle during working.

NOTE

1. Heating time may be affected by environmental temperature
2. The filament end should be cut correctly before loading
3. Suggest unloading the filament after finishing drawing

TROUBLESHOOTING

Please follow the below instruction in case of any defect

Problem	Reason	Solution
The screen can not be	The power adapter or plug line defective	Repair or replace the power adapter

powered on	Motherboard defective	Repair or replace the motherboard sold the socket
	Socket leadoff	
No filament comes out from the nozzle	Nozzle blocked	Replace the nozzle set
	Temperature is not high enough	Replace the nozzle set or adjust the temperature
	Not warming up	Replace the nozzle set or check the motherboard
	Gear slips	Back wire, cleaning gear, cut off the damaged supplies after the reloading
	Fail to load filament	Unload filament and cut the end of filament well
	Motherboard defective	Repair or replace the motherboard
Not heated	Heating part defective	Replace the nozzle set

FILAMENT CUT

Please make sure that you have correctly cut the filament end before using it!



Correct



Wrong



Wrong

Declaration of conformity

This product is tested and complies with the essential requirements of the laws of member states concerning LVD (2014/35/EU), EMC (2014/30/EU), RoHS (2011/65/EU). The CE declaration can be found under www.gembird.eu



Declaration of conformity

This product is tested and complies with the essential requirements of the laws of member states concerning RED (2014/53/EU), RoHS (2011/65/EU). The CE declaration can be found under www.gembird.eu

Waste disposal:

Do not deposit this equipment with the household waste. Improper disposal can harm both the environment and human health. For Information about waste collection facilities for used electrical and electronic devices, please contact your city council or an authorized company for the disposal of electrical and electronic equipment.


WARRANTY CONDITIONS

The receipt must clearly list the date of purchase and the part number, in addition it should be printed. Keep the receipt for the entire warranty period since it is required for all warranty claims. During the warranty period, the defective items will be credited, repaired, or replaced at the manufacturer's expense. Work carried out under the warranty neither extends the warranty period nor starts a new warranty period. The manufacturer reserves the right to void any warranty claim for damages or defects due to misuse, abuse, or external impact dust, contamination, or break (falling down, impact, ingress of water,). Wearing parts (e.g. rechargeable batteries) are excluded from the warranty. Upon receipt of the RMA goods, Gembird Europe B.V. reserves the right to choose between replacement of defective goods or issuing a credit note. The credit note amount will always be calculated on the basis of the current market value of the defective products. Gembird Europe B.V. Wittevrouwen 56, 1358CD Almere, The Netherlands www.gembird.nl/service_support@gmb.nl

GEMBIRD EUROPE B.V. <http://www.gembird.eu>

All brands and logos are registered trademarks of their respective owners

Documents / Resources

	<p>gembird 3DP-PEND-01 Freeform 3D Printing Pen For ABS/PLA Filament OLED Display [pdf] User Manual</p> <p>3DP-PEND-01, Freeform 3D Printing Pen For ABS Filament OLED Display, Freeform 3D Printing Pen For PLA Filament OLED Display</p>
---	--