




---

[Home](#) » [gemini](#) » **Gemini GPF40BK 3-Speed Portable Fan User Manual** 

**Contents** [ [hide](#) ]

- [1 Gemini GPF40BK 3-Speed Portable Fan User Manual](#)
- [2 Safety Instruction](#)
- [3 Product Overview](#)
- [4 How to use](#)
- [5 Indicator light Status Description](#)
- [6 Product Maintenance](#)
- [7 Product Specification](#)
- [8 References](#)



## **Gemini GPF40BK 3-Speed Portable Fan User Manual**



Please read this instruction manual carefully before use and keep it for future reference.

## **Safety Instruction**

### **Attention!**

When using electric tools, basic safety precautions should be followed to reduce the risk of fire, electric shock, and personal injury, including the following. Read all these instructions before operating this product, and keep these instructions for future reference.

1. Read and save these instructions.
2. Check the voltage indicated on the rating plate. This fan is designed for USB 5V2A and Li-ion polymercell 4000mAh 3.7V (14.8Wh) electric supply.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. The appliance is only to be used with the power supply: 5V 2A provided with the appliance.
5. Incorrect operation and improper handling can lead to faults on the appliance and injuries to the user.

6. In the event of improper use or incorrect handling, no liability can be accepted for any damage that may occur.
7. Do not operate the appliance if the mains cable or the mains plug shows signs of damage, if the appliance has fallen on the floor, or has been otherwise damaged. In such cases, take the appliance to a specialist for checking and repair if necessary.
8. Never remove the mains adapter & USB outlet from the socket by pulling on the mains cable, or with wet hands.
9. Ensure that the mains cable does not hang over sharp edges or allow it to become trapped.
10. Keep the appliance away from damp and protect it from splashes.
11. Keep the appliance and its cord out of reach of children less than 8 years old.
12. Use the appliance on a flat, dry, heat-resistant surface.
13. Do not operate the fan in an area where gasoline, painting, or other flammable liquids are used or stored.
14. Do not let hair, curtains, tablecloth, clothes, or other objects be next to the air outlet of the fan. They could be sucked into the fan, causing damage or injuries.
15. Do not use this fan in a damp area such as a bathroom.
16. Do not use this fan near a window
17. Use this fan only as it is described in this manual.
18. Do not try to disassemble this fan and fix it by using it. If you need maintenance, please send the fan back to our After-sales Service Center.
19. All components of this fan must not be replaced by the user.
20. For the first time use or use after long-term storage, please fully charge the product. Please use a power adapter of 5V/2A or above, which needs a safety certification, and a standard charging line to charge the product.
21. Before long-term storage, please fully charge the product. Please charge the battery to at least 85%.
22. It is recommended to charge the battery every 2-3 months to extend its service life. Otherwise, the service life of the battery will be affected, and the product cannot be used normally.

## **WARNING**

This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge,

if they have been given supervision or instruction concerning the use of the appliance in a safe way, and understand the hazards involved.

## Product Overview



## How to use

First, press the (Safety Lock) button up to start the fan, and then short-press the (Function button) to control the fan speed. Short-press the button once to raise the speed. When three times, and then short-press pressThe button to stop the fan rotation, the gear indicator light is off.

1. Click 1: Low speed, indicator light blue.
2. Click 2: Medium speed; indicator light green.
3. Click 3: High speed; indicator light is red.
4. Click 4: Turn off the fa th n, the indicator light is off.

## Indicator light Status Description

1. When charging, the red light of the charging indicator flashes.
2. When fully charged, the red light of the charging indicator is always on.
3. When the battery power is low, the corresponding gear indicator light blinks, and the

fan turns off until the light goes out.

### Caution

1. Do not let children play or use this product alone.
2. Do not put the product into or near fire to avoid fire and explosion hazards.
3. The power should be cut off and the battery should be removed from the product before disposing.
4. Do not remove or exchange the battery by yourself.

### Product Maintenance

After purchasing the product, please charge it for more than 2 hours before using it. The fan should be used frequently and charged every two months of storage to avoid battery damage. The above data is for reference only. Due to different regions and weather conditions, there may be slight deviations in the data. After a long period of battery use, the data may vary significantly.

Charging time	Around 5 hours
Low speed operation time	Around 14 hours
Medium speed operation time	Around 6.5 hours
High speed operation time	Around 5 hours

### Product Specification

- Model: GPF40BK (Black) / GPF40WH(White)
- Input Voltage: DC5V 1A
- Battery Capacity: 4000mAh 3.7V(14.8Wh)
- Product size(H x W x D) : 122 x 60 x 35 (mm)

Model No.:

Serial No

Dealer

Date of Purchase

Invoice No

The product specifications may be changed without prior notice. Please contact customer service for details if necessary. If there is any inconsistency or ambiguity between the English version and the Chinese version, English version shall prevail.

## Warranty Registration

Repair Service – Collection Points



Register your product online.



[www.dchtoolbox.com](http://www.dchtoolbox.com)

## DCH ToolBox Customer Service Centre

4/F, DCH Building, 20 Kai Cheung Road, Kowloon Bay, Hong Kong

Customer Service Hotline: 852:8210 8210 E-mail: [8210service@gilman-group.com](mailto:8210service@gilman-group.com)

Agtit Website: <https://www.dchtoolbox.com/collection>

**Download PDF:** [Gemini GPF40BK 3-Speed Portable Fan User Manual](#)

## References

- [User Manual](#)

3-speed, fan, gemini, GPF40BK, GPF40BK 3-Speed, portable, user

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.