

gemsfindyours
gemsfindyours
s KPTR Page
Turning Cat
Remote



gemsfindyours KPTR Page Turning Cat Remote User Guide

[Home](#) » [gemsfindyours](#) » gemsfindyours KPTR Page Turning Cat Remote User Guide 

Contents

- [1 gemsfindyours KPTR Page Turning Cat Remote](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 How to Use](#)
- [5 Troubleshooting](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

gemsfindyours

gemsfindyours KPTR Page Turning Cat Remote



Product Information

Specifications

- Dimensions: 7 inches x 4.65 inches
- Product Name: Page Turning Cat Remote
- Type: Universal Touch Remote for E-Readers and Touch Screen Devices
- Input: USB-C Port for charging
- Functionality: Page turning, power on/off, page number setting, automatic page turning

Product Usage Instructions

Charging

Use the USB-C port to charge the device. The indicator will show a white screen when charging for the Page Turner and flashing red when charging for the Remote Control. When fully charged, the indicator will not light up.

How to Use

To adjust the amount of time for page turning, press the power button to display the seconds. Press the power button again to activate automatic page turning. The page will turn when the set seconds are reached, with a maximum time of 99 seconds.

Troubleshooting

If the device is not functioning properly, refer to the troubleshooting section in the manual. Ensure that the device is not damaged and all connections are secure.

Safety


Follow all safety precautions mentioned in the manual to prevent any potential hazards. Keep the device away from water and extreme temperatures to avoid damage.

SAVE THESE INSTRUCTIONS

FAQ

- **Q: How do I know when the device is fully charged?**
 - A: The indicator will show no light when the device is fully charged.
- **Q: What is the maximum time for automatic page turning?**
 - A: The maximum time for automatic page turning is 99 seconds.
- **Q: What should I do if the device is not responding?**
 - A: Check for any damage and ensure all connections are secure. Refer to the troubleshooting section in the manual for further assistance.

Universal Touch Remote for E-Readers and Touch Screen Devices

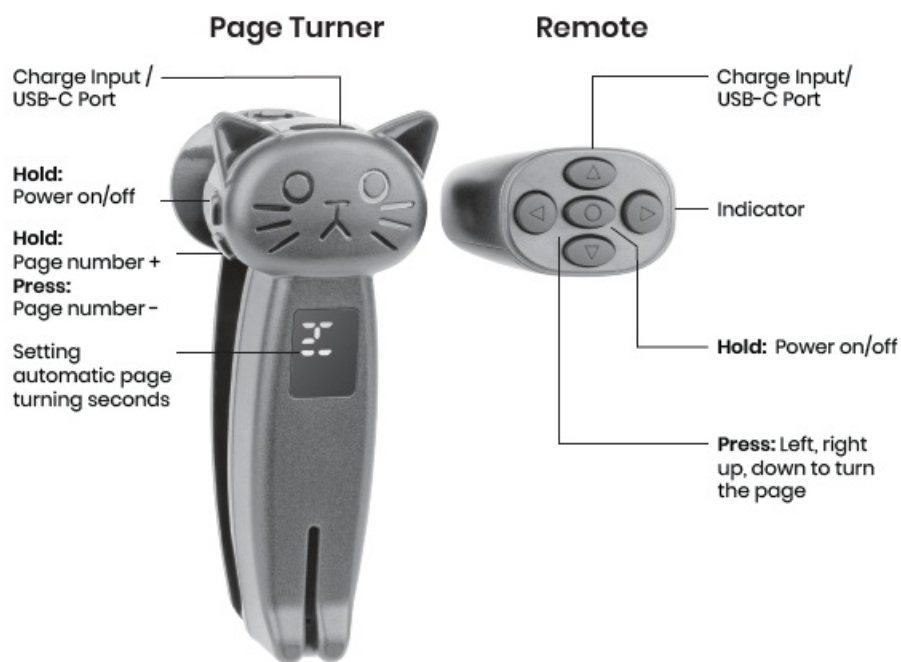

Adjust the amount of time you would like to turn the page, the screen will display the seconds. Press the power button to activate the automatic page turn, the page will turn when the set seconds are reached; the max time is 99 seconds.

What's Included:

- Page Turner
- Remote Control
- USB-A to USB-C Charging Cable

Indicator

- **White Screen** – Charging (Page Turner)
- **Flashing Red** – Charging (Remote Control)
- **No Light** – Fully Charged

How to Use

- Hold the power button to turn the page turner on, the white LED on the screen will light up.
- Clip Page Turner to your e-reader, making sure the cat face is facing towards you when reading the e-reader and it is on the right side of the screen.
- To use the automatic page turner, do not turn the remote on.
- Adjust the amount of time you would like between page turns, the screen will display this in seconds. Press the power button to activate the automatic page turn, the page will turn when the set seconds are reached; the max time is 99 seconds.
- Hold the remote control for 3 seconds to turn it on, the page turner and the remote will automatically pair. The remote will flash blue and the screen on the page turner will turn off once paired.
- Use the remote to turn pages by clicking buttons (left, right, up, and down).

Charging

- Full charge for Page Turner or for remote requires approximately 2 hours.
- Using the USB-C cable provided, plug the USB-C end into the page turner or remote and the USB-A end into a USB power supply of at least DC 5V 1A. Warning: Please use a UL-compliant power supply.
- Page Turner – The screen will turn white when charging, and turn off when charging is complete.
- Remote – The indicator light will turn red when charging, and the indicator light will turn off when charging is complete.

Troubleshooting

- If the page turner and remote are not working correctly, hold power on/off to reset.
- If the page turner and remote won't turn on, recharge the battery and try again.
- If the page turner and remote won't charge, make sure the supply works, is 5V 1A, and not damaged.

Safety:

- Do not modify or repair this device.
- Do not use in high temperatures or extreme weather.
- Do not use chemical detergents to clean your device, use a soft dry cloth.

SAVE THESE INSTRUCTIONS

- **Page Turner – FCC ID:** 2AO23-KPTR
- **Model:** KPTR USB-C
- **Input:** 5V 1A
- **Remote – FCC ID:** 2AO23-KPTR1
- **Model:** KPTR1 USB-C
- **Input:** 5V 1A
- Made in China

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

gemsfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

Documents / Resources
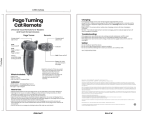
| | |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>gemsfindyours KPTR Page Turning Cat Remote [pdf] User Guide 2AO23-KPTR, 2AO23KPTR, KPTR Page Turning Cat Remote, KPTR Page, Turning Cat Remote, Remote</p> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

-  [GEMS](#)
- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.