

Genesis P58 Gamepad User Guide

Home » Genesis » Genesis P58 Gamepad User Guide 🖫

Genesis P58 Gamepad



Contents

- 1 INSTALLATION
 - 1.1 LED indications
- **2 SPECIFICATION**
- 3 SWITCHING BETWEN X-INPUT AND D-INPUT MODES
- 4 Charging
- **5 PACKAGE CONTENT**
- **6 REQUIREMENTS**
- **7 WARRANTY**
- **8 SAFETY INFORMATION**
- 9 GENERAL
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

INSTALLATION

• Connect the device to the USB port.

LED indications

- X-input mode the second LED glows solid
- D-input analog mode the first and second LEDs glow solid

- D-input digital mode the first LED glows solid
- Pairing 4 LEDs flash quickly
- Charging 4 LEDs flash slowly
- Battery fully charged 4 LEDs are off

SPECIFICATION

Buttons number	12
Analog sticks	2
Interface	USB 2.0
Communication	Wired
Operating models	X-Input/D-Input

SWITCHING BETWEN X-INPUT AND D-INPUT MODES

- To switch between X-Input and D-Input modes while gamepad is connected to PC, press Genesis button for 8 seconds.
- If in Control Panel gamepad is detected as USB gamepad it means it works in D-Input mode.
- If in Control Panel gamepad is detected as Controller (XBOX 360 for
- Windows), it means it works in X-Input mode.
- On the console gamepad is automatically detected in D-Input mode, and there is no possibility to change that.
- Vibrations work in X-Input mode.

Charging

- Gamepad charging time: 3 hours (may vary depending on the charger used we recommend charging the gamepad using the cable included in the set).
- · We recommend switching the gamepad off for charging.

PACKAGE CONTENT

- P58 gamepad
- · Quick installation guide

REQUIREMENTS

- PS III or PC compatible device with a USB port
- Windows® 2000/ME/XP/Vista/7/8/10

WARRANTY

· 2 years limited manufacturer warranty

SAFETY INFORMATION

- · Use as directed.
- Non-authorized repairs or taking the device to pieces make the warranty void and may cause the product damage.
- Avoid to hit or friction with a hard object, otherwise it will lead to grind surface or other hardware damage.
- Do not use the product in low and high temperatures, in strong magnetic fields and in the damp or dusty atmosphere.
- Do not drop, knock, or shake the device. Rough handling can break it.
- Slots and openings in the case are provided for ventilation and should not be obscure. Blocking the vents can cause overheating of the device.

GENERAL

- The safe product, conforming to the EU requirements.
- The product is made in accordance with RoHS European standard.
- The WEEE symbol (the crossed-out wheeled bin) using indicates that this product in not home waste.
 Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing.
 Segregated household waste collection aids recycle materials and components of which the device was made.
 In order to get detailed information about recycling this product please contact your retailer or a local authority.

www.tm.by



Documents / Resources



<u>Genesis P58 Gamepad</u> [pdf] User Guide P58 Gamepad, P58, Gamepad

References

Genesis | Complete solutions for gamers - mice, keyboards, headphones and other devices

Manuals+