

# Geniatech Stix3800 Powered Digital Signage Player User Guide

---



## Contents

### 1 Stix3800 User's Guide

#### 1.1 1. Safety Information

##### 1.1.1 1.1 Warning

##### 1.1.2 1.2 Precautions

##### 1.1.3 1.3 Handling Cautions

#### 1.2 2. Introduction

##### 1.2.1 2.1 Package Contents

##### 1.2.2 2.2 Product Features

##### 1.2.3 2.3 Appearance

##### 1.2.4 2.5 Display when Power Up

#### 1.3 3. Settings

##### 1.3.1 3.1 WiFi

##### 1.3.2 3.2 Bluetooth

##### 1.3.3 3.3 Ethernet

##### 1.3.4 3.4 Data Saver

##### 1.3.5 3.5 Networks & internet

##### 1.3.6 3.6 Multiple users

##### 1.3.7 3.7 Sound

##### 1.3.8 3.8 Display

##### 1.3.9 3.9 Storage

##### 1.3.10 3.10 Apps & notifications

##### 1.3.11 3.11 Google services

##### 1.3.12 3.12 Notification

##### 1.3.13 3.13 Location

##### 1.3.14 3.14 Security

##### 1.3.15 3.15 Languages & input

##### 1.3.16 3.16 Reset options

##### 1.3.17 3.17 Sleep

##### 1.3.18 3.18 Add an account

##### 1.3.19 3.19 Date & time

##### 1.3.20 3.20 Choose wallpaper from

##### 1.3.21 3.21 Screen saver

##### 1.3.22 3.22 About device.

##### 1.3.23 3.23 Camera settings

##### 1.3.24 3.24 HDMI

#### 1.4 4. Apps Install & Uninstall

#### 1.5 5. Firmware Update

#### 1.6 6. Trouble Shooting/FAQ

##### 1.6.1 6.1 No Picture

##### 1.6.2 6.2 USB Content cannot be read

##### 1.6.3 6.3 Remote Controller cannot respond quickly to the pressing of keys

##### 1.6.4 6.4 The firmware updating is not complete after a long time

#### 1.7 7. Repairs

#### 1.8 8. Specification

#### 1.9 9. Trademark Notice

### 2 Documents / Resources

#### 2.1 References



Thank you for purchasing this Geniatech product.

- Before using it, be sure to read the precautions contained in this User's Guide.
- Keep the User's Guide in a safe place for future reference.
- For the most up-to-date information about this product, visit official website at <http://www.geniatech.com>

## 1. Safety Information

Read and understand all instructions before using this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

### 1.1 Warning

To reduce the risk of electric shock, DO NOT remove the cover (or back).

DO NOT attempt to repair the product, this could lead to the risk of injury, damage to the product.

To reduce the risk of fire or electric shock, keep this product away from exposed direct sunlight, naked flames or heat, large amounts of moisture, dust, and sand.

FCC Note (for U.S.A)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

The user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

### 1.2 Precautions

#### Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below.

Keep these operating instructions handy for future reference.

1.2.1 Read these instructions.

1.2.2 Keep these instructions.

1.2.3 Heed all warnings.

1.2.4 Follow all instructions.

1.2.5 DO NOT use this apparatus near water.

1.2.6 DO NOT clean with any chemical detergent. Clean only with a dry cloth.

- 1.2.7 DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 1.2.8 DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- 1.2.9 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits the apparatus.
- 1.2.10 Only use attachments/accessories specified by the manufacturer.
- 1.2.11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 1.2.12 Unplug this apparatus during lightning storms or when unused for long period of time.
- 1.2.13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### **1.3 Handling Cautions**

- 1.3.1 DO NOT expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- 1.3.2 To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.
- 1.3.3 DO NOT plug multiple electric devices into the same wall socket. Overloading a socket can cause it to overheat, resulting in a fire.
- 1.3.4 Before connecting other components to this player, be sure to turn them off.
- 1.3.5 If the product makes an abnormal noise or produces a burning smell or smoke, turn off the power switch immediately and disconnect the power plug from the wall outlet. Then, contact the nearest customer service center for technical assistance. Do not use the product. Using the product as it is may cause a fire or an electric shock.

## **2. Introduction**

### **2.1 Package Contents**

Developer Board– DB3568  
User's Guide  
HDMI Cable  
Fiber Optical Cable, RJ45 Network Cable  
IR Remote Controller (IR RC)  
Optional Remote Controller

2.4G wireless Remote Controller  
USB wire/wireless Mouse & Keyboard

Power Adapter, Input: AC100 ~ 240V, 50/60Hz, Output: 12.0V-2A

### **2.2 Product Features**

#### **Rockchip RK3568 Quad-core CPU**

- Quad-core ARM Cortex-A55 CPU and Mali-G52 GPU
- Neural network acceleration engine with processing performance up to 0.8 TOPS
- 4GB DDR4 memory(Optional 1G, 4G)
- 16GB EMMC Flash(Optional 8-64G)
- Android OS 11.0

 
- Built-in IEEE 802.11. AC dual band 2.4G/5G+BT5.0
- WAN and LAN RJ45 10/100/1000M Ethernet interface
- One HDMI output,
- SDK available, fully control displaying
- Peripheral interface: USB2.0 x 2,, TF Card Slot,
- Internal interface: Uart \*1, POE slot
- App Installer for application installation from USB/SD card

2.3 Appearance




No.	Label	Functional Description	Remark
1	JP3	Ethernet-1	RJ45 Ethernet-1 interface, Support PoE PD.
2	JP4	Ethernet-2	RJ45 Ethernet-2 interface
3	CN2	USB3.0 interface	2x Type A
4	J2503	Power supply interface	1x Type C
5	J4	HDMI Out	1x Type A
6	6J1	SD Card	1x Micro SD slot
7	SW4	Reset Key	System reboot button

Internal Debug Serial Port Diagram

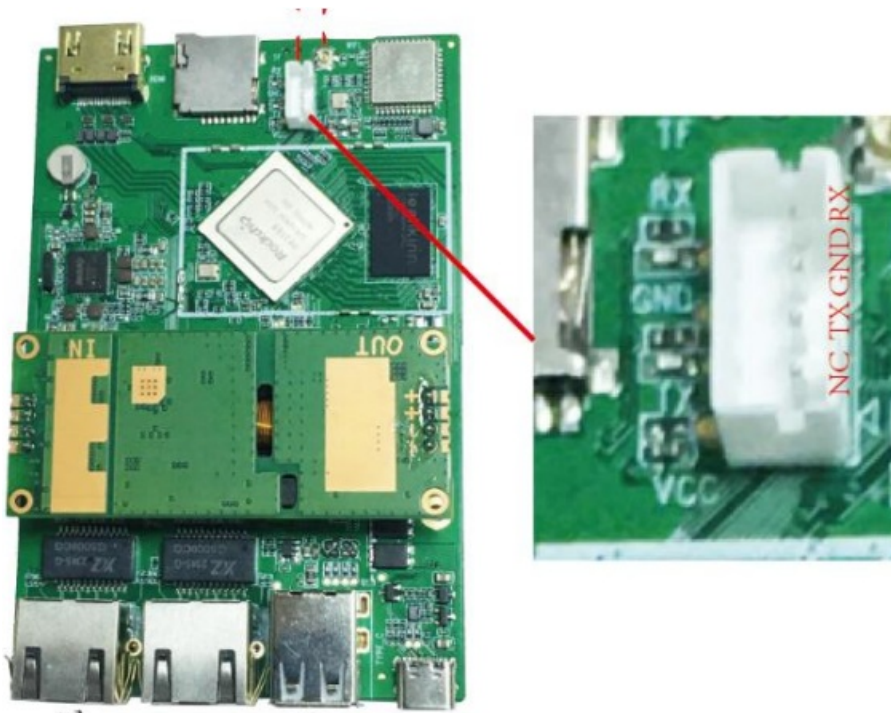


## 2.5 Display when Power Up

  2.5.1 After booting up, during the loading process, the TV will first display the “Android” interface, and then there will be a booting animation of “Enjoy TV”.  
When the load is complete, it will go to the home screen.

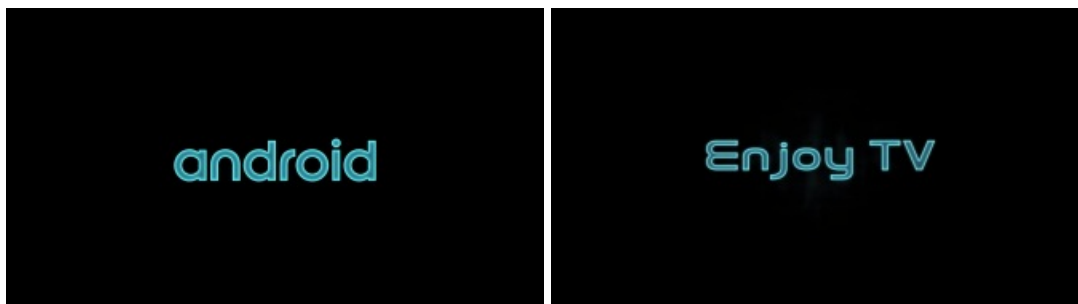


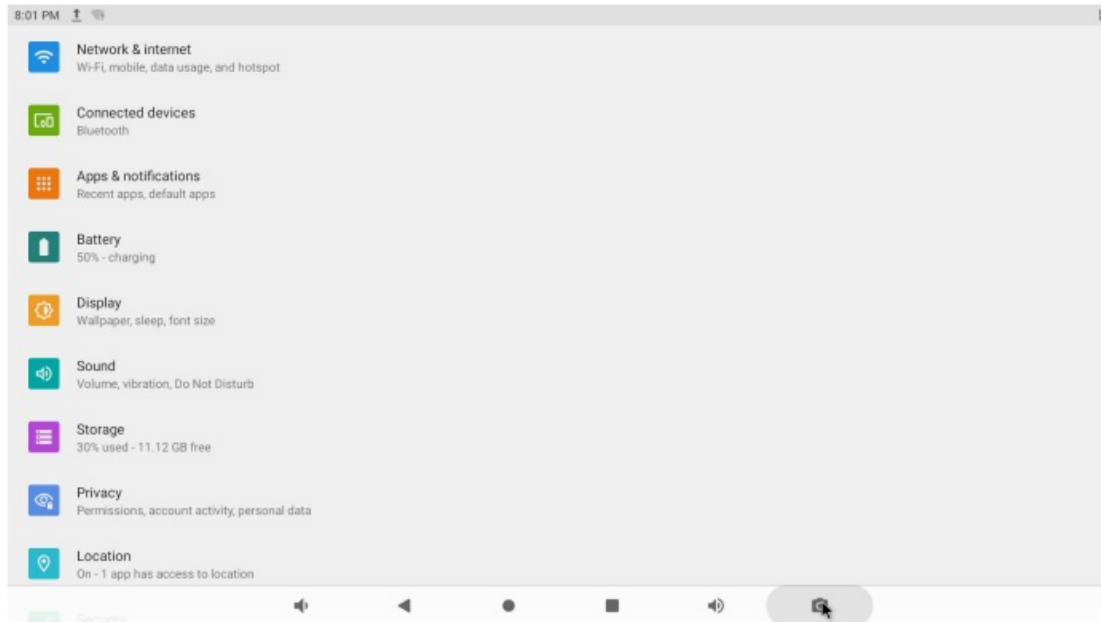 
## 2.5.2 Home Screen display.

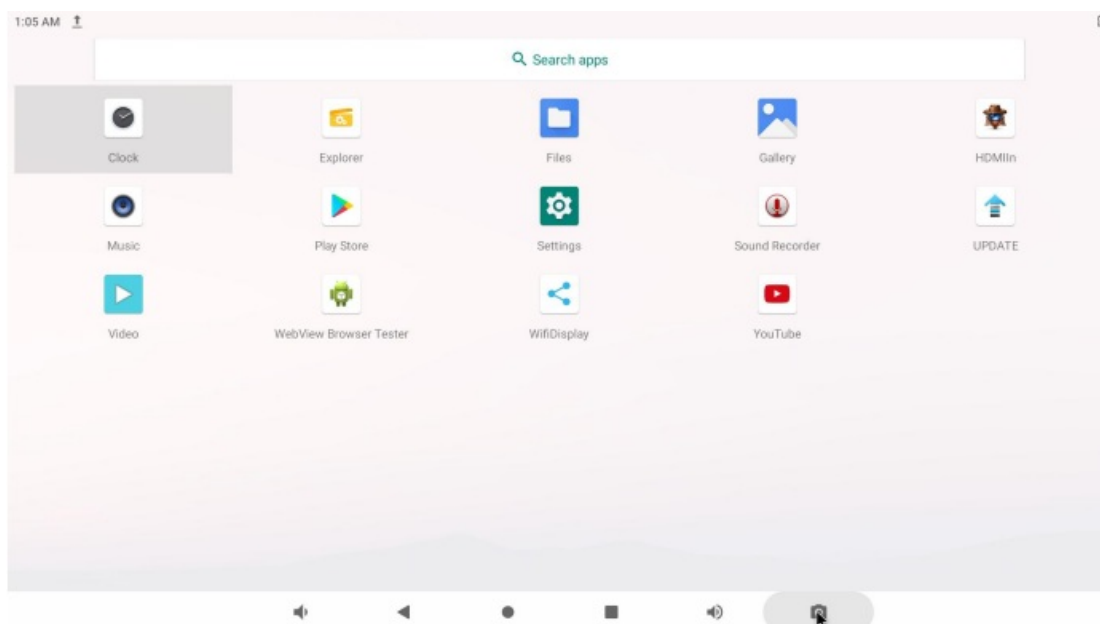

### 3. Settings

Using Navigation (4 directions), OK, EXIT, and Menu keys of Remote Controller to select the options, the option selected will be highlighted and confirmed by pressing OK key. Same operation for text input if needed.

Select  icon then press OK key.

 


#### 3.1 WiFi

3.1.1 It will automatically scan ambient WiFi networks when select “ON”.

Connect an available WiFi network. If connect a secured WiFi network, corresponding password will be input firstly. Or fail to connect and need reset password. Once build up the connection with a certain WiFi network successfully, DB3568 will connect this WiFi network automatically when restart.

Note: If factory reset, the password of WiFi network have to be reset.

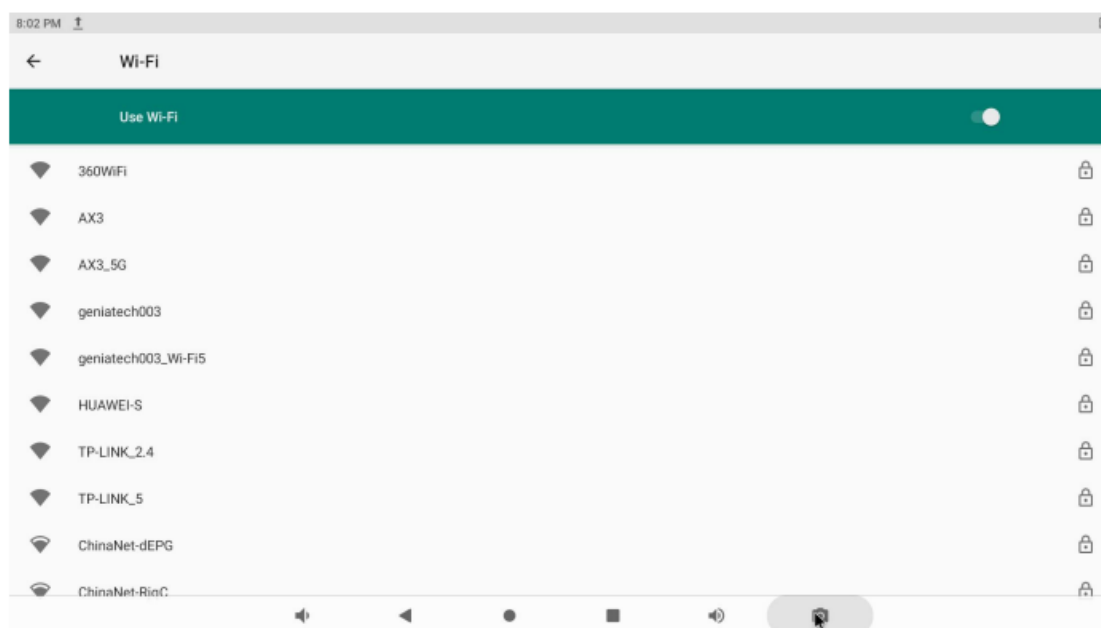


#### 3.1.2 Wi-Fi hotspot

If you want to share WIFI with your friends, you can set the wi-fi hotspot here, set the wi-fi password, and turn on the hotspot switch for transmission.


 
### 3.2 Bluetooth

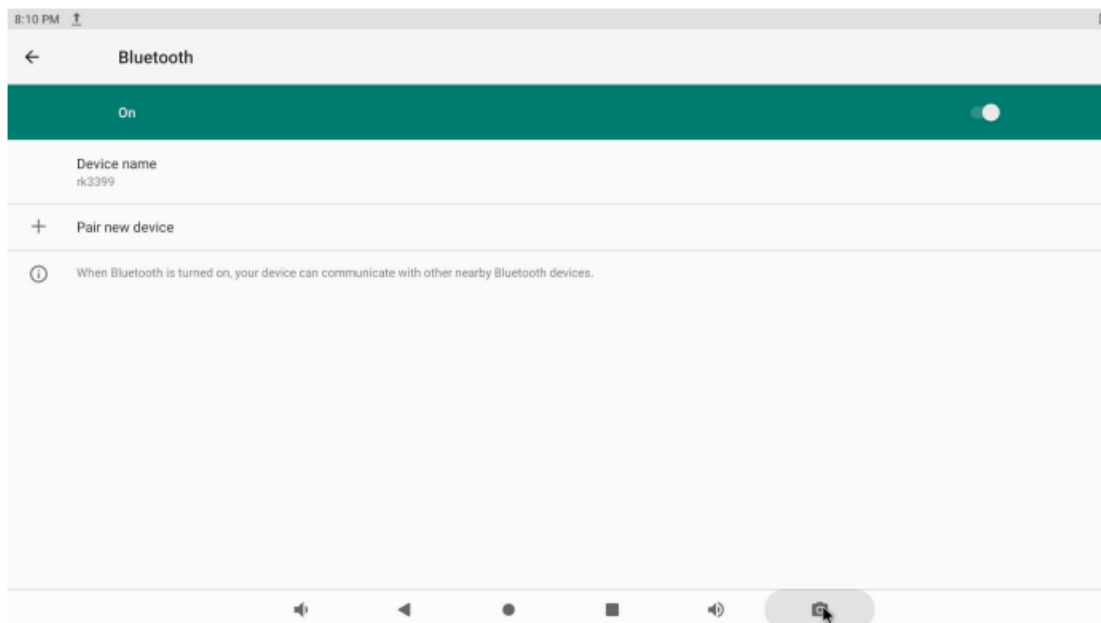


### 3.3 Ethernet





### 3.4 Data Saver

 Data Saver prevents some apps from sending or receiving data in the background

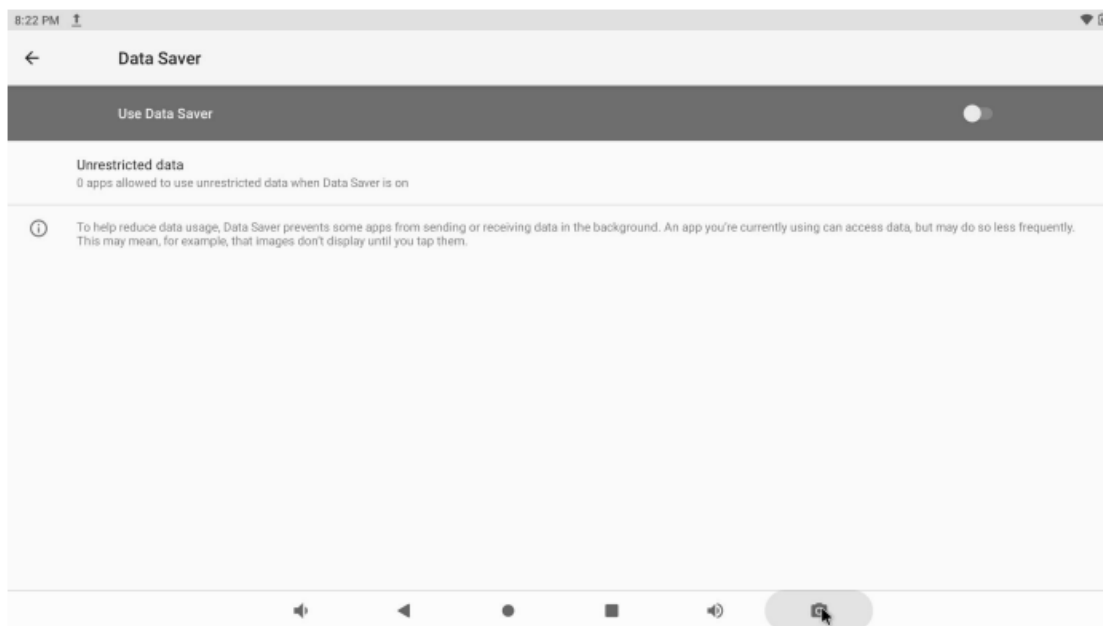


### 3.5 Networks & internet



### 3.6 Multiple users

 You can add user or configuration here

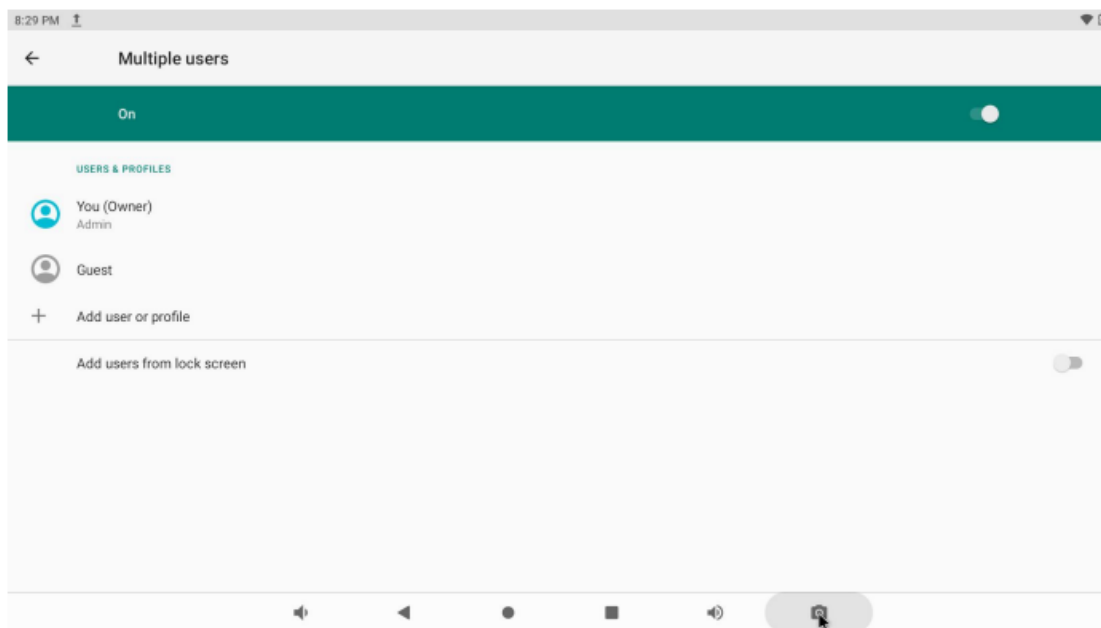

### 3.7 Sound

#### 3.7.1 Volumes

 
Increase or decrease sound volumes

#### 3.7.2 Touch Sounds

If enable Touch sound, sound will be heard while move remote controller.

#### 3.7.3 Sound Input Devices

#### 3.7.4 Sound Output Devices

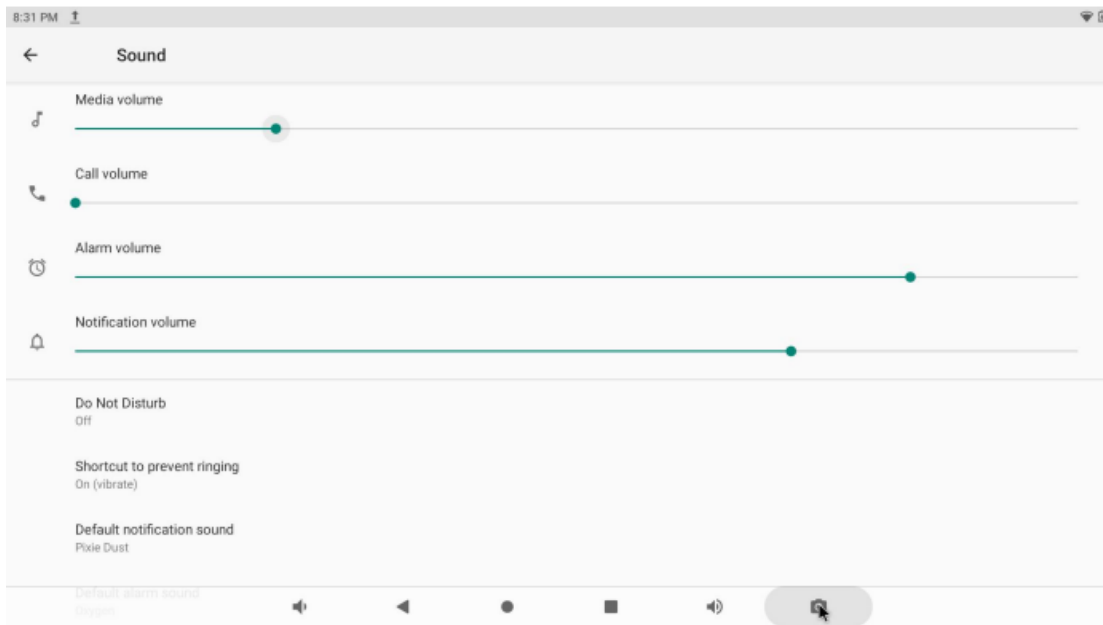

### 3.8 Display

 
#### 3.8.1 Display size

make the items on your screen smaller or larger. Some apps on your screen may change position.




#### 3.8.2 Font size

Change the font size of OSD., Make the text on screen smaller or larger

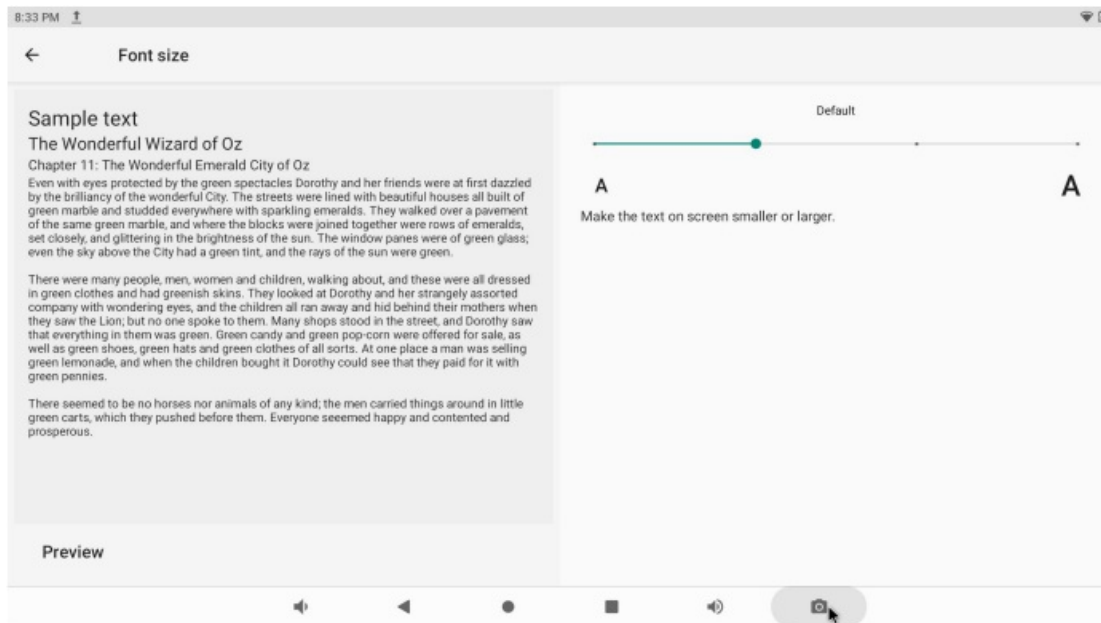

### 3.8.3 Cast screen

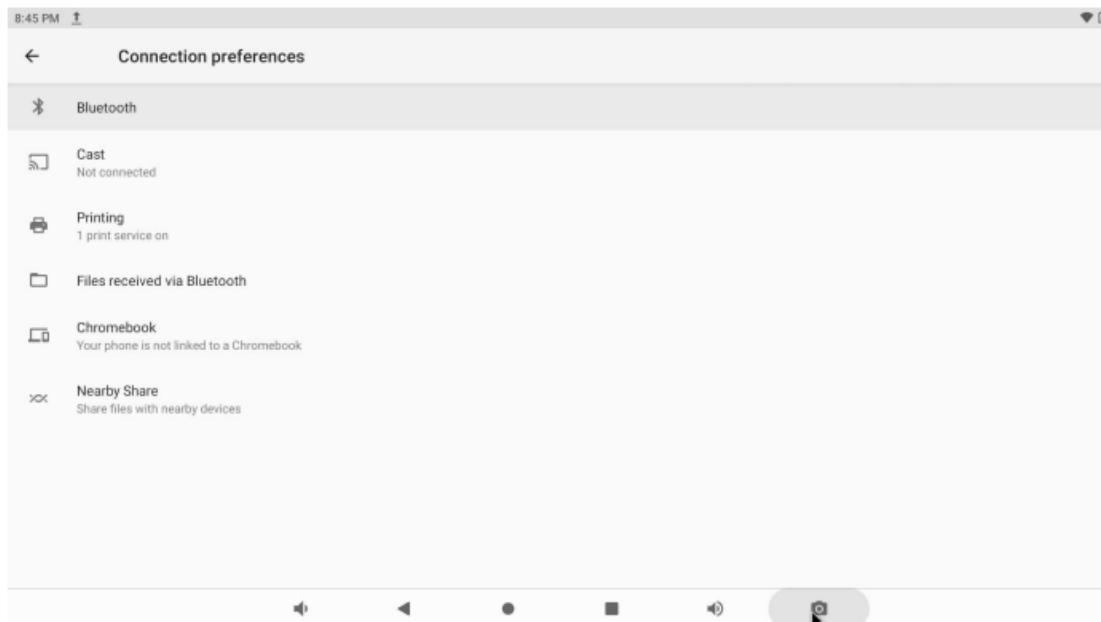 


### 3.8.4 Screenshot

Here you can set the screen shot time and select the image location



### 3.9 Storage

 Shows the storage used of the OS and SD card.

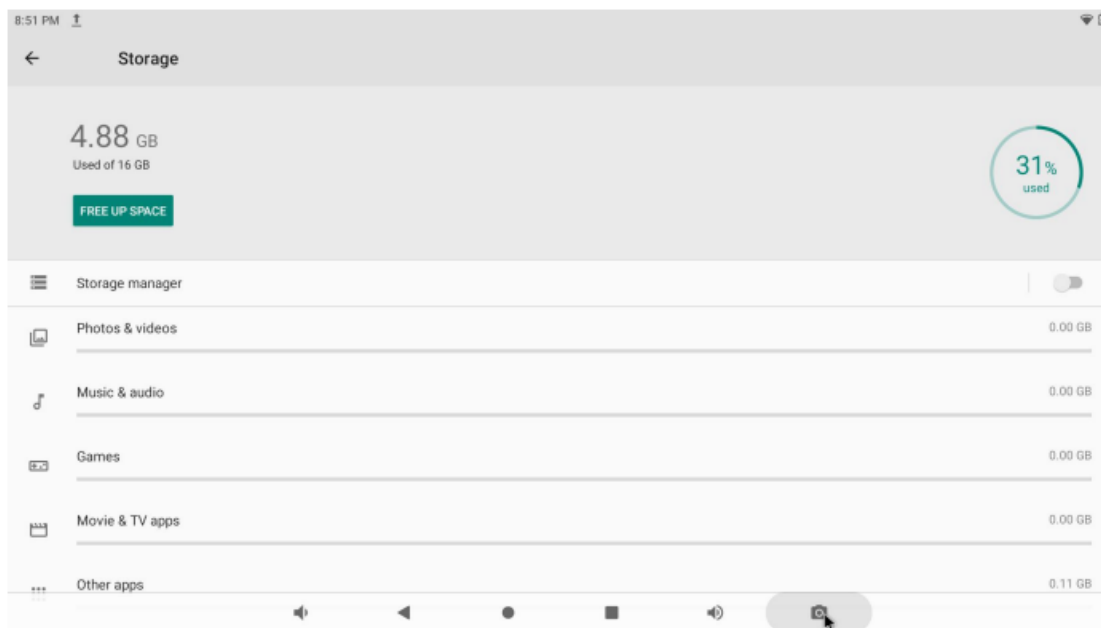


### 3.10 Apps & notifications

List all apps installed.




You can choose an application and force to shut down the app, uninstall the app, clear user data, move to SD card and clear cache data.

 
### 3.11 Google services

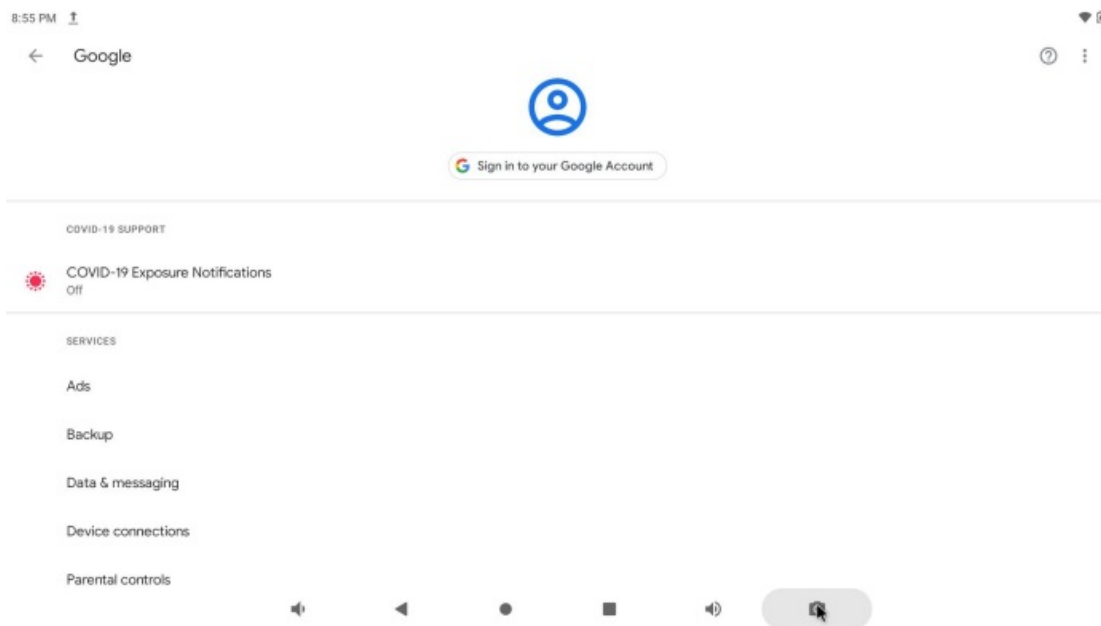

### 3.12 Notification

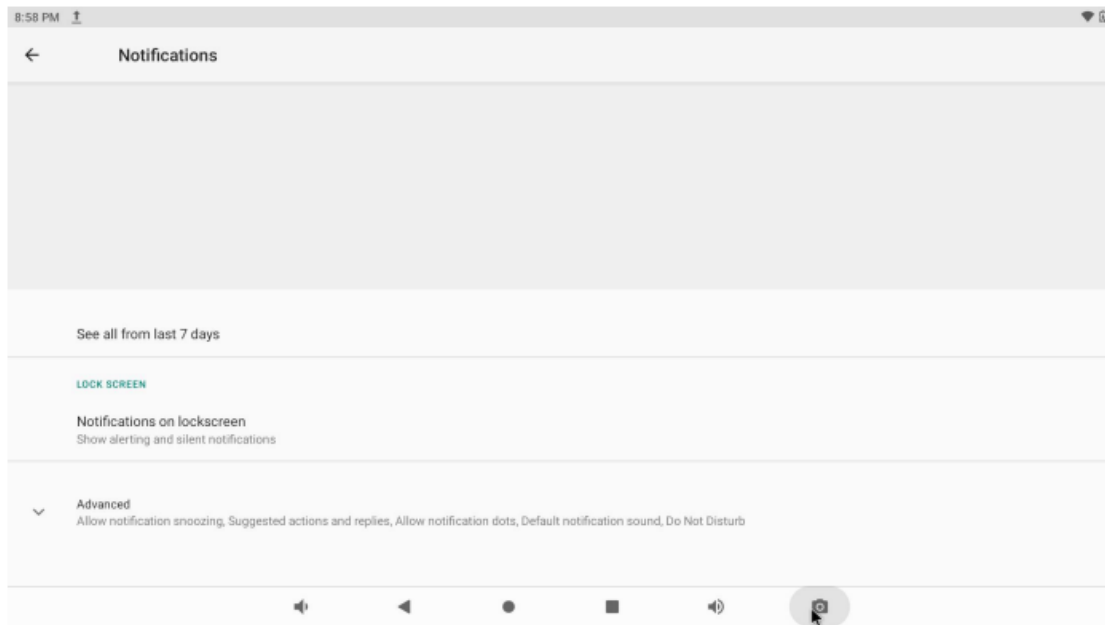 

### 3.13 Location

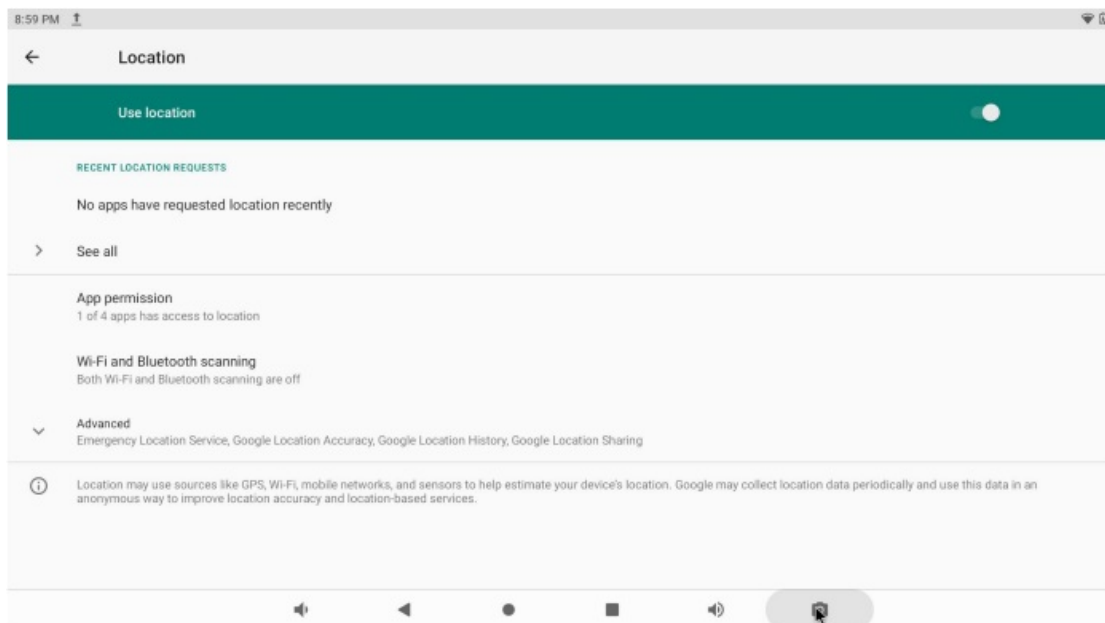 

### 3.14 Security



### 3.15 Languages & input



Change OSD language and input method.

The default input method is android standard keyboard.

If you are using our IR remote control, enter into “Default” option and switch to remote controller input method.

### 3.16 Reset options





### Factory data rest:

 
You can reset all the settings and apps to factory default.

Note: You might want to backup important data before resetting the box. Once you choose to rest to factory default, all data/apps will be deleted.


### 3.17 Sleep

Find the display button and find Sleep. You can select the Sleep time of the product.

There are 8 options for sleep time. The shortest is 'Never' and the longest is 30 minutes.

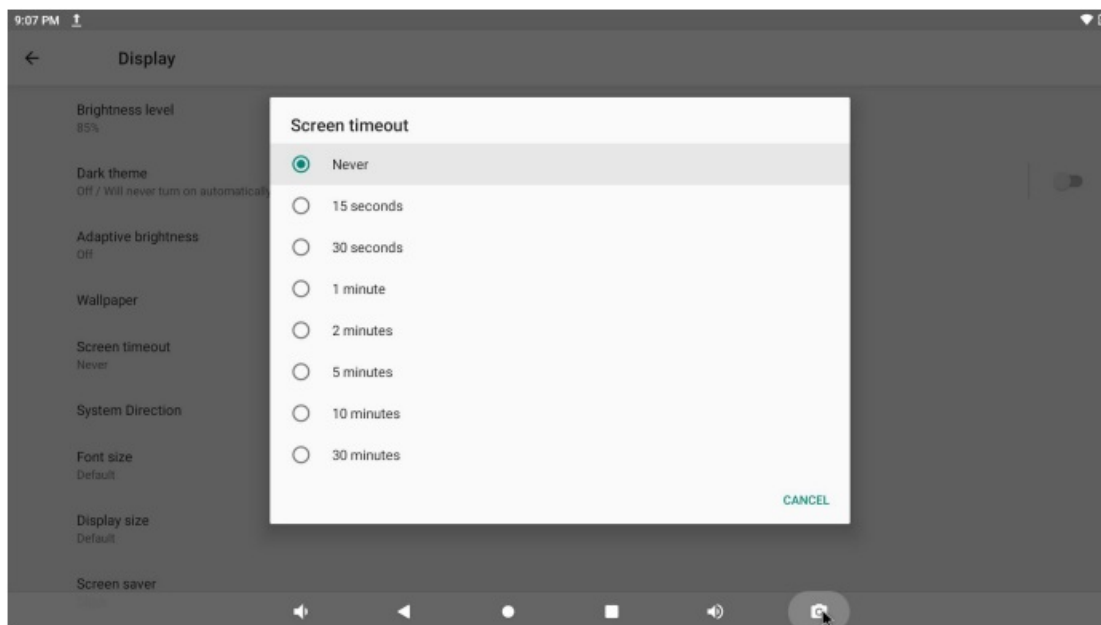

### 3.18 Add an account

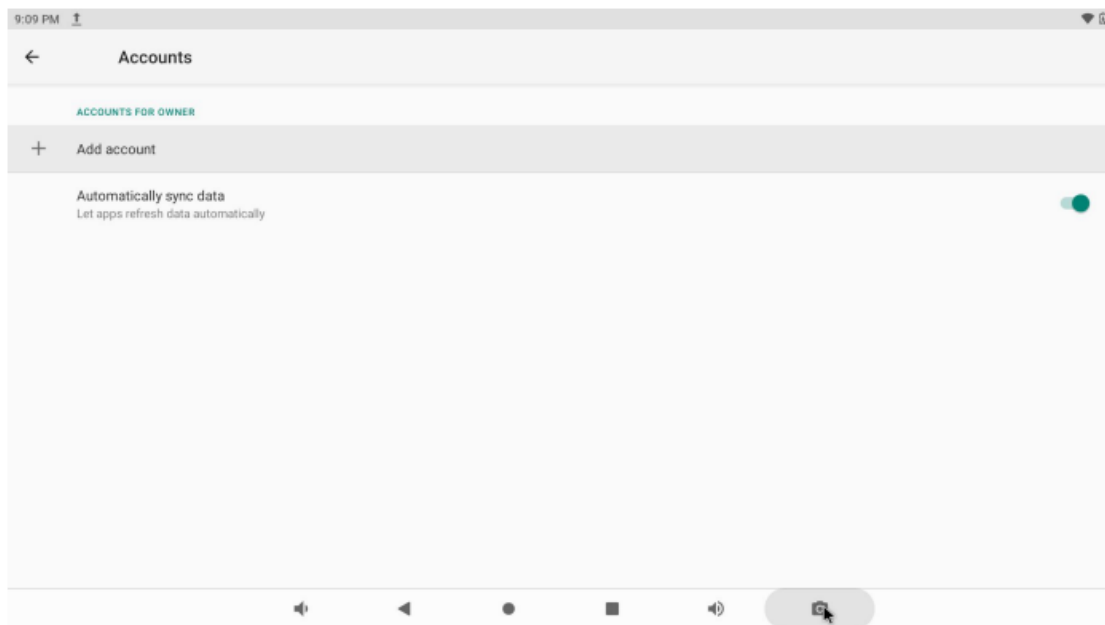 

### 3.19 Date & time



### 3.20 Choose wallpaper from

Users can choose wallpaper photos from albums and historical wallpapers according to their preferences.

 


### 3.21 Screen saver


Interface Setting: scan set the clock, color, theme, page photos.



### 3.22 About device.

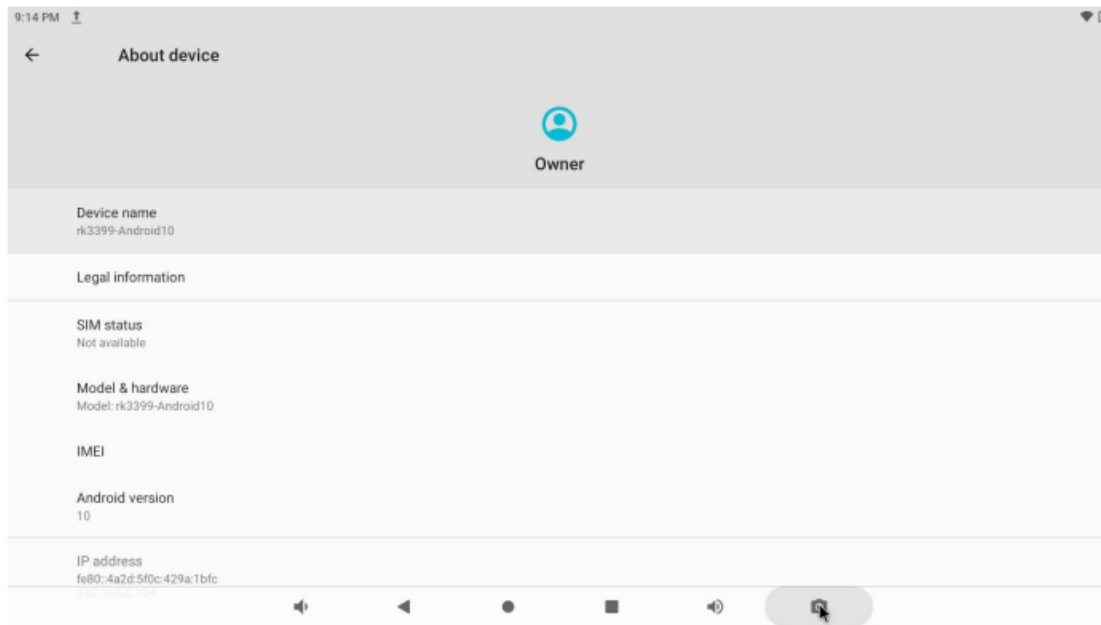

### 3.23 Camera settings

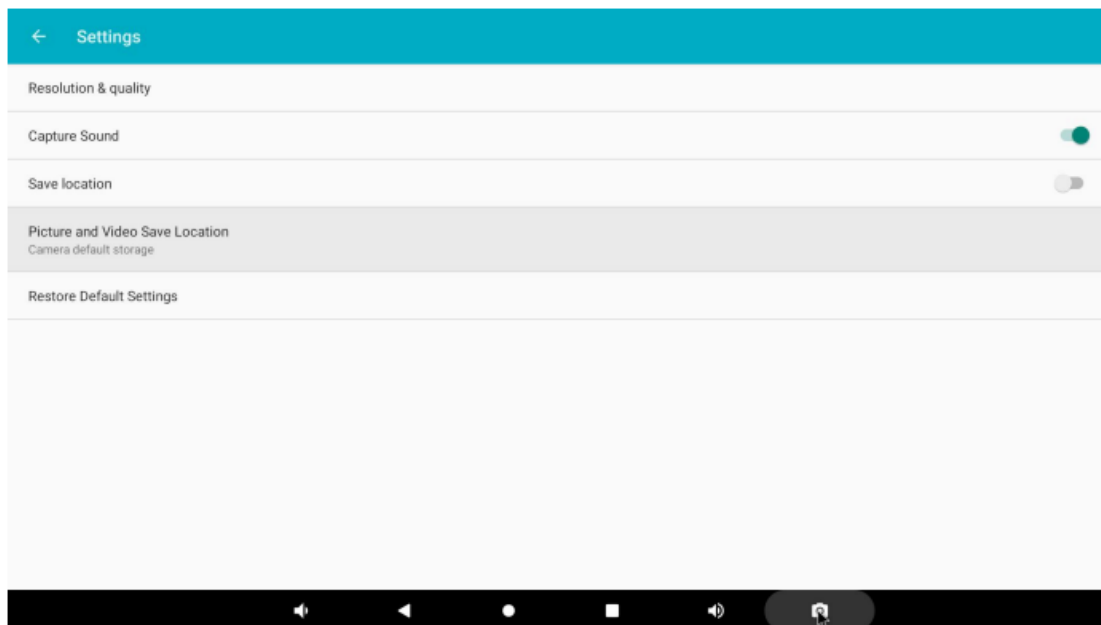 

### 3.24 HDMI

User can set the screen, display resolution, zoom in/out screen, rotate screen, dual screen display in this part.



#### 4. Apps Install & Uninstall

On DB3568, you can install apps from Android Market over the Internet or other sources, such as other online sources, the internal storage and the USB storage device and SD card that you have mounted onto DB3568. You also can manage apps on DB3568 and SD card, install/uninstall apps, stop running apps, or select other options.

#### 5. Firmware Update

You can download newest firmware from Geniatech Official website: [www.geniatech.com](http://www.geniatech.com)

#### 6. Trouble Shooting/FAQ

##### 6.1 No Picture

Refer to the TV user manual for how to select the correct video input channel.

##### 6.2 USB Content cannot be read

- The format of USB storage device is not supported
- The supported memory size is 32G maximum.
- Make sure that this player supports these files.

##### 6.3 Remote Controller cannot respond quickly to the pressing of keys

Make sure that batteries have enough power.

##### 6.4 The firmware updating is not complete after a long time

If you update the firmware over the online service, it may take a long time to download the firmware update files from the server. To save your time, update the firmware through the SD card.

#### 7. Repairs

If you contact us to repair your player, an administration fee may be charged if either:

An engineer is called out to your home at your request and there is no defect in the product.

You bring the unit to a repair center and there is no defect in the product.

We will provide you with the amount of the administration fee before we make a home visit or begin any work on your player.

We recommend you read this manual thoroughly, search for a solution on line at [www.geniatech.com](http://www.geniatech.com), or contact Geniatech Customer Care before seeking to repair your player.

## 8. Specification

CPU	Quad-core ARM Cortex-A55 CPU and Mali-G52 GPU
GPU	Mali-T860MP4 GPU (ARM Frame Buffer Compression)
RAM	4G DDR4
ROM	16G eMMC
OS	Android 11.0 and Linux(Debian)
USB	2*USB2.0
HDMI	1*HDMI OUT
DC Input	5.0V-2A
Video Out put	HDMI
POE socket	2* (4Pin2.0)
TF Card socket	1* (Max to 128GB)
LAN	2*RJ45 10/100/1000M Ethernet interface
WiFi	IEEE 802.11 AC 2.4G &5.8G(optional)
BT	5.0
Video Decoder	H.265 HEVC/MVC Main10 Profile yuv420@L5.1 up to 4096×2304@60fps H.264 AVC/MVC Main10 Profile yuv400/yuv420/yuv422/@L5.1 up to 4096×2304@60fps VP9 Profile0/2 yuv420@L5.1 up to 4096×2304@60fps VP8 version2, up to 1920×1088@60fps VC1 Simple Profile@low, medium, high levels, Main Profile@low, medium, high levels, Advanced Profile@level0~3, up to 1920×1088@60fps MPEG-4 Simple Profile@L0~6, Advanced Simple Profile@L0~5, up to 1920×1088@60fps MPEG-2 Main Profile, low, medium and high levels, up to 1920×1088@60fps MPEG-1 Main Profile, low, medium and high levels, up to 1920×1088@60fps H.263 Profile0, levels 10-70, up to 720×576@60fps
Video Encoder	H.264/AVC BP/MP/HP@level4.2, up to 1920×1080@100fps H.265/HEVC MP@level4.1, up to 1920×1080@100fps (4096×4096@10fps with TILE) Support YUV/RGB video source with rotation and mirror

## 9. Trademark Notice

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in United States and other countries.

#### FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

---

## Documents / Resources

 The image shows the cover of the Geniatech Stix3800 User's Guide. It features the Geniatech logo at the top, the model number Stix3800, and a photograph of the device. Below the photo is a small text box with additional information.	<p><a href="#">Geniatech Stix3800 Powered Digital Signage Player</a> [pdf] User Guide</p> <p>Stix3800, Stix3800 Powered Digital Signage Player, Powered Digital Signage Player, Digital Signage Player, Signage Player, Player</p>
--	--

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.