



Genie G3BT-P 3-Button Remote Control Instruction Manual

[Home](#) » [GENIE](#) » Genie G3BT-P 3-Button Remote Control Instruction Manual 

Contents

- [1 Genie G3BT-P 3-Button Remote Control](#)
- [2 Current Production Openers](#)
- [3 COMMERCIAL OPENER PROGRAMMING](#)
- [4 FCC STATEMENT](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



Genie G3BT-P 3-Button Remote Control



WARNING

Moving Doors can cause serious injury or death.

- Wall Console must be mounted in sight of door, at least 5 feet above floor and clear of moving parts.
- Keep people clear of opening while door is moving.
- DO NOT allow children to play with the remote or door opener.

If SAFETY REVERSE does not work properly:

- The closed door then disconnects opener using the manual release handle.
- Refer to Door and Door Openers Owners Manuals before attempting any repairs.

RESIDENTIAL OPENER PROGRAMMING OPERATOR PRODUCTION 2011 AND BEFORE

Openers manufactured between 1995 to 2011 and all external receivers. (LEARN CODE TYPE)

 
NOTE: Learn Code Buttons are normally located under lens covers on earlier models.

NOTE: Opener made November 1995-1997? Shaded buttons compatible



Place opener into programming mode:


1. Press LEARN CODE button until RED LED begins to blink then release.
2. Press desired remote button once every two seconds until door operates.

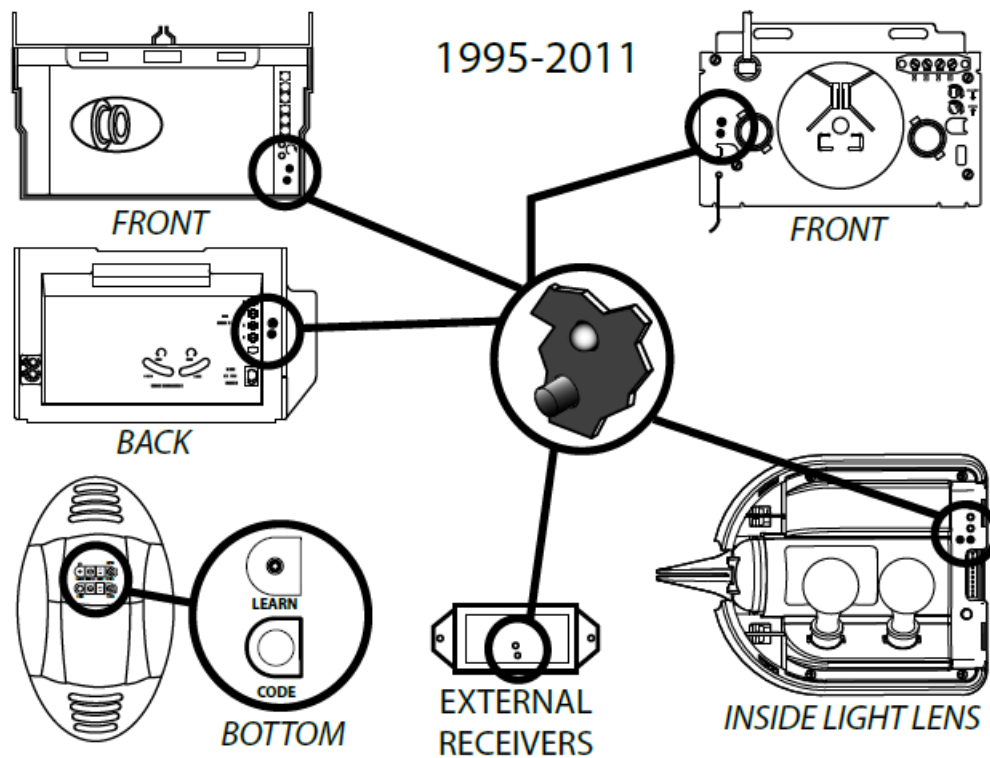

RESIDENTIAL OPENER PROGRAMMING OPERATOR PRODUCTION 2011 – CURRENT


NOTE: The openers LEARN MODE will time out in 30 seconds. Programming must be completed within 30 seconds

 Current Production Openers

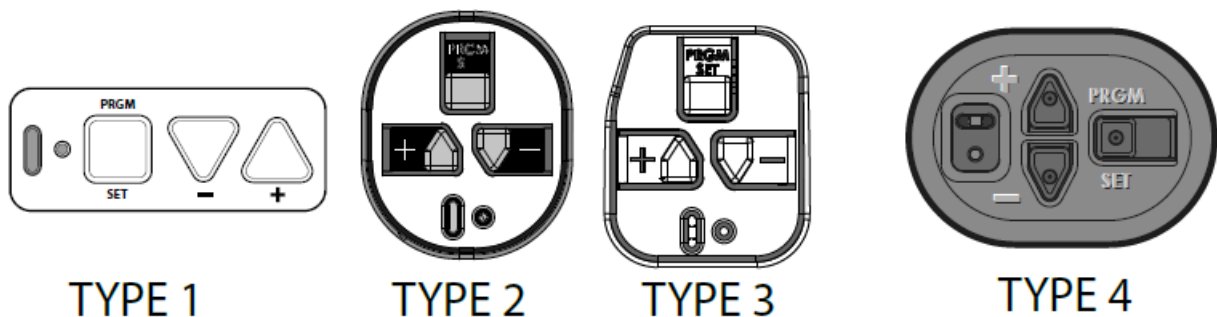

There are 4 types of programming button pads. Type 1 is shown in these steps. All buttons perform the same function and programming is the same for all types shown above.

 Place operator into programming mode: TYPE 1-2-3-4

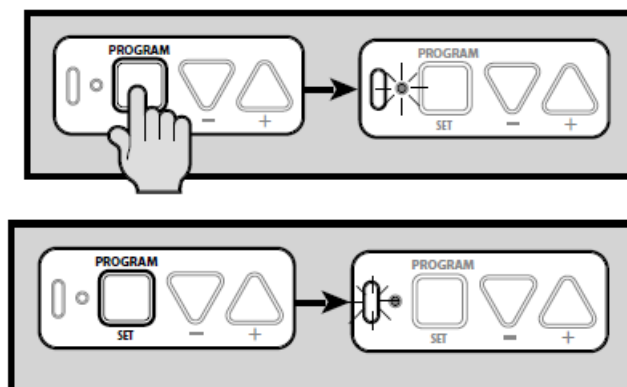

1. Press and hold the program button until the round LED turns blue, then release.

2. The round LED will go out and the long LED will begin flashing purple.
3. Press desired remote button once every two seconds until door operates.

COMMERCIAL OPENER PROGRAMMING


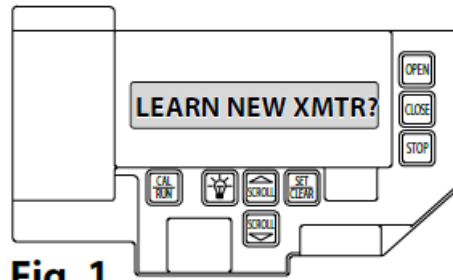 


Fig. 1

1. If the operator is in RUN mode, press CAL/RUN key to enter the calibration mode.
2. Press SCROLL (up or down) until the display reads "LEARN NEW XMTR?" Fig.1
 - This question along with the instruction "HIT SET FOR YES" will continuously pan across the display window.
 - Pressing SCROLL or CAL/RUN will cancel the operation.
3. Press SET/CLEAR.
 - The display will read "PUSH XMTR BUTTON TWO TIMES TO LEARN XMTR."
4. Choose any transmitter button and press it two times.
 - A random number will be assigned to the transmitter and the display will read "XMTR __ LEARNED."
 - That transmitter is entered and ready to operate the door.
 - Label the transmitter with the assigned number.
5. Press SCROLL (up or down) to move on to another menu item, or CAL/RUN to exit the CALIBRATION mode

 CHANGING THE BATTERY:

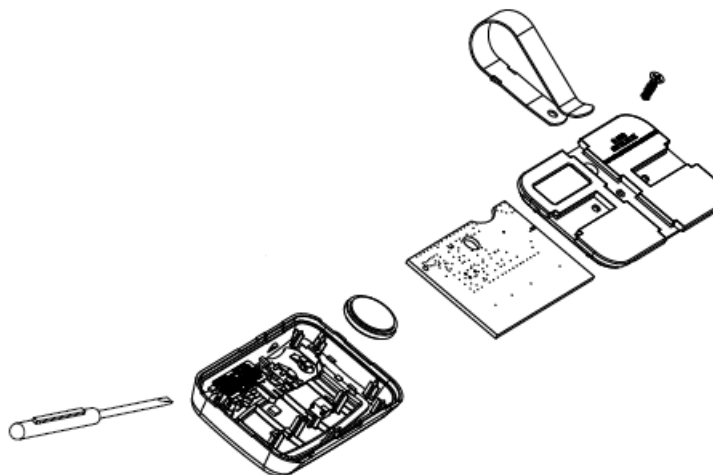

1. Remove visor clip.
2. Remove small Phillips head backing screw.
3. Pry the case open with a small coin or screwdriver.
4. Remove circuit board.
5. Replace the battery with a CR2032 coin cell.

PROGRAMMING ASSISTANCE:

If the opener does not activate after the steps shown, repeat steps or contact Customer Care by website chat (www.geniecompany.com) or by phone at: 1-800-354-3643 for programming assistance

FCC STATEMENT

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC / IC Statement

This device complies with FCC Part 15 and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation of the device.

Documents / Resources

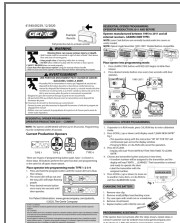

[Genie G3BT-P 3-Button Remote Control](#) [pdf] Instruction Manual
G3BT-P, 3-Button Remote Control, G3BT-P 3-Button Remote Control