



GENIE GTR-3 Intellicode Remote Transmitter Instructions

[Home](#) » [GENIE](#) » GENIE GTR-3 Intellicode Remote Transmitter Instructions 

Contents

- [1 GENIE GTR-3 Intellicode Remote Transmitter](#)
- [2 IMPORTANT INFORMATION](#)
- [3 BATTERY INSTALL/REPLACEMENT](#)
- [4 PROGRAM THE RECEIVER](#)
- [5 ERASING ALL RECEIVER MEMORY](#)
- [6 Documents / Resources](#)



GENIE GTR-3 Intellicode Remote Transmitter



IMPORTANT INFORMATION

A unique transmitter code is set at the factory for each INTELLICODE® transmitter.

WARNING

Moving the Door can cause serious injury or death.

- Do NOT install the transmitter unless the door operator's safety reverse works as required by the door operator's manual.
- Wall control must be mounted in sight of the door, at least 5 feet above the floor, and clear of moving door parts.
- Keep people clear of opening while the door is moving.
- Do NOT allow children to play with the transmitter or door operator.

If safety reverse does not work properly:

- Close the door then disconnect the operator using the manual release handle.
- Do NOT use a transmitter or door operator.
- Refer to Door and Door Operator Owner's Manuals before attempting any repairs.

Electrical Shock can cause serious injury or death.

- The power cord must be unplugged before attaching any wires.
- Be sure wire ends do not touch each other or other terminals.
- If you have questions or if you need a manual, contact the distributor or manufacturer of the operator.

BATTERY INSTALL/REPLACEMENT

1. To open the case, gently push straight out on the battery cover lock tab as shown, in Fig. 1.
2. Slide open the battery cover. (New install) Make sure the new battery is facing the proper direction. Match battery polarity with symbols inside battery housing, Fig. 2.
 - Insert the new battery. (Replacement) Recommended replacement battery type: Alkaline A23, 12 volts.
 - Remove the old battery and insert a new battery.
3. Slide the battery cover back in place until it clicks shut.
4. To confirm power, press any remote button. LED should come ON. For replacement battery, NO re-programming is needed.

FIG. 1



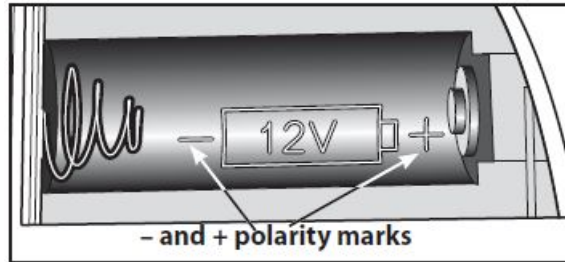



FIG. 2

PROGRAM THE RECEIVER

1. Locate the Learn Code button and Radio Signal indicator LED on the powerhead of your door operator, Fig. 3A & B.
2. Press and release the Learn Code button.
 - The Radio Signal LED indicator will blink approximately 2 times per second.
3. Press a transmitter button once within 30 seconds.

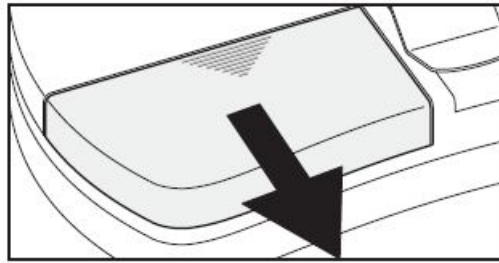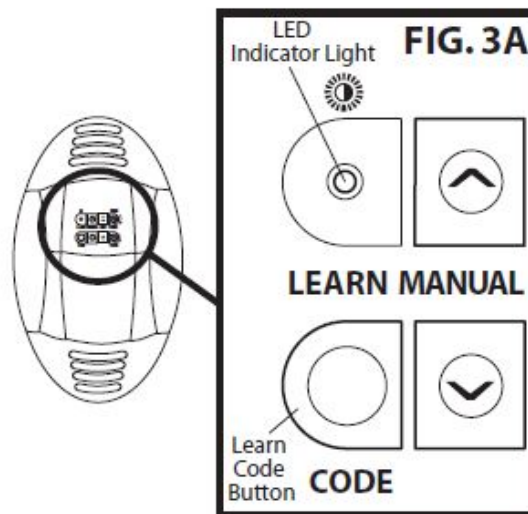

- The LED indicator stays lit – SOLID.
4. Press the same transmitter button again within 30 seconds.
 - LED indicator will go out.
 - The Remote is now programmed and ready for use.
 5. Press the same Transmitter Button again and the door will move.
Repeat Steps 2 through 4 for each transmitter to be learned.
- **NOTE:** Only ONE button of this Multi-Button Transmitter can be programmed into a single door operator. The other buttons are to control other door operators.

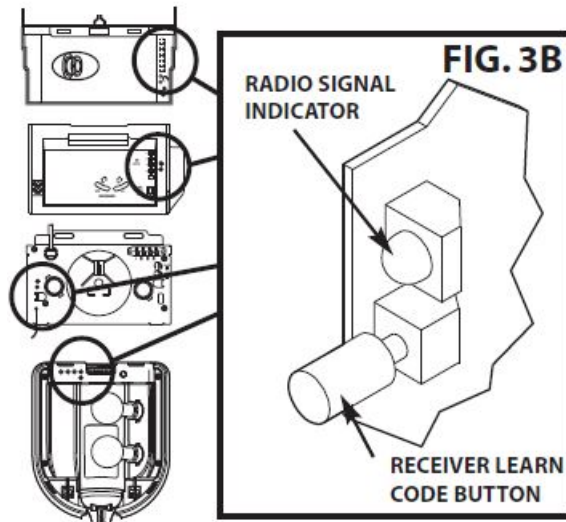

- **NOTE:** A maximum of 7 Transmitter, Wireless Keypad and other access device codes can be stored into the receiver memory at one time. If a Transmitter becomes lost or if you want to delete a Transmitter proceed to ERASING ALL RECEIVER MEMORY.

ERASING ALL RECEIVER MEMORY

1. Press and HOLD the Learn Code button for 10 seconds or until Radio Signal LED indicator goes out. ALL Transmitter Codes are erased from Receiver (powerhead) memory.
2. Reprogram the Receiver with the remaining Transmitter Codes (Repeat Section 3 steps 2 through 4).
3. Reprogram the Receiver with any Wireless Keypad and other access device Codes using the instructions accompanying those devices.

TRANSMITTER OPERATION

- Point Transmitter at the garage door and press the button. Door will move.
- Press the Transmitter Button again and the door will stop.
- Press the Transmitter Button again and the door will move the other way. The door automatically stops at the end of the open or close cycle.

FCC and IC CERTIFIED

This device complies with FCC Part 15 and RSS 210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. For additional information or help, see Owner's Manual or

contact Customer Service: Call 1-800-354-3643

Documents / Resources



[GENIE GITR-3 Intellicode Remote Transmitter](#) [pdf] Instructions

GITR-3, GITR-3 Intellicode Remote Transmitter, Intellicode Remote Transmitter, Remote Transmitter, Transmitter