Genius MS-1 x **Micro SD Memory Card Adapter** 





### **Genius MS-1 x Micro SD Memory Card Adapter Instruction Manual**

Home » GENIUS » Genius MS-1 x Micro SD Memory Card Adapter Instruction Manual



#### **Contents**

- 1 Genius MS-1 x Micro SD Memory Card **Adapter**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Installation Instructions**
- **5 Troubleshooting Tips**
- 6 Documents / Resources
  - **6.1 References**
- **7 Related Posts**



Genius MS-1 x Micro SD Memory Card Adapter



#### **Product Information**

The Micro SD Memory Card Adapter is designed for use with the PSP Go gaming console. It allows users to expand the storage capacity of their PSP Go by using a Micro SD card.

#### **Specifications:**

· Compatible with: PSP Go

Material: PlasticColor: Black

• **Dimensions:** 2.5 x 1.5 x 0.2 inches

#### **Product Usage Instructions**

#### **Installation Steps:**

- 1. Unscrew the back of the PSP Go, including the 2 screws on the top.
- 2. Clip the small plastic support tabs behind the PSP Go back cover to ensure proper closure after installing the adapter card.
- 3. Cut flush the small plastics in the highlighted area to reduce bulging caused by the SD memory card reader.
- 4. Place your Micro SD card inside the Memory Stick PRO Duo adapter.
- 5. Open the M2 slot cover on the PSP Go and insert the adapter. Ensure you hear a clicking sound to confirm proper insertion.
- 6. Secure the adapter cable at the back of your PSP Go using heat-resistant tape or black tape.

#### FAQ:

#### **Troubleshooting Tips:**

If you encounter any issues with the adapter, ensure that it is inserted properly and securely. Make sure all components are connected as instructed in the installation steps.

#### Installation Instructions

# Micro SD Memory Card Adapter for the PSP Go Installation instructions in 5 easy steps <a href="https://geniusgamemods.com/">https://geniusgamemods.com/</a>.

- 1. Unscrew the back of the PSP Go (also the 2 screws on the top).
- 2. Clip the small plastic support tabs behind the PSP Go back cover. If you don't remove these, the PSP Go back cover won't close once the adapter card is there.




• Additionally, you will want to cut flush the small plastics in the highlighted area below. This will help reduce any bulging caused by the SD memory card reader.




3. Place your Micro SD card inside of the Memory Stick PRO Duo adapter.



4. Open the M2 slot cover on the PSP Go and Insert the adapter in. Once you slot it in, you should hear a clicking sound which means the adapter is inserted and the system should be reading it. If you don't hear a clicking sound, make sure you're pushing it in until it clicks.

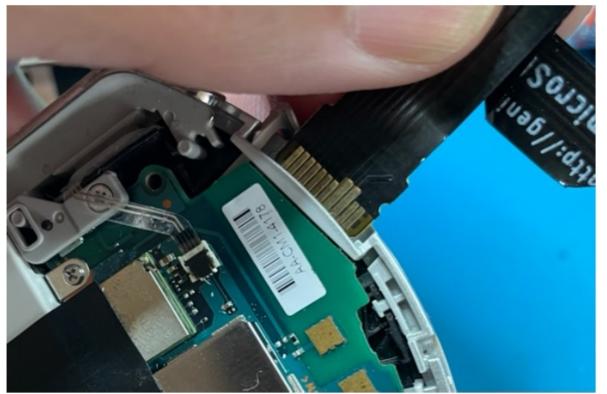

5. The adapter cable should easily slot into the back of your PSP Go, so now just place a piece of heat-resistant tape or black tape (either is recommended) to hold the Memory Stick PRO Duo card and another piece to hold down the right and left side of the adapter cable as shown.

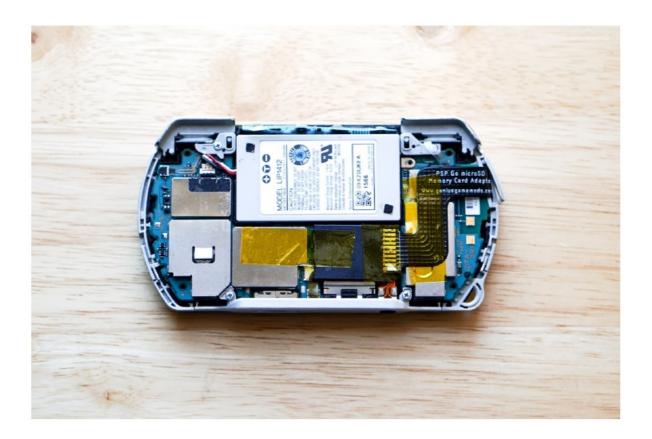

#### Notes:

- The adapter supports Micro SD cards up to 128gb.
- Higher capacity cards such as 128gb with lots of data may take a few more seconds than normal to load.
- The Micro SD card adapter is fragile, please be careful to not break it when installing the adapter.
- Upon inserting a Micro SD card for the first time via the adapter, the system will prompt you to format the Memory Stick before it can be fully read. You can go to system settings as there is an option to format the SD card and format the SD card easily.

#### **Troubleshooting Tips**

- To ensure the M2 card slot flap/door is completely closed upon inserting the adapter, in some cases, you will need to make sure the adapter cable is as flat as possible on that end. It could help if you extend the card reader to the left, essentially pulling to the left the adapter cable to flatten it as much as possible, then tape it down.
- If you've inserted the adapter into the M2 slot and it says 0kb in the capacity, or the SD card isn't recognized right away, give it a few seconds to load, and if it doesn't, take it out and re-insert it back in until the PSP Go recognizes the SD card and Its capacity. You may need to remove and re-insert the adapter a few times until it reads the card.
- If you have inserted the SD card into the adapter card reader and the adapter isn't recognizing the card and the orange light on the left of your device is blinking rapidly, go ahead and remove the adapter, remove the SD card from the card reader also, once you have done this, re-insert the SD card again, then re-insert the adapter back into the M2 slot. If this still doesn't work for you, please contact us for support.

#### **Documents / Resources**



## Genius MS-1 x Micro SD Memory Card Adapter [pdf] Instruction Manual MS 1 x Micro SD Memory Card Adapter MS 1 x Micro SD Memory Card Adapte

MS-1 x Micro SD Memory Card Adapter, MS-1 x, Micro SD Memory Card Adapter, Memory Card Adapter, Card Adapter, Adapter

#### References

- Genius Game Mods
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.