



GENMAX 50-Amp RV Ready Inverter Generator Parallel Kit User Manual

[Home](#) » [GENMAX](#) » GENMAX 50-Amp RV Ready Inverter Generator Parallel Kit User Manual 

GENMAX 50-Amp RV Ready Inverter Generator Parallel Kit User Manual



SAVE THIS MANUAL: This manual contains important information regarding safety, operation, maintenance and storage of this product. Before use, read carefully and understand all cautions, warnings, instructions and product labels. Failure to do so could result in serious personal injury and/or property damage.

Contents

[1 IMPORTANT SAFETY INSTRUCTIONS](#)

[2 OPERATION](#)

[3 TROUBLESHOOTING](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

IMPORTANT SAFETY INSTRUCTIONS



WARNING! Read all instructions.

Failure to follow all instructions listed below may result in fire, serious injury and/or DEATH FROM ELECTRIC SHOCK.

The warnings and precautions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Set Up Precautions

1. Set up and use only on a flat, level, dry, well-ventilated surface.
2. All connections and conduits from the Generators to the load must only be installed by trained and licensed electricians, and in compliance with all relevant local, state, and federal electrical codes and standards, and other regulations where applicable.
3. Wear safety goggles during set up.
4. Inspect thoroughly before each use. Do not use if damaged.
5. Do not plug more than the specified number of watts into this cord.
6. Do not run Parallel Kit through doorways, holes in ceilings, walls or floors.
7. Use two of the same model generator. Do not use two different generator models.
8. Turn generators off before connecting the Parallel Kit.
9. Fully insert cable plugs into outlets.
10. Do not remove, bend or modify any metal prongs or pins of the Parallel Kit.
11. Do not use excessive force to make connections.
12. Keep away from water.
13. Keep Parallel Kit dry and away from wet ground and mud.
14. Do not drive, drag or place objects over Parallel Kit Cords.
15. Do not walk on Parallel Kit Cords.

Operating Precautions



WARNING!

TO PREVENT SERIOUS INJURY, DEATH, AND GENERATOR AND/OR EQUIPMENT DAMAGE FROM ELECTRIC SHOCK AND FIRE:

1. Never use generators indoors, including in garages, basements, crawl spaces and sheds. Opening doors and windows or using fans will NOT prevent carbon monoxide build up in the home.
2. When using generators, keep them outdoors and far away from open doors, windows, and vents to avoid toxic

levels of carbon monoxide from building up indoors.


3. If you start to feel sick, dizzy, or weak while using generators, get to fresh air right away. The carbon monoxide from generators can quickly lead to full incapacitation and death.
4. Keep children and pets away from the Parallel Kit, especially while it is operating.
5. Do not exceed the maximum power rating of the generators. Make sure that the total electrical rating of the all of the tools or appliances plugged into the generators at the same time does not exceed that of the generator. Check that the startup surge will not be beyond the limit of the generators.
6. Avoid substantially overloading which will trip the circuit breaker. Slightly overloading the generators may not trip the circuit breaker, but will lead to premature generator failure.
7. Do not attempt to connect or disconnect load connections while standing in water, or on wet or soggy ground.
8. Do not touch electrically energized parts of the generators and interconnecting cables or conductors with any part of the body, or with any noninsulated conductive object.
9. Insulate all connections and disconnected wires.
10. Guard against electric shock. Prevent body contact with grounded surfaces such as pipes, radiators, ranges, and refrigerators.
11. Only connect two identical Inverter Generators together using the Parallel Kit.
12. Connect Parallel Kit only to terminals marked "Parallel Outlets" on the front of the generator.
13. Do not remove or connect Parallel Kit while generators are running.
14. Do not attach a Parallel Kit to only one generator.
15. Do not attach a heavy load to any other outlet on a Generator that has a Parallel Kit attached.
16. Wear safety glasses during use.
17. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to a heart pacemaker could cause pacemaker interference or pacemaker failure. Caution is necessary when near the engine's magneto or recoil starter.
18. Accessories that may be suitable for one piece of equipment may become hazardous when used on another piece of equipment.
19. Stay alert, watch what you are doing and use common sense when operating this parallel kit. Do not use while tired or under the influence of drugs, alcohol or medication.
20. Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
21. Use the equipment, accessories, etc., in accordance with these instructions and in the manner intended for the particular type of equipment, taking into account the working conditions and the work to be performed. Use of the equipment for operations different from those intended could result in a hazardous situation.
22. **WARNING:** This product contains or, when used, produces a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. (California Health & Safety Code § 25249.5, et seq.)
23. Before use, check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the equipment's operation. If damaged, have the equipment serviced before using. Many accidents are caused by poorly maintained equipment.
24. Use the correct equipment for the application. Do not modify the equipment and do not use the equipment for a purpose for which it is not intended.

Service Precautions


1. Before service, maintenance, or cleaning, unplug the Parallel Kit from both generators.
2. Keep all electrical equipment clean and dry. Replace any wiring where the insulation is cracked, cut, abraded, or otherwise degraded. Replace terminals that are worn, discolored, or corroded. Keep terminals clean and tight.
3. Do not alter or adjust any part of the equipment or its engine that is sealed by the manufacturer or distributor. Only a qualified service technician may adjust parts that may increase or decrease governed engine speed.
4. Wear safety goggles during service.
5. Maintain labels and nameplates on the equipment. These carry important information.
6. Have the equipment serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the equipment is maintained.
Do not attempt any service or maintenance procedures not explained in this manual or any procedures that you are uncertain about your ability to perform safely or correctly.
7. Store equipment out of the reach of children.

OPERATION

Components

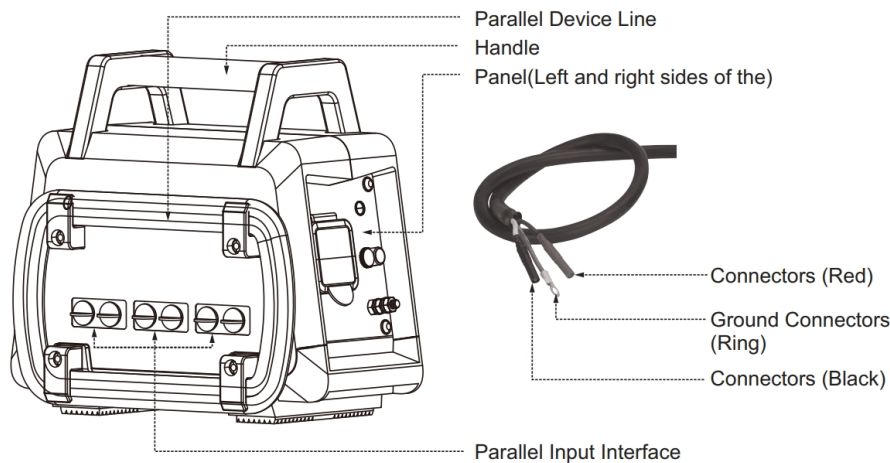

Panel

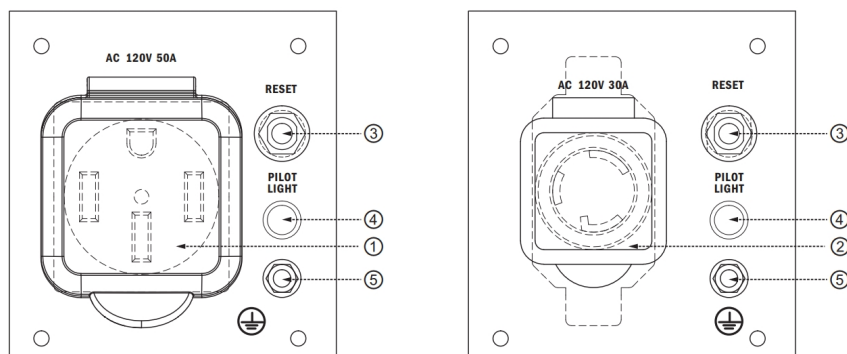

1. **120-Volt, 50-Amp Outlet:** The outlet is capable of carrying a maximum of 50 amps.
2. **120-Volt, 30-Amp Outlet:** The outlet is capable of carrying a maximum of 30 amps.
3. **Reset:** If the inverter is overloaded, the reset breaker will trip. The engine will continue to run, but there will be no output from the inverter. Unplug the devices and reduce the load. Push in the reset breaker to reset it.
4. **Pilot Light:** The parallel box output is green on.
5. **Ground Terminal:** The ground terminal is used to externally ground the inverter


⚠ Read the ENTIRE IMPORTANT SAFETY INFORMATION section at the beginning of this manual including all text under subheadings there in before set up or use of this product.

1. Inspect the Parallel Kit and generators for damaged, loose, and missing parts before set up and starting. If any problems are found, do not use equipment until fixed properly.
2. Add fuel and oil to the generators according to the instructions in the generator manual.
3. Set up the Parallel Kit either on the ground or clipped to one of the two generators.


4. Connection cable:

1. Connect the Connectors (red) to the parallel outlets (red) on both generators and Parallel Kit.
2. Connect the Connectors (black) to the parallel outlets (black) on both generators and Parallel Kit.
3. Connect the ground connector (ring) to the ground terminal of the generator and the parallel component, and connect the ground bolt on the parallel component to the ground screw using a ground cable.


Tighten the ground screw.

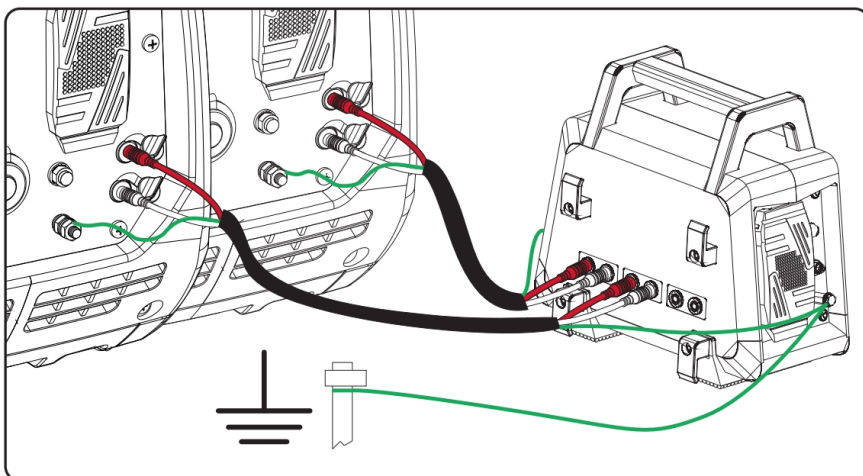

NOTE: If cables are connected incorrectly, generators will not output power.

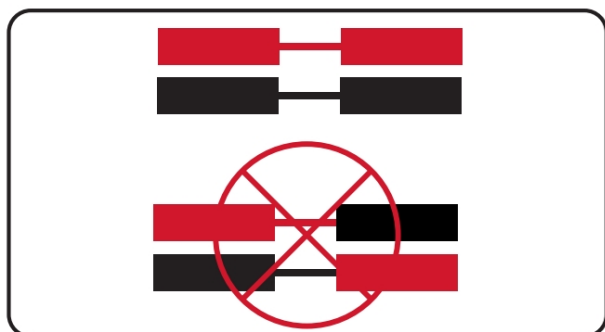

5. Turn on one generator, then the second. Check that the Output lights of both generators are green.
6. Turn LOW IDLE to "ON"

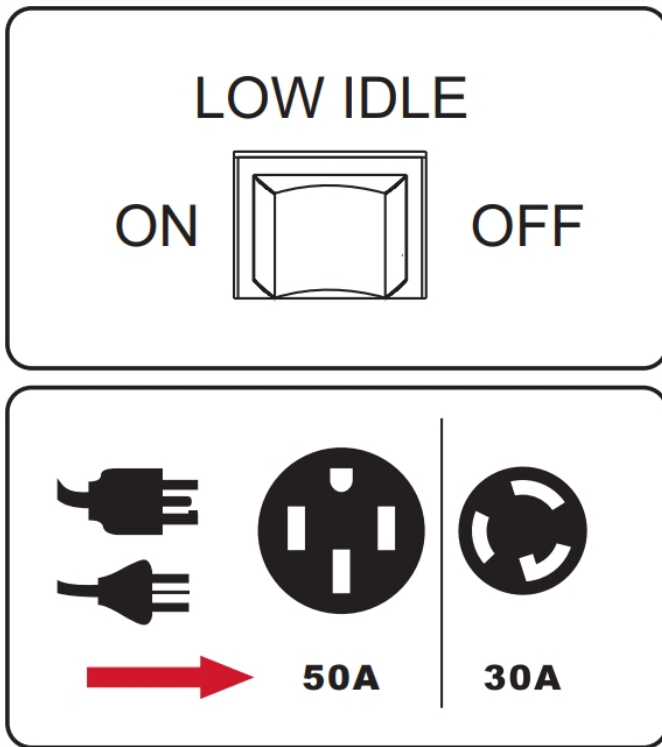

7. Attach load to Parallel Kit.

Note: If one generator shuts off during use, disconnect load until it can be restarted to avoid generator damage.

Do not overload the generators. Substantial overloading will shut off the AC output and may shorten the service life of the generators.

Note: The voltage of the parallel device is 120V, and the output current is 80A (a 50A socket and a 30A socket). Three generators can be connected in parallel at the same time, and the total power in parallel should not exceed 9600 peak watts.

TROUBLESHOOTING



WARNING!

TO PREVENT SERIOUS INJURY FROM EQUIPMENT FAILURE:

Do not use damaged equipment. If abnormal noise, vibration, or excess smoking occurs, have the problem corrected before further use. Procedures not specifically explained in this manual must be performed only by a qualified technician.


1. BEFORE EACH USE, inspect the general condition of the charger. Check for:
 - loose hardware,
 - cracked or broken parts,
 - damaged electrical wiring or cable insulation, and
 - any other condition that may affect its safe operation.
2. After Use, wipe external surfaces of the tool with clean cloth.

Problem	Possible Causes	Probable Solutions
Parallel Kit doesn't have power.	<ol style="list-style-type: none"> 1. Device not plugged in properly 2. Circuit Breaker tripped. 3. Parallel Kit needs service. 	<ol style="list-style-type: none"> 1. Turn off generator and check outlet connections for correct positioning. Restart generator. 2. Turn off and unplug Parallel Kit, reset Circuit Breaker, plug in Parallel Kit and turn on. 3. Have Parallel Kit repaired.
Overload indicator flashes.	Rated load capacity exceeded.	Lower the number of items plugged into the generator to stay within the rated capacity.

⚠ Follow all safety precautions whenever diagnosing or servicing the Parallel Kit.



Documents / Resources

	<p>GENMAX 50-Amp RV Ready Inverter Generator Parallel Kit [pdf] User Manual 50-Amp RV Ready, Inverter Generator Parallel Kit, 50-Amp RV Ready Inverter Generator Parallel Kit, RV Ready Inverter Generator Parallel Kit, Generator Parallel Kit, Parallel Kit</p>
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------