



Genmitsu LC-40 10W Laser Module User Manual

[Home](#) » [Genmitsu](#) » Genmitsu LC-40 10W Laser Module User Manual 

Genmitsu LC-40 10W Laser Module




Contents

- 1 Remove the Cable Clips
- 2 Removing the Original laser module
- 3 Install 10W laser module
- 4 Install the Cable Clips
- 5 Documents / Resources
- 5.1 References


Remove the Cable Clips

STEP 1

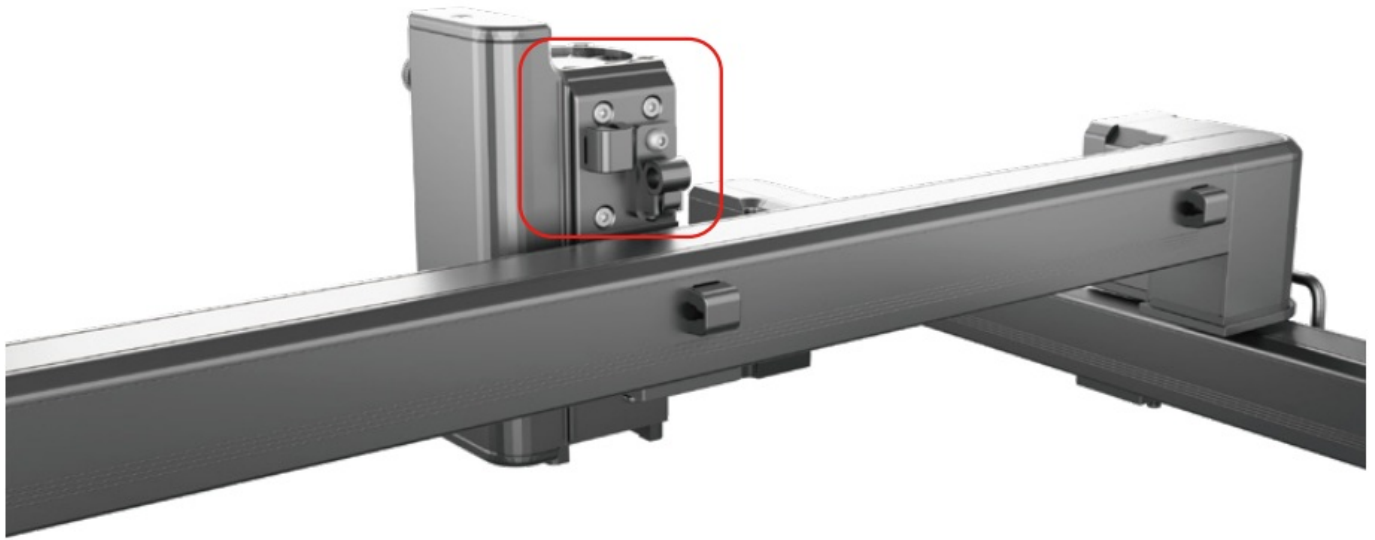

1. Unscrew the screw of cable clip A on the laser module.
2. Remove cable clip B, then remove the cables of the laser module.

Cable Clip B

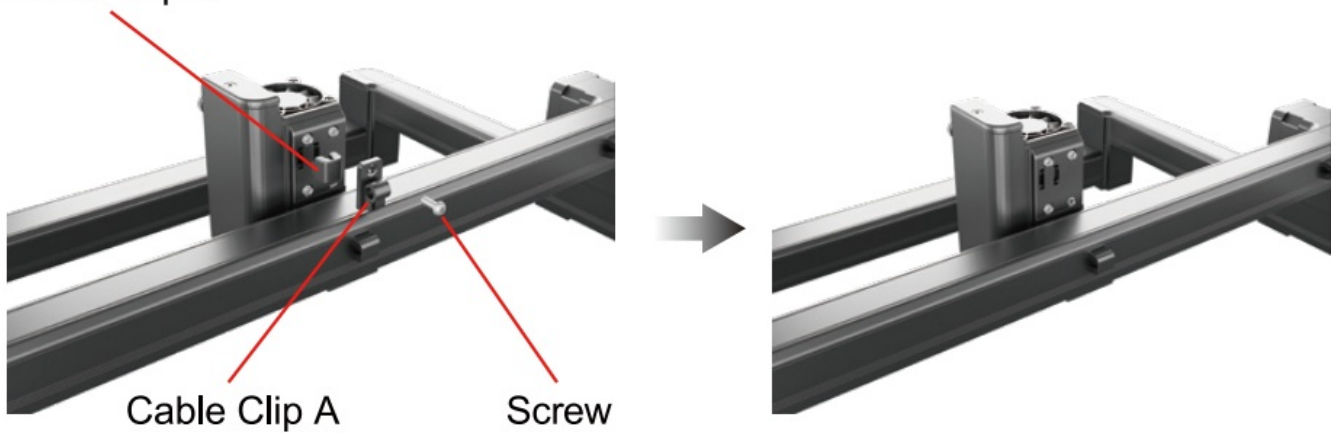


Removing the Original laser module

STEP 2

Unscrew the M3•6 screws on the mounting plate and remove the original laser module.

Original Laser Module

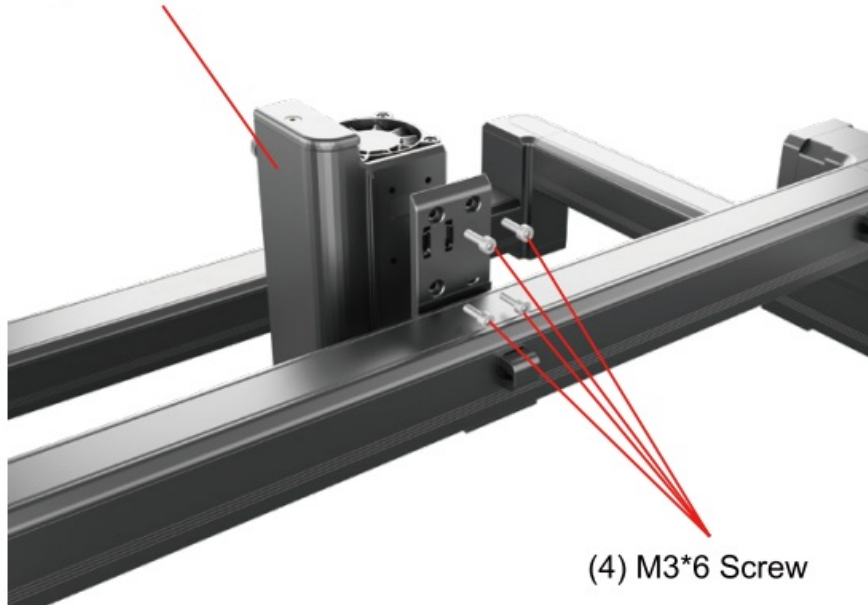


Install 10W laser module

STEP 3

Install the 10W laser module on the mounting plate by tightening the M3•6 screws from the original laser module.

10W Laser Module

(4) M3*6 Screw

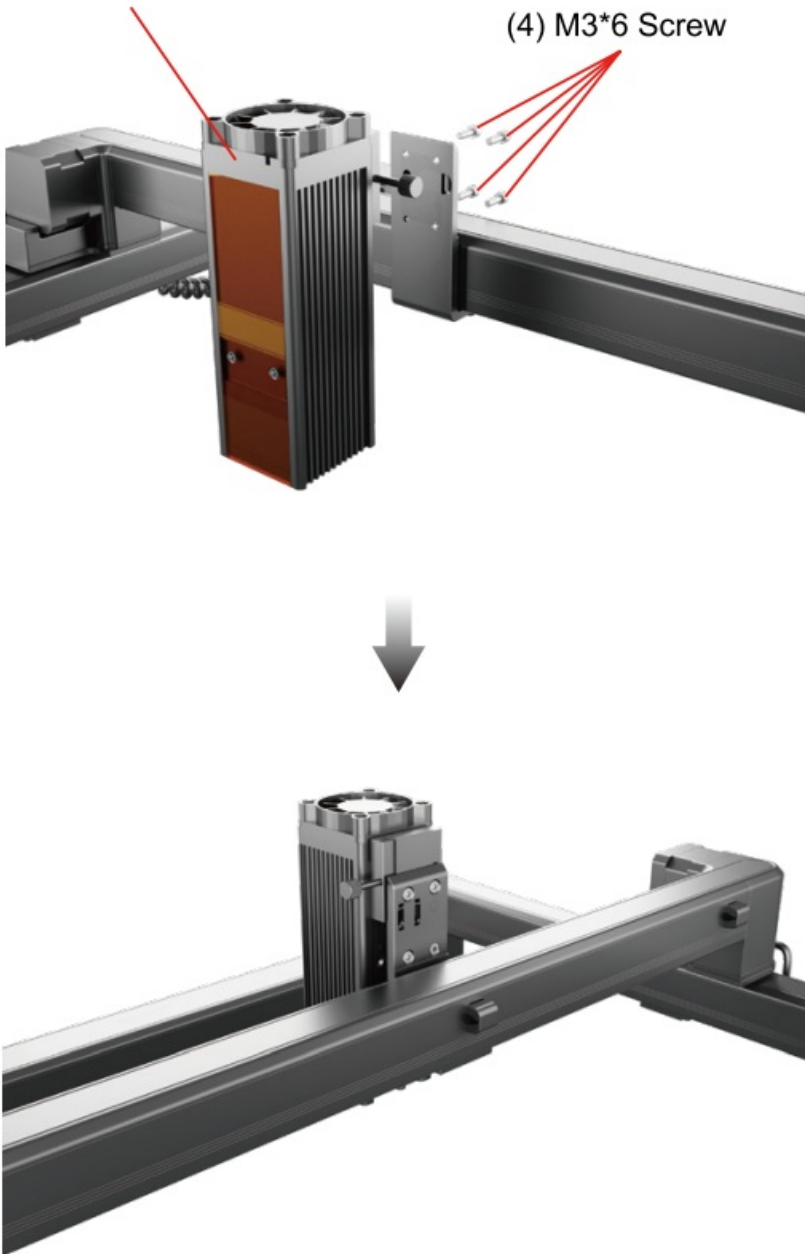


Install the Cable Clips

STEP 4

1. Install cable clip B and cable clip A back with the screw.
2. Install the cables back in the same condition as ii was removed.

Cable Clip B

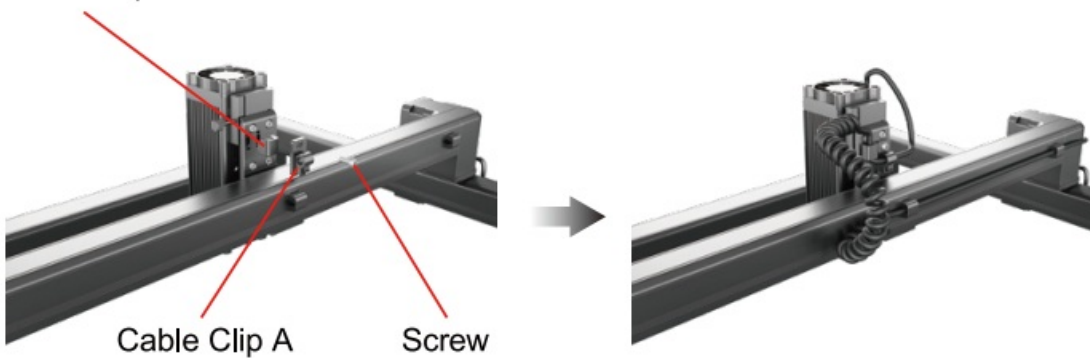

Finishing I



Genmitsu

Documents / Resources

	Genmitsu LC-40 10W Laser Module [pdf] User Manual LC-40 10W Laser Module, LC-40 10W, Laser Module
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.