



GeoSIG GMSplus Set RTC Time from Recorder Serial Console User Manual

[Home](#) » [GeoSIG](#) » GeoSIG GMSplus Set RTC Time from Recorder Serial Console User Manual 

Contents

- 1 [GeoSIG GMSplus Set RTC Time from Recorder Serial Console](#)
- 2 [FAQ GMSplus Set RTC Time from Recorder Serial Console](#)
- 3 1. Introduction
- 4 2. Required Tools
- 5 3. Set RTC Time
- 6 4. Check RTC Time
- 7 Specifications
- 8 FAQ – Frequently Asked Questions
 - 8.1 Q: How do I set the RTC time manually on GMSplus?
 - 8.2 Q: What should I do if the new time is not reflected?
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

GeoSIG GMSplus Set RTC Time from Recorder Serial Console

USER MANUAL



FAQ GMSplus Set RTC Time from Recorder Serial Console

1. Introduction

This procedure describes how to set the time of the GMSplus realtime clock (RTC) manually.

2. Required Tools


GMSplus

Computer, connected to Recorder Serial Console with ucon


https://www.geosig.com/files/FAQ_GMSplus_How_to_Connect_Serial_Console_with_uCon.pdf

3. Set RTC Time


In the main menu, select [H] to set RTC time

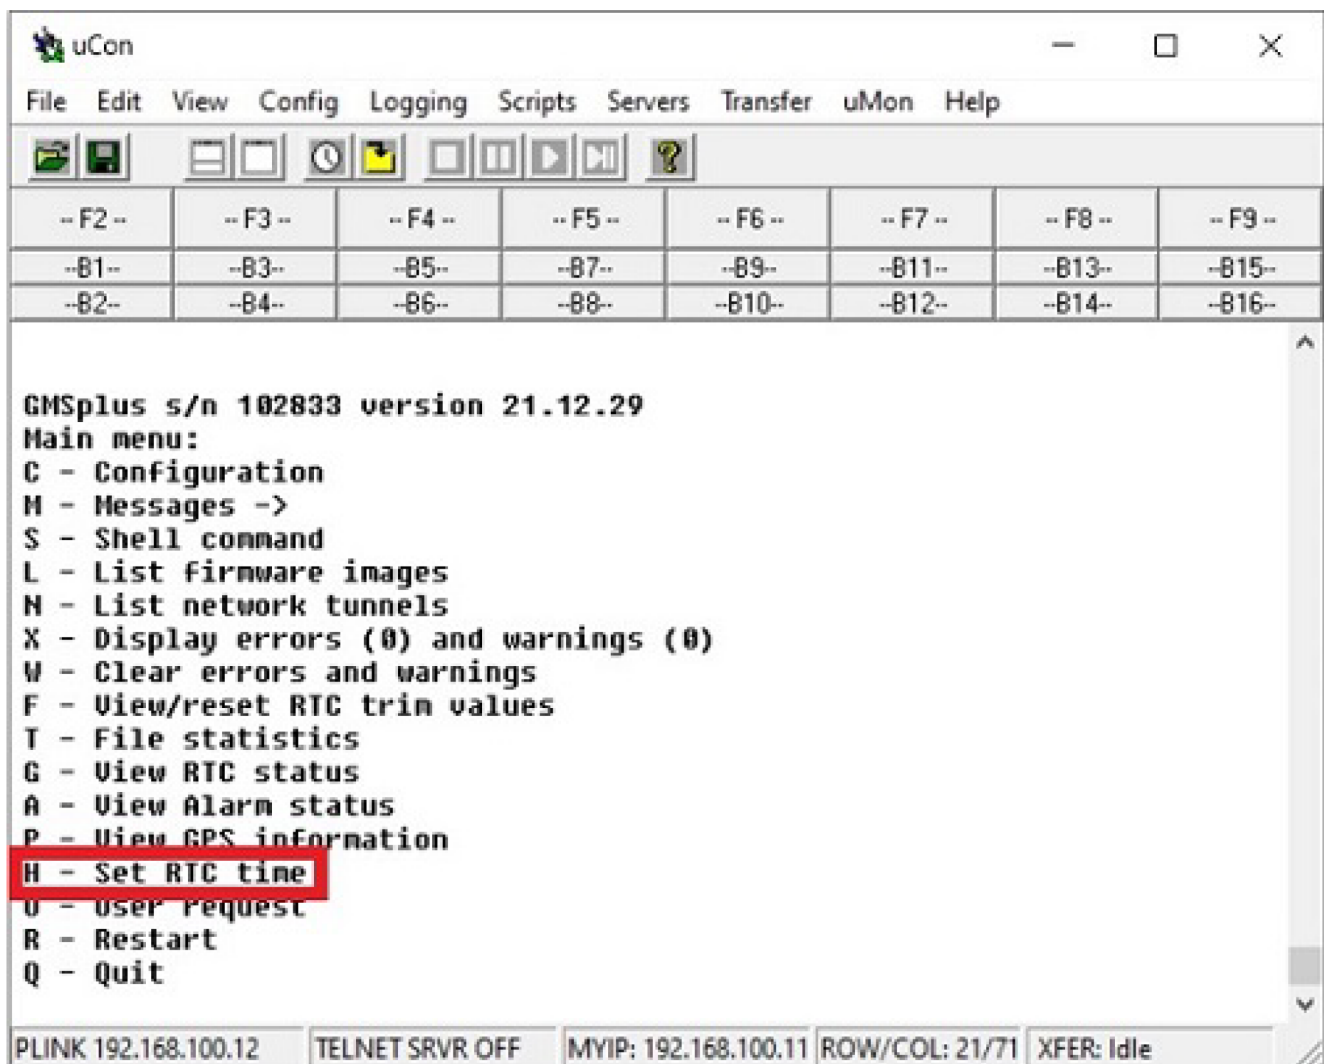

- Enter the time in format YYMMDDHHMMSS and confirm with [Enter] The sample below is for a time of 18:45:00 on January 19th of 2024

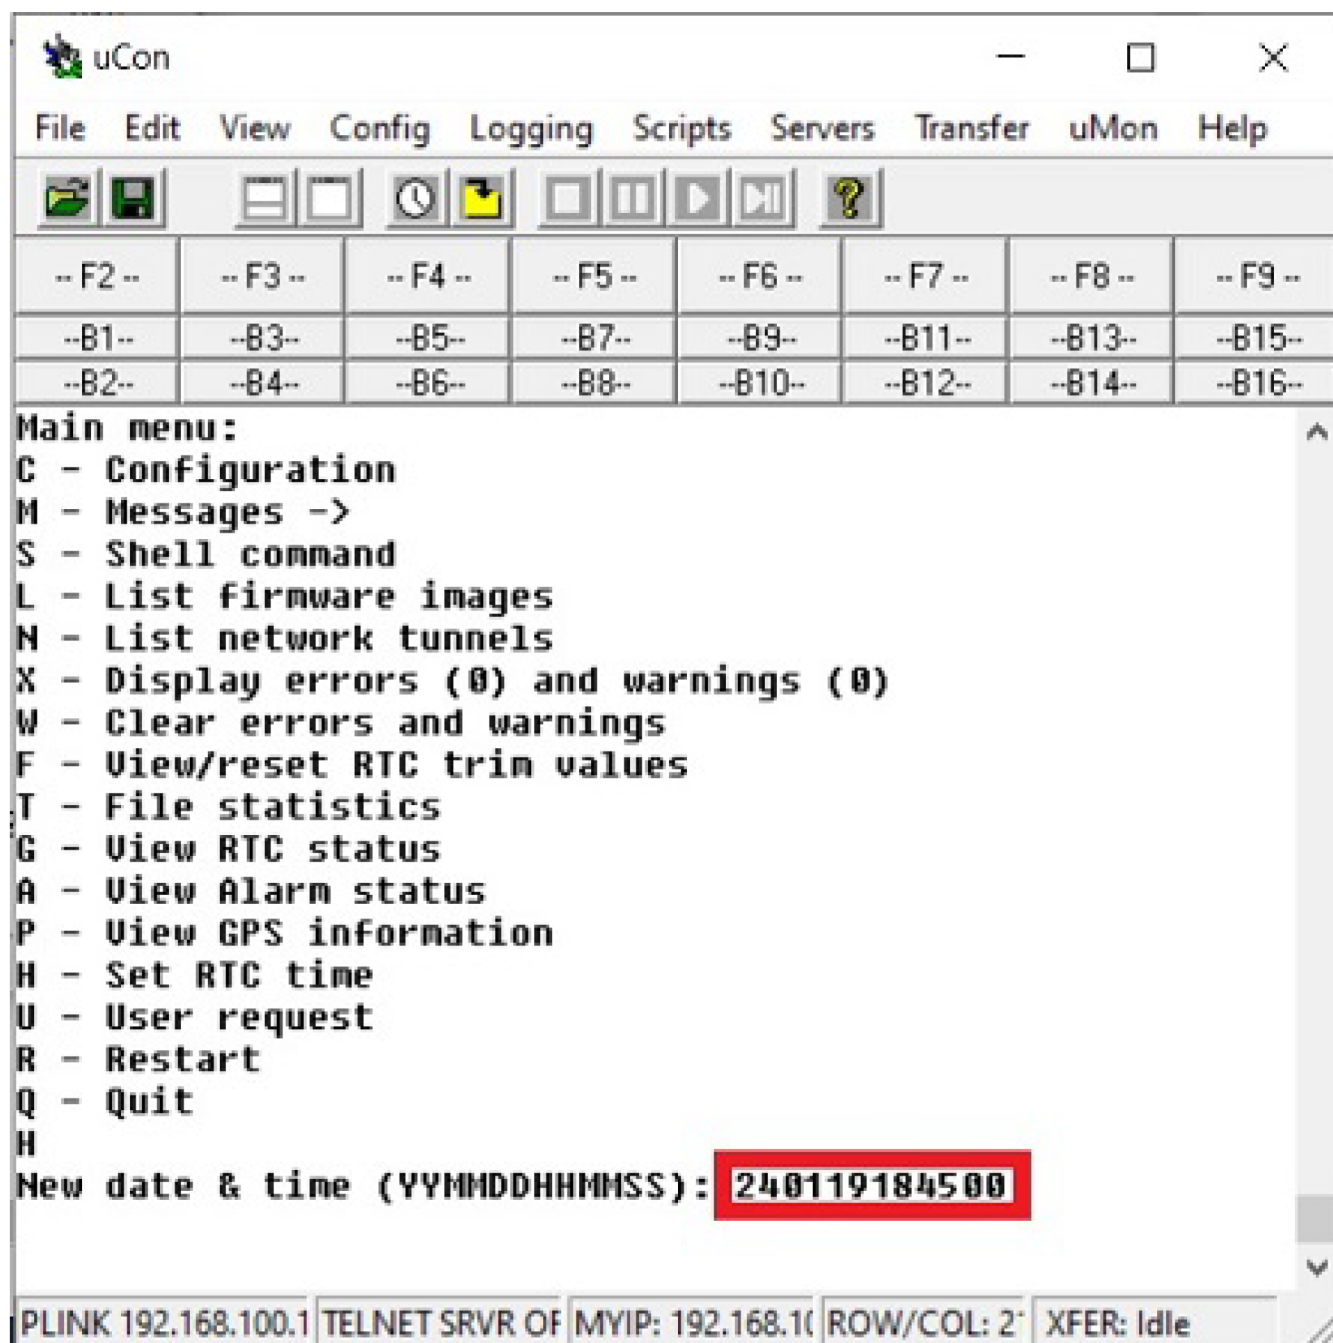

- When entering the time, it may happen that log messages are written into your input.
If this happens, just continue your input and confirm with **[Enter]**
The input may be split over several lines as below

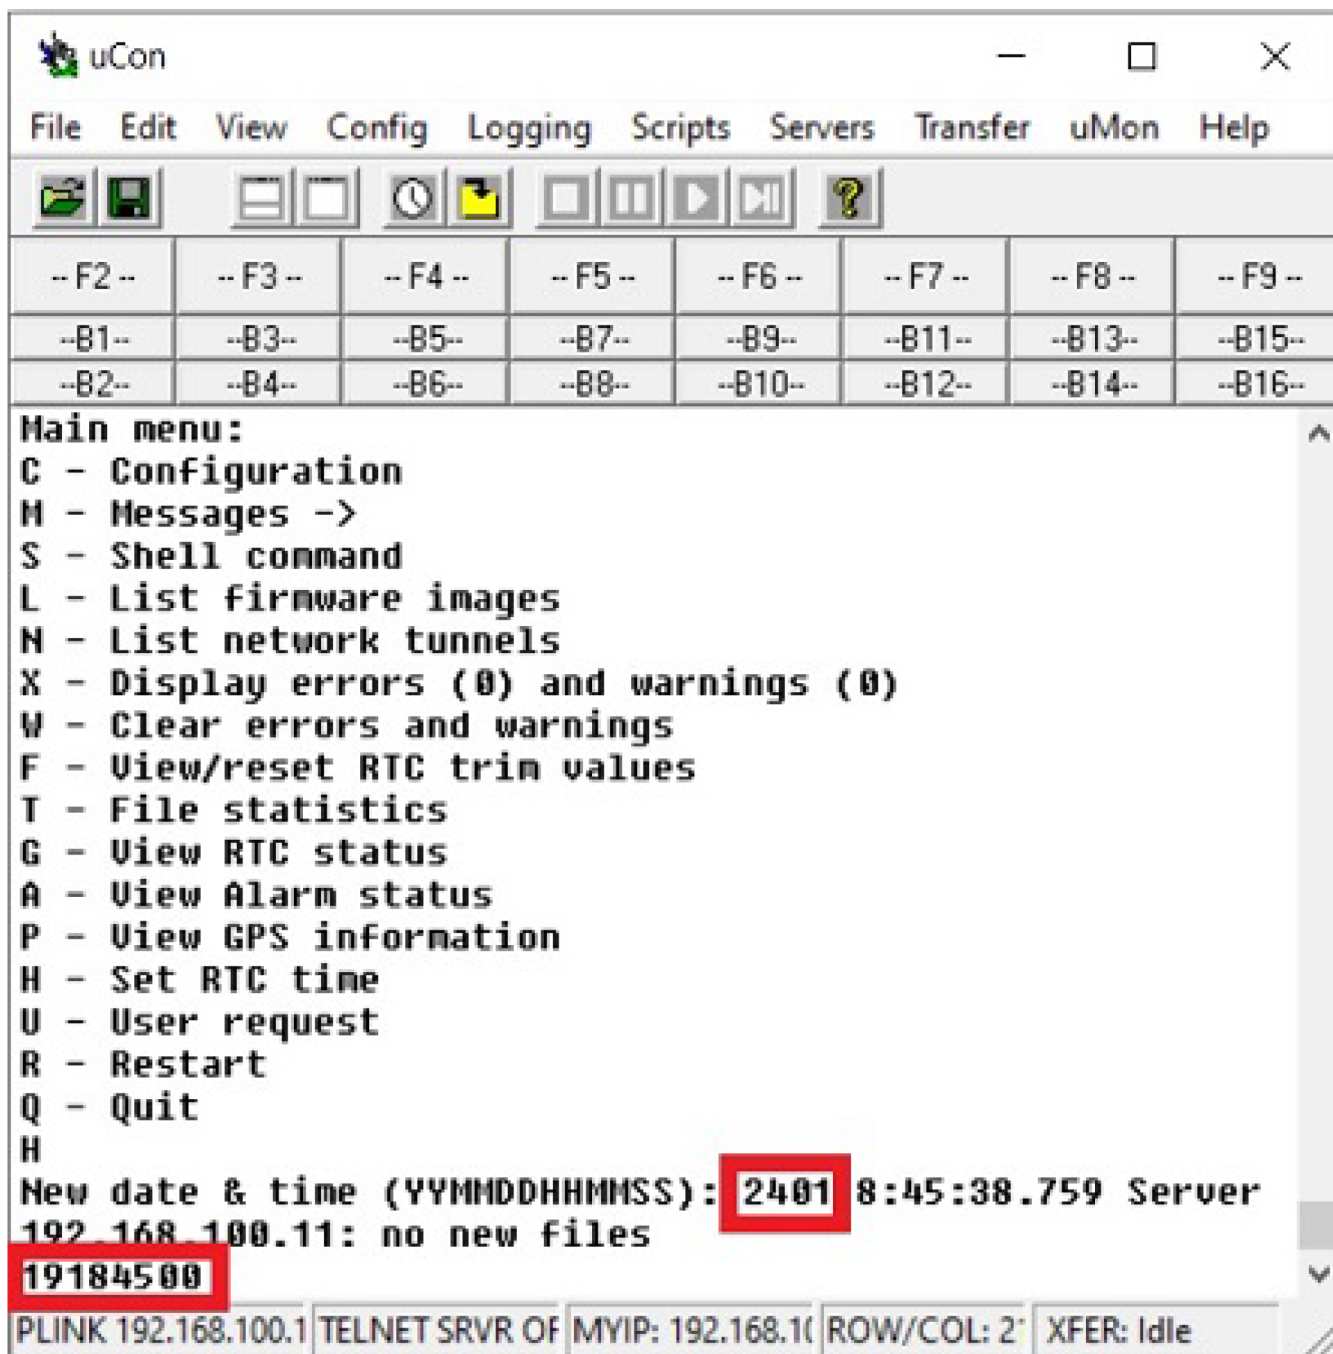


- GMSplus will adapt its time to the new setting, it will close the old ringbuffer recording (RBF) and open a new one with the new time setting.

This process may take a few seconds.

4. Check RTC Time

In the main menu, select **[G]** to see the current RTC time

1. In the main menu, select **[G]** to view current RTC time.
2. Current RTC Local Time is displayed in format YYYY.MM.DD HH:MM:SS.ms.
3. If new time isn't reflected, repeat from step 3. and check backup battery voltage. Refer to FAQ's Maintenance Guideline for more details.

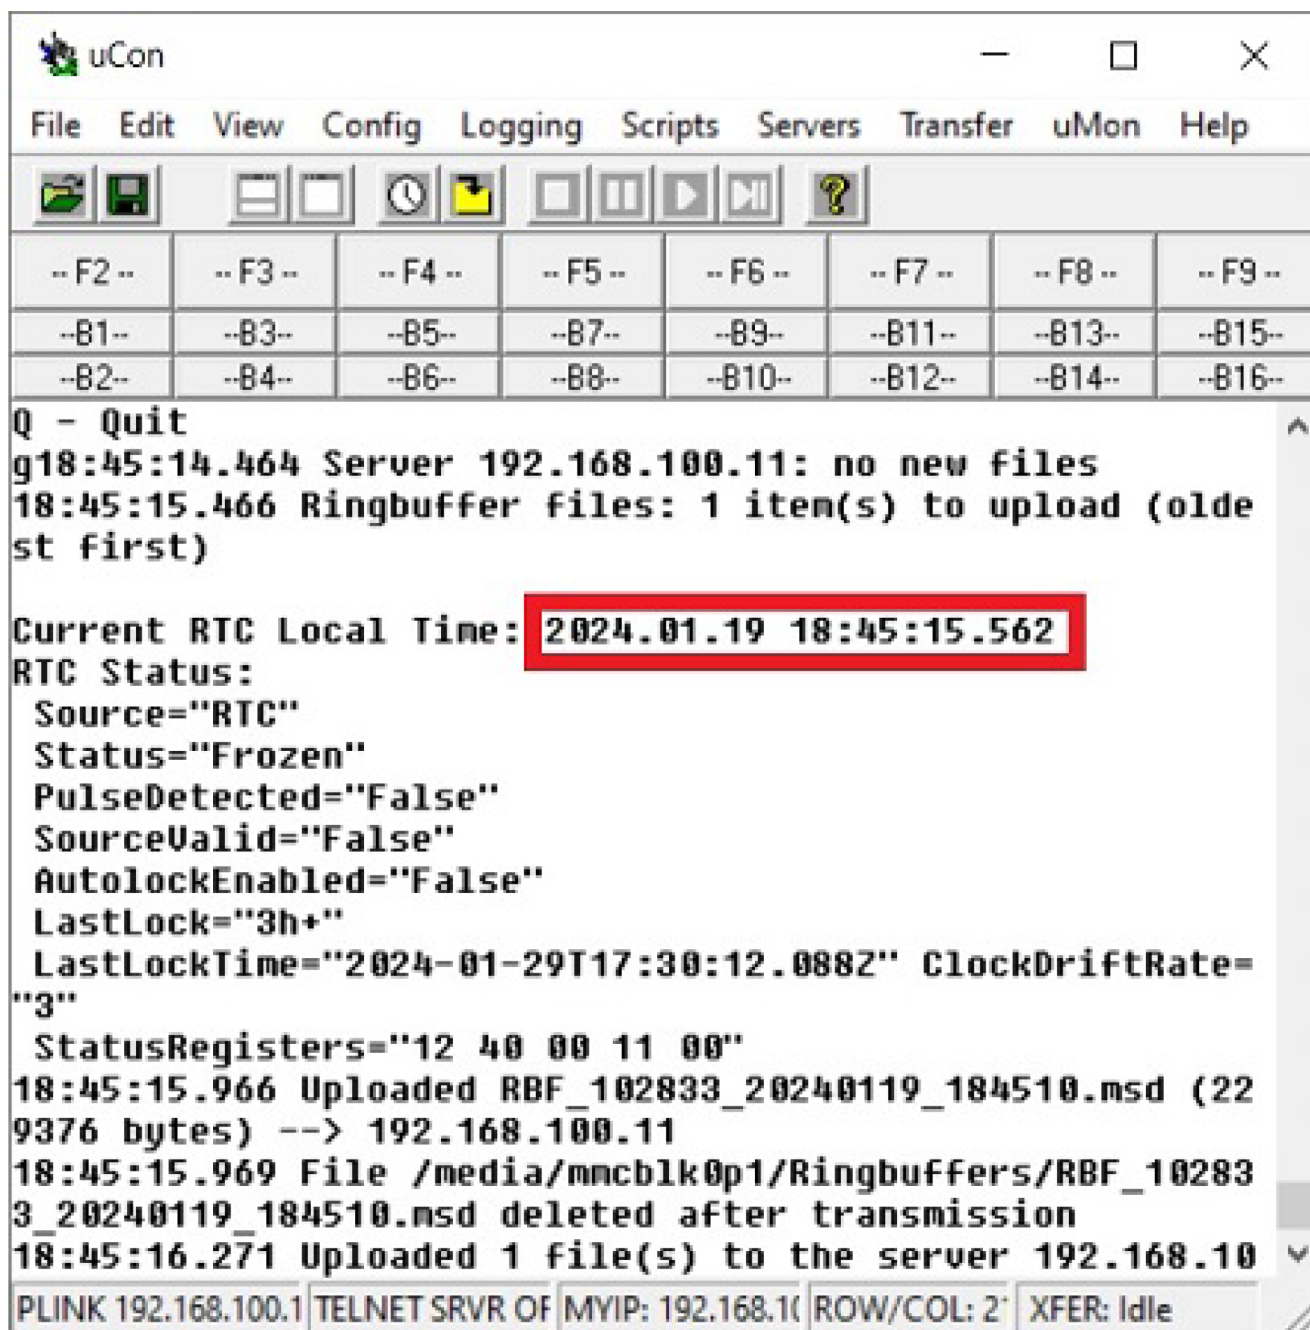

Specifications

- Product Name: GMSplus
- Function: Realtime Clock (RTC)
- Manufacturer: Geosig

FAQ – Frequently Asked Questions

GMSplus Set RTC Time from Recorder Serial Console


Q: How do I set the RTC time manually on GMSplus?

A: Follow steps outlined in the user manual under “Set RTC Time” section.

Q: What should I do if the new time is not reflected?

A: Check backup battery voltage and refer to the FAQ's Maintenance Guideline for troubleshooting.

Documents / Resources

	GeoSIG GMSplus Set RTC Time from Recorder Serial Console [pdf] User Manual GMSplus Set RTC Time from Recorder Serial Console, GMSplus, Set RTC Time from Recorder Serial Console, Time from Recorder Serial Console, Recorder Serial Console, Serial Console
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.