



GeoSLAM How To Re Activate Your New Licence Instructions

[Home](#) » [GeoSLAM](#) » GeoSLAM How To Re Activate Your New Licence Instructions

Contents [[hide](#)]

- 1 [GeoSLAM How To Re Activate Your New Licence](#)
- 2 [Product Information: Geo SLAM Software](#)
- 3 [System Requirements:](#)
- 4 [Product Usage Instructions:](#)
- 5 [How to re-activate your new licence](#)
- 6 [Documents / Resources](#)
 - 6.1 [References](#)
- 7 [Related Posts](#)



GeoSLAM How To Re Activate Your New Licence



Product Information: Geo SLAM Software

Geo SLAM software is a suite of applications that enables users to process and analyze data collected from ZEB series handheld scanners like ZEB-HORIZON, ZEB-REVO, and ZEB-REVO RT. With Geo SLAM Connect and Geo SLAM Hub, users can view, edit, and share 3D point cloud data with simple workflows. The software is designed to improve the speed and efficiency of data processing and mapping, helping users to achieve accurate results quickly and easily.

System Requirements:

- Operating System: Windows 7 or above (64-bit)
- CPU: Intel i7 quad-core or better
- Graphics Card: NVIDIA GTX 1060 or better
- RAM: 8 GB or more

Product Usage Instructions:

To re-activate your new license for GeoSLAM software, please follow the steps outlined below:

1. Deactivate ALL your existing GeoSLAM Connect and Hub (and GeoSLAM Draw) licenses from your machine.
2. Uninstall any earlier version of GeoSLAM Connect, GeoSLAM Hub, and the GeoSLAM License Manager Tool (as well as GeoSLAM Draw).
3. Download and install GeoSLAM Connect 2.3 and GeoSLAM Hub 6.2.1 (and GeoSLAM Draw 4.0 for customers with a valid GeoSLAM Draw license) using the links provided in the product manual.
4. Open the GeoSLAM License Manager Tool version 1.4.0.
5. Go to the Activate tab and activate your new license codes.
6. Open Geo SLAM Connect 2.3 and log in using your My Geo SLAM login credentials. If you don't have a My Geo SLAM account, you can request a login from <https://geoslam.com/mygeoslam/>.
7. For new customers, we suggest visiting the GeoSLAM Connect getting started page to learn more about using the software.
8. Once activated, you can use the new features included in the software versions.

Note that if you have a valid ZEB Locate or ZEB Discovery entitlement, you can download the relevant application from the links provided in the product manual. However, you must activate your new Hub license to enable these applications.

If you encounter any issues or have questions during the software activation process, please contact support@geoslam.com for assistance.

How to re-activate your new licence

You must re-activate your new licence/s in the GeoSLAM licence manager tool before you can use the new software releases.

Please follow the steps below to ensure a successful transition to Geo SLAM Connect 2.3 and Geo SLAM Hub 6.2.1:

1. Deactivate ALL your existing Geo SLAM Connect and Hub (and Geo SLAM Draw) licences from your machine.
2. Uninstall any previous versions of Geo SLAM Connect, Geo SLAM Hub and the Geo SLAM Licence Manager Tool (and Geo SLAM Draw)
3. Click on the download links below to install Geo SLAM Connect 2.3 and Geo SLAM Hub 6.2.1 (and Geo SLAM Draw 4.0 for customers with a valid Geo SLAM Draw license). The latest version of the Licence

Manager Tool is included in both the Connect and Hub download links

4. Open the Geo SLAM Licence Manager Tool version 1.4.0
5. Go to the Activate tab and activate your new licence codes
6. Open Geo SLAM Connect 2.3 and login using your My Geo SLAM login credentials. You can login to My Geo SLAM or request a login here: <https://geoslam.com/my-geoslam/>
7. For customers who are new to Geo SLAM Connect we recommend you visit the Geo SLAM Connect getting started page

You will now be able to process data and use the new features within the software. Please use the links below to download the software versions:

GeoSLAM Connect 2.3 – <https://download.geoslam.com/software/connect/geoslam-connect-release-v2.3.0.exe>

Geo SLAM Hub 6.2.1 – <https://download.geoslam.com/software/hub/GeoSLAM-Hub-6.2.1.exe>

If you have a valid Geo SLAM Draw licence:

Geo SLAM Draw 4.0 – <https://download.geoslam.com/software/draw/GeoSLAMDraw-v4.0-R6-64bit.exe>

If you have a valid ZEB Locate entitlement:

ZEB Locate Processor v1.2.0

- download.geoslam.com/software/Zeb_Locate/Zeb_Locate_Processor_v1_2_0.zip

Note: you must activate your new Hub license to enable the ZEB Locate Processor application.

If you have a valid ZEB Discovery entitlement:

ZEB Discovery Image Processor

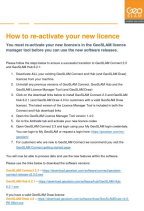
v1.4.0 –

download.geoslam.com/software/Zeb_Discovery/ZEB_Discovery_1_4_0/ZebDiscovery.Installers.ImageProcessor_1_4_0.zip

Note: you must activate your new Hub license to enable the ZEB Discovery Image Processor application.

If you have any questions or issues during this process, please contact support@geoslam.com.

Documents / Resources

	<p>GeoSLAM How To Re Activate Your New Licence [pdf] Instructions How To Re Activate Your New Licence</p>
---	---

References

- download.geoslam.com/software/hub/GeoSLAM-Hub-6.2.1.exe
- [Getting Started: GeoSLAM Connect](#)
- [My GeoSLAM](#)
- [My GeoSLAM](#)