

GeoVision GV-Pad Mini Display 116 Decoder Box



GeoVision GV-Pad Mini Display 116 Decoder Box User Guide

[Home](#) » [GeoVision](#) » GeoVision GV-Pad Mini Display 116 Decoder Box User Guide 

Contents

- [1 GeoVision GV-Pad Mini Display 116 Decoder Box](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Introduction](#)
- [5 Packing List](#)
- [6 Overview](#)
- [7 Connection](#)
- [8 Setting up the Network](#)
- [9 Adding IP Devices to Live View Grid](#)
- [10 Adding Devices Using GV-IP Device Utility](#)
- [11 Accessing Live View](#)
- [12 Upgrading the Firmware](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)



GeoVision GV-Pad Mini Display 116 Decoder Box



Product Information

Specifications

- Product Name: GV-IP Decoder Box Series and Display
- Model Numbers: GV-Pad Mini, GV-IP Display 101 / 116
- Manufacturer: GeoVision, Inc.
- Address: 9F, No. 246, Sec. 1, Neihu Rd., Neihu District, Taipei, Taiwan
- Contact: Tel: +886-2-8797-8377,
- Fax: +886-2-8797-8335
- Website: <http://www.geovision.com.tw>

Product Usage Instructions

1. Introduction

This section provides an overview of the compatible devices, packing list, and optional accessories.

2. Compatible Devices

List of devices that can be connected to the GV-IP Decoder Box Series and Display.

1. Packing List

Details of items included in the package.

3. Optional Accessories

Information on additional accessories that can enhance the product's functionality.

Overview

Detailed description of the features and functionalities of the GV-IP Decoder Box Series, GV-Pad Mini, and GV-IP Display 101.

Connection

Step-by-step guide on connecting the GV-IP Decoder Box Series and Display to compatible devices.

1. GV-IP Decoder Box Series

Instructions on connecting the GV-IP Decoder Box Series to other devices.

2. GV-Pad Mini / GV-IP Display 101

Guidance on connecting the GV-Pad Mini or GV-IP Display 101 to the decoder box.

3. The Main Screen

Explanation of the main screen interface and its functions.

4. Setting up the Network

Steps to configure the network settings for the GV-IP Decoder Box Series and Display.

Adding IP Devices to Live View Grid

Instructions on adding IP devices to the live view grid for monitoring.

1. Adding IP Devices through Automatic Search

Guide on automatically searching and adding IP devices to the live view grid.

2. Adding IP Devices Manually Steps to manually add IP devices to the live view grid for monitoring purposes

Adding Devices Using GV-IP Device Utility

Information on utilizing the GV-IP Device Utility to add devices for monitoring.

Accessing Live View

Instructions on accessing the live view feature to monitor connected devices in real-time.

Frequently Asked Questions (FAQ)

• **Q: Is technical support available for this product?**

A: Yes, technical support is available. You can refer to the provided QR codes for technical support policy details or visit the manufacturer's website for assistance.

• **Q: Can I connect devices wirelessly to the GV-IP Decoder Box Series?**

A: The GV-IP Decoder Box Series supports wired connections. For wireless connectivity options, please check with the manufacturer for compatible accessories or alternatives.

Quick Start Guide

GV-IP Decoder Box Series and Display

- GV-IP Decoder Box Series
- GV-Pad Mini
- GV-IP Display 101 / 116
- Before attempting to connect or operate this product, please read these instructions carefully and save this manual for future use.

© 2023 GeoVision, Inc. All rights reserved.

- Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of GeoVision.
- Every effort has been made to ensure that the information in this manual is accurate. GeoVision, Inc. makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages arising from the use of the information or products contained

herein. Features and specifications are subject to change without notice.

- GeoVision, Inc.
- 9F, No. 246, Sec. 1, Neihu Rd.,
- Neihu District, Taipei, Taiwan
- Tel: +886-2-8797-8377
- Fax: +886-2-8797-8335
- <http://www.geovision.com.tw>
- Trademarks used in this manual: GeoVision, the GeoVision logo and GV series products are trademarks of GeoVision, Inc. Windows is the registered trademark of Microsoft Corporation.
- October 2023
- Scan the following QR codes for product warranty and technical support policy:



[Warranty]



[Technical Support Policy]

Introduction

- Welcome to the GV-IP Decoder Box Series and Display Quick Start Guide. In the following sections, you will learn about the basic installations and configurations of GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101. For details, see GV-IP Decoder Box Series and Display User's Manual.
- **Note:** The user interfaces are different by models. Find the relevant settings corresponding to your device. Here we use GV-IP Decoder Box Ultra as an example.

Compatible Devices

GV-IP Decoder Box Optimal / Ultra / GV-IP Display 101 / 116

1. GV-IP Camera and GV-Video Server using H.264 / H.265 codec
2. Third-party IP devices that support H.264 / H.265 and adhere to RTSP or ONVIF
3. GV-Mobile Server

To decode and display non-H.264 / H.265 IP channels, analog channels or GV-FER12203 / 12700, connect the devices to GV-DVR / NVR / VMS and access them through GV-Mobile Server.

GV-IP Decoder Box Plus / GV-Pad Mini

1. GV-IP Camera and GV-Video Server using H.264 codec
2. Third-party IP devices that support H.264 and adhere to RTSP or ONVIF
3. GV-Mobile Server

To decode and display non-H.264 IP channels or analog channels, connect the devices to GV-DVR / NVR / VMS and access them through GV-Mobile Server.

GV-IP Decoder Box Lite

1. GV-IP Camera and GV-Video Server using H.264 codec
2. Third-party IP devices that support H.264 and adhere ONVIF

To decode and display analog channels, connect the analog cameras to GV-IP Decoder Box Lite through GV-Video Server.

Note: Upgrade your GV-IP Devices to the latest firmware version if you encounter any connection problems.

Packing List

CGV-IP Decoder Box Optimal

1. GV-IP Decoder Box Optimal
2. GV-IR Remote Control
3. Download Guide
4. Warranty Card

GV-IP Decoder Box Ultra

5. V-IP Decoder Box Ultra
6. GV-IR Remote Control
7. Download Guide
8. Warranty Card

GV-IP Decoder Box Plus

1. GV-IP Decoder Box Plus
2. AC/DC Adapter (12 V, 3 A, 36 W)
3. Power Cord
4. USB Mouse
5. Download Guide
6. Warranty Card

GV-IP Decoder Box Lite

1. GV-IP Decoder Box Lite
2. AC/DC Adapter (12 V, 3 A, 36 W)
3. Power Cord
4. USB Mouse
5. Download Guide
6. Warranty Card

GV-Pad Mini

1. GV-Pad Mini
2. AC/DC Adapter (12 V, 3 A, 36 W)
3. Power Cord
4. USB Mouse

5. Download Guide

Warranty Card

GV-IP Display 116

1. GV-IP Display 116
2. AC/DC Adapter (12 V, 3 A, 36 W)
3. Power Cord
4. Download Guide
5. Warranty Card

GV-IP Display 101

1. GV-IP Display 101
2. AC/DC Adapter (12 V, 3 A, 36 W)
3. Power Cord
4. Download Guide
5. Warranty Card

Optional Accessories

Optional devices can expand your device's capabilities and versatility. Contact your dealer for more information.


Options	Description
GV-Joystick V2	<ul style="list-style-type: none">• GV-Joystick V2 facilitates focusing, zooming, panning, tilting of GeoVision and third-party PT, PTZ and Speed Dome cameras on• GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116.
GV-PoE Switch	GV-PoE Switch is designed to provide power along with network connection for IP devices. GV-POE Switch is available in various models with different numbers and types of ports.
HDMI Cable	<ul style="list-style-type: none">• Only available for GV-IP Decoder Box Ultra. Use the HDMI cable to connect GV-IP Decoder Box Ultra with a HDMI monitor for high-quality display of images. Length: 150 cm (4.92 ft)• Version: 1.4a
Power Adapter	For GV-IP Decoder Box Ultra, contact our sales representatives for the countries and areas supported.
Wall Mount Kit	The kit is used to mount the GV-IP Decoder Box Series to the wall.

Overview

1. GV-IP Decoder Box Series


1. Front View

GV-IP Decoder Box Optimal

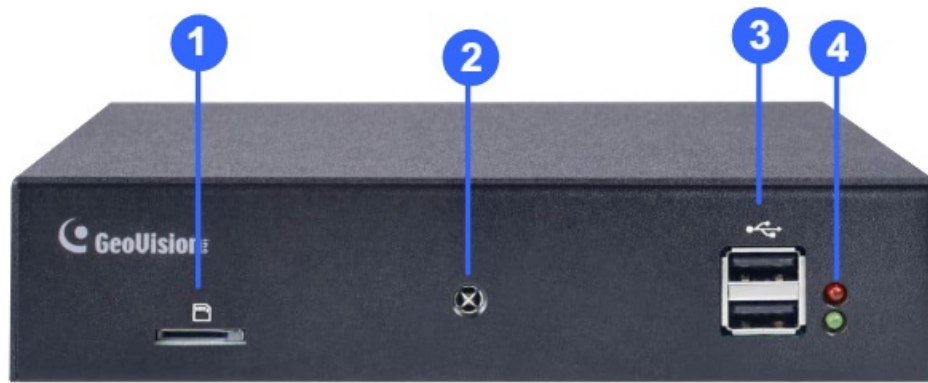


No.	Name	Function
1	Micro SD Card Slot	Connect to a micro SD card for local storage of snapshots and firmware upgrade.
2	IR sensor	Receive signal from GV-IR Remote Control for controlling the user interface at the maximum operation distance of 7 m (22.97 ft).
3	USB 2.0	Connect to a GV-Joystick V2, USB mouse, or USB storage device
4	LED Indicators	<ul style="list-style-type: none">The red LED indicates the power is supplied.The green LED indicates the system is ready for use.

GV-IP Decoder Box Ultra

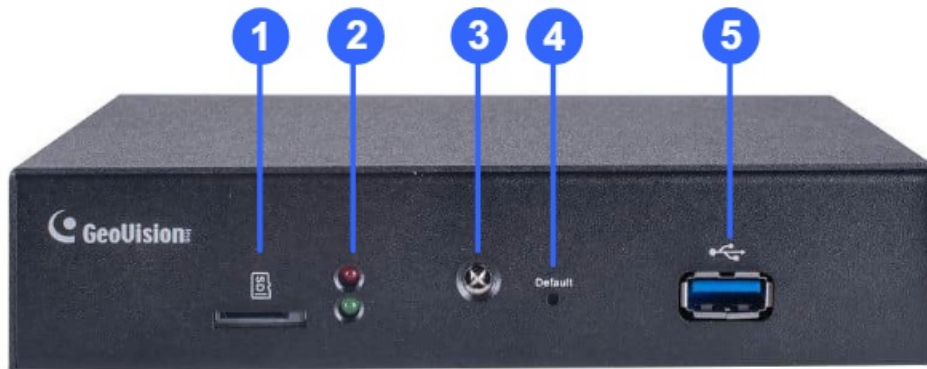

No.	Name	Function
1	Micro SD Card Slot	Connect to a micro SD card for local storage of snapshots and firmware upgrade.
2	IR sensor	Receive signal from GV-IR Remote Control for controlling the user interface at the maximum operation distance of 7 m (22.97 ft).
3	USB 2.0	Connect to a GV-Joystick V2, USB mouse, or USB storage device
4	LED Indicators	<ul style="list-style-type: none">The red LED indicates the power is supplied.The green LED indicates the system is ready for use.

GV-IP Decoder Box Plus

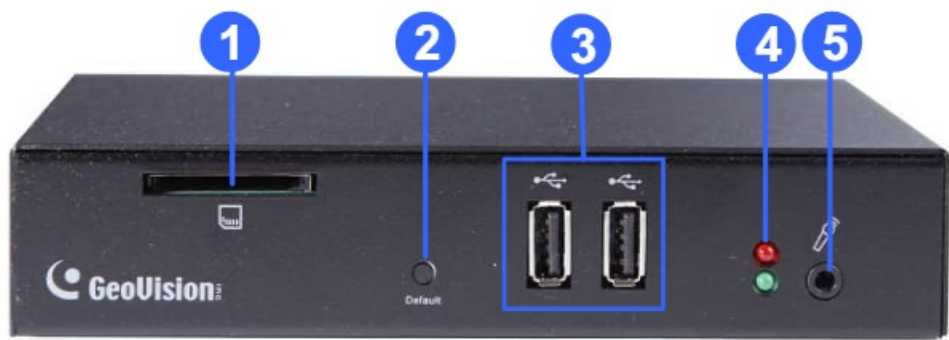


GV-IP Decoder Box Lite




No.	Name	Function
1	Micro SD Card Slot	Connect to a micro SD card for local storage of snapshots and firmware upgrade.
2	LED Indicators	<ul style="list-style-type: none">• The red LED indicates the power is supplied.• The green LED indicates the system is ready for use.
3	IR sensor	Receive signal from GV-IR Remote Control for controlling the user interface at the maximum operation distance of 7 m (22.97 ft).
4	Default	Reset the device to the default factory settings. Use a pin to press the default button for about 10 seconds. The system will then reset and reboot itself shortly. See 5.2 Restoring Default Settings in GV-IP Decoder Box Series and Display User's Manual.
5	USB 3.0	Connect to a GV-Joystick V2, USB mouse, or USB storage device.

Rear View
GV-IP Decoder Box Optimal

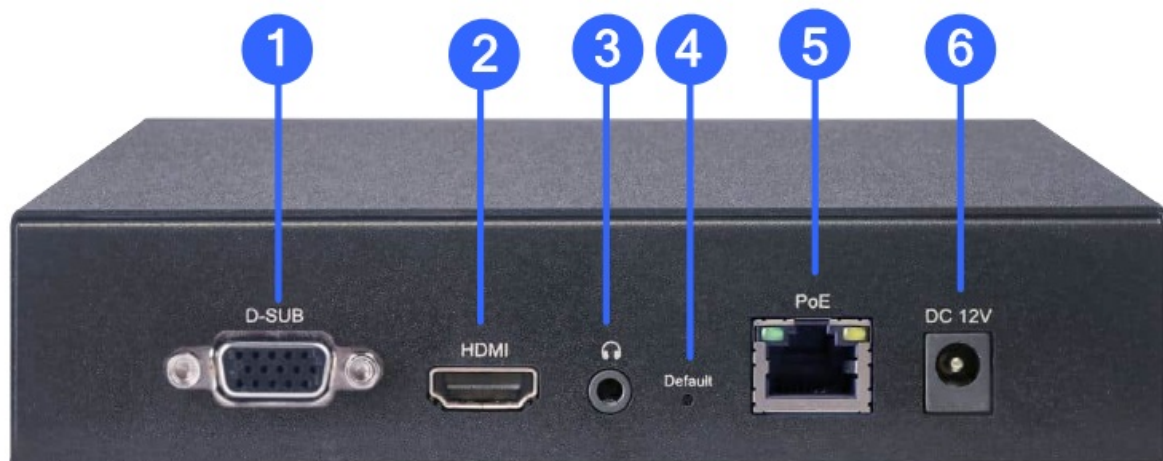


No.	Name	Function
1	SD Card Slot	Connect to an SD card for local storage of snapshot and firmware upgrade. Only supported by GV-IP Decoder Box Plus.
2	Default	Reset the device to the default factory settings. Use a pin to press the default button for about 10 seconds. The system will then reset and reboot itself shortly.
3	USB	Connect to a GV-Joystick V2, USB mouse, or USB storage device. Only supported by GV-IP Decoder Box Plus,
4	LED Indicators	<ul style="list-style-type: none"> The red LED indicates the power is supplied. The green LED indicates the system is ready for use.
5	Audio In	Not functional.

GV-IP Decoder Box Ultra

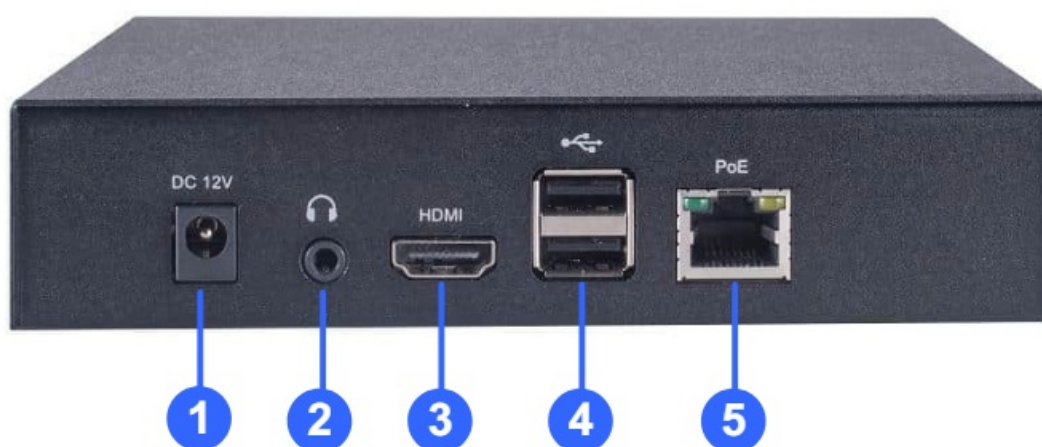

	Name	Function
1	SD Card Slot	Connect to an SD card for local storage of snapshot and firmware upgrade. Only supported by GV-IP Decoder Box Plus.
2	Default	Reset the device to the default factory settings. Use a pin to press the default button for about 10 seconds. The system will then reset and reboot itself shortly.
3	USB	Connect to a GV-Joystick V2, USB mouse, or USB storage device. Only supported by GV-IP Decoder Box Plus,
4	LED Indicators	<ul style="list-style-type: none"> The red LED indicates the power is supplied. The green LED indicates the system is ready for use.
5	Audio In	Not functional.


GV-IP Decoder Box Plus / Lite

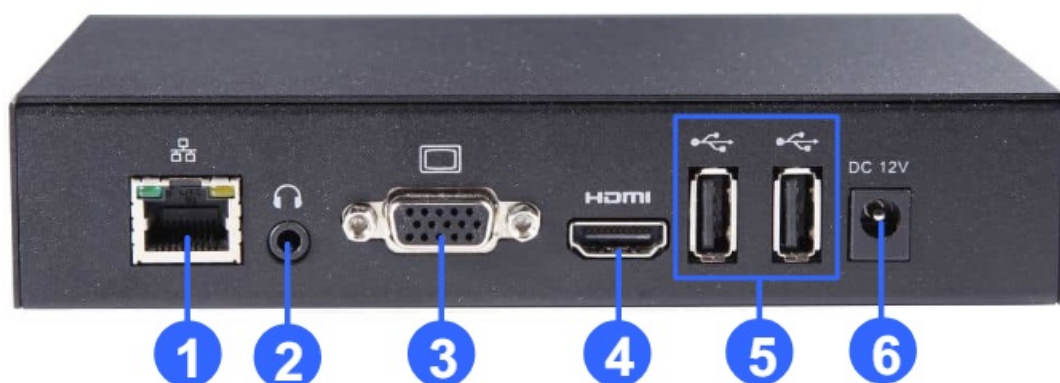

No.	Name	Function
1	VGA	Connect to a VGA monitor.
2	HDMI	Connect to an HDMI-compliant display device.
3	Audio Out	Connect to a speaker.
4	Default	Reset the device to the default factory settings. Use a pin to press the default button for about 10 seconds. The system will then reset and reboot itself shortly. See 5.2 Restoring Default Settings in GV-IP Decoder Box Series and Display User's Manual.
5	Network / PoE	Connect to the network or a PoE adaptor.
6	DC 12V	Connect to power by using the supplied power adapter.


GV-Pad Mini / GV-IP Display 101 / 116

1. Front and Rear Views

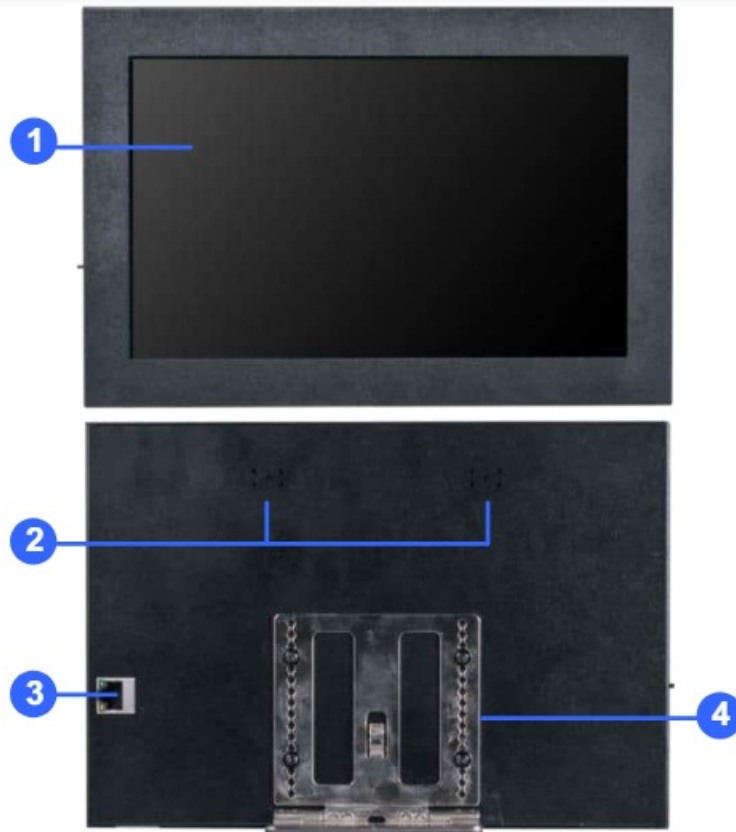

No.	Name	Function
1	LCD screen	Display the system settings of the device.
2	Speaker	Listen to the audio around the connected IP device.
3	Ethernet Port	Connect to network.
4	Stand	Position the GV-Pad Mini / GV-IP Display 101 / 116. to your preference.

Top, Left-Side and Right-Side Views

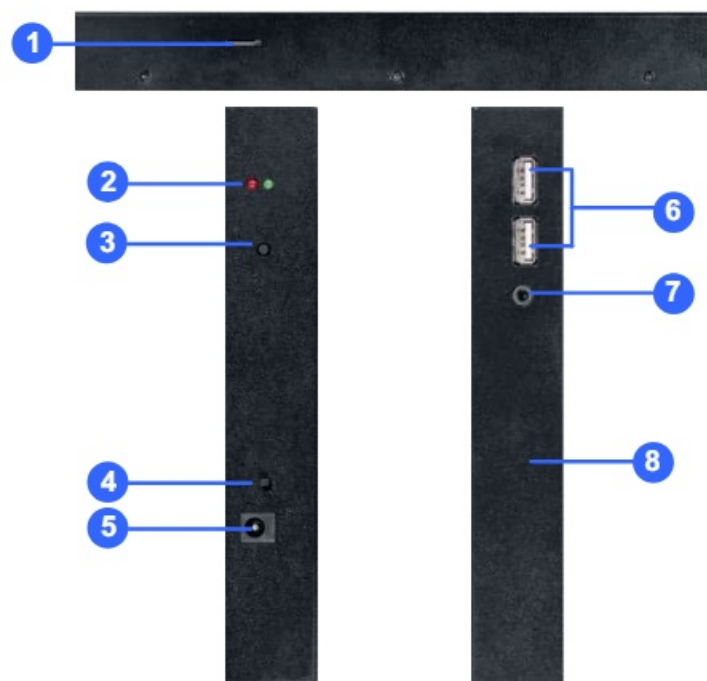

No.	Name	Function
1	Micro SD Card Slot	Connect to a micro SD card for local storage of content and firmware upgrade.
2	LED Indicators	The red LED indicates the power is supplied. The green LED indicates the system is ready.
3	Stand By	Press to enter the Standby/Sleep mode. In the standby mode, the screen turns off to minimize power consumption. Press the key again to enter the ON mode.
4	Power Off/On	Switch the power on or off.
5	DC 12V	Connect to power using the supplied power adapter.

No.	Name	Function
6	USB	Connect to a GV-Joystick V2, USB mouse, or USB storage device for local storage of content and firmware upgrade.
7	Line Out Port	Connect to a headphone or speaker.
8	Default	Reset the device to the default settings. Use a pin to press the default button for about 5 to 10 seconds. The system will then reset and reboot itself shortly. See 5.2 Restoring Default Settings in GV-IP Decoder Box Series and Display User's Manual.

Connection

GV-IP Decoder Box Series

Follow the steps below to connect the GV-IP Decoder Box Series. Here we use GV-IP Decoder Box Plus as an example.



1. Connect the device to the LAN port using an RJ-45 cable.
2. Connect a speaker to the audio line out port if needed.


3. Connect a display device to VGA or HDMI connector for video output.
4. Connect a mouse and / or GV-Joystick V2 to the USB ports.
5. Connect to power using the supplied power adapter.

Note:

1. You can only connect the GV-IP Decoder Box Ultra / Plus / Lite to one display device through either the HDMI or VGA connector at a time. Dual monitor display is only available for GV-IP Decoder Box Optimal.
2. The default video output resolution is set to 1080P for GV-IP Decoder Box Optimal and HD 720P for GV-IP Decoder Box Ultra / Plus / Lite. If you use a VGA monitor, be sure to change the output resolution to VGA 1920 x 1080. If you want to configure your GV-IP Decoder Box Optimal / Ultra to 4K resolution, make sure your monitor is 4K-capable and change the resolution to 3840 x 2160. To change the output resolution, see 4.1 System in GV-IP Decoder Box Series and Display User's Manual.

GV-Pad Mini / GV-IP Display 101 / 116

Follow the steps below to connect GV-Pad Mini / GV-IP Display 101 / 116.

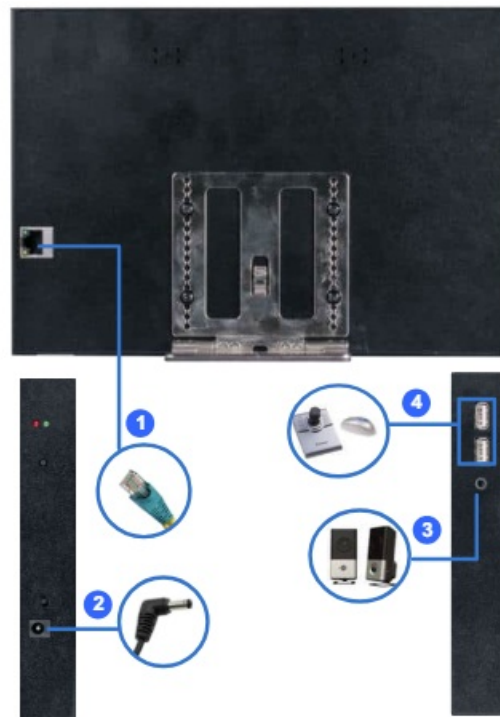

1. Connect the device to the LAN port using an Ethernet cable.
2. Connect to power using the supplied power adapter.
3. Connect a speaker / headphone to the line out port if needed.
4. Connect a mouse and / or GV-Joystick V2 to the USB ports.

The Main Screen


After you have connected the necessary wires and cables, GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 will power on and the main screen will display on the monitor.




Setting up the Network

- By default, GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 will be automatically assigned an IP address by the DHCP server without requiring additional settings. To change the IP address to a fixed one, follow the steps below.

Note: By default, if GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 is connected to LAN without the DHCP server, it will be assigned a static IP address: 192.168.0.100.

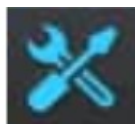

1. Click the System Settings icon or at the bottom of the main screen, and select Network. This window appears.

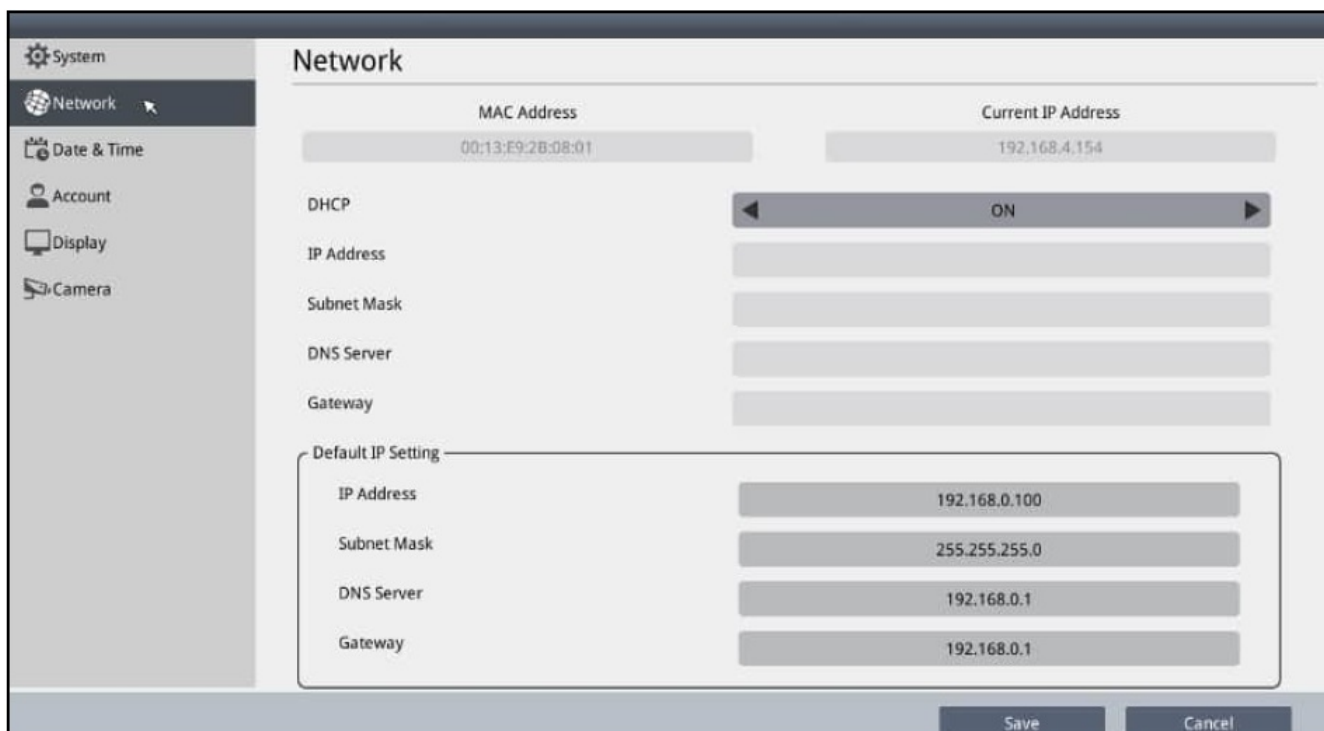



- To configure the static IP address,
 - For GV-IP Decoder Box Optimal / Ultra / GV-IP Display 101 / 116, switch the DHCP option to OFF.
 - For GV-IP Decoder Box Plus / Lite / GV-Pad Mini, select Static IP Address.
- Double-click the fields to fill out the IP Address, Subnet Mask, DNS Server, and Default Gateway.
- Click Save. When the device is connected to the network, the IP address will be shown in the Connected IP Address field.

Adding IP Devices to Live View Grid

Before you start, make sure all IP devices or GV-Mobile Server are under the same LAN with GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116.


Adding IP Devices through Automatic Search

- Click the Camera Search icon  /  on the main page.
- Search for GV-IP Devices, GV-Mobile Server, or the third-party devices that adhere to ONVIF under the same

LAN by clicking the Search Camera icon  / .

- Select a live view layout.


For GV-IP Decoder Box Optimal / Ultra / GV-IP Display 101 / 116:

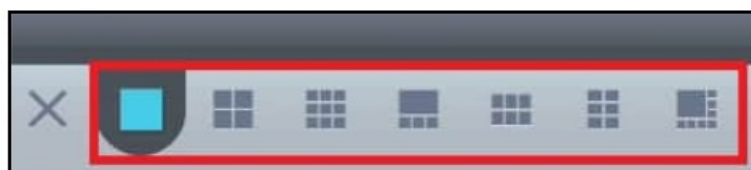

For GV-IP Decoder Box Plus / Lite / GV-Pad Mini:



4. Drag and drop an IP device from the camera list to the grid. To select multiple cameras at a time, click Select Multiple Cameras at the top and select more than one camera from the camera list.

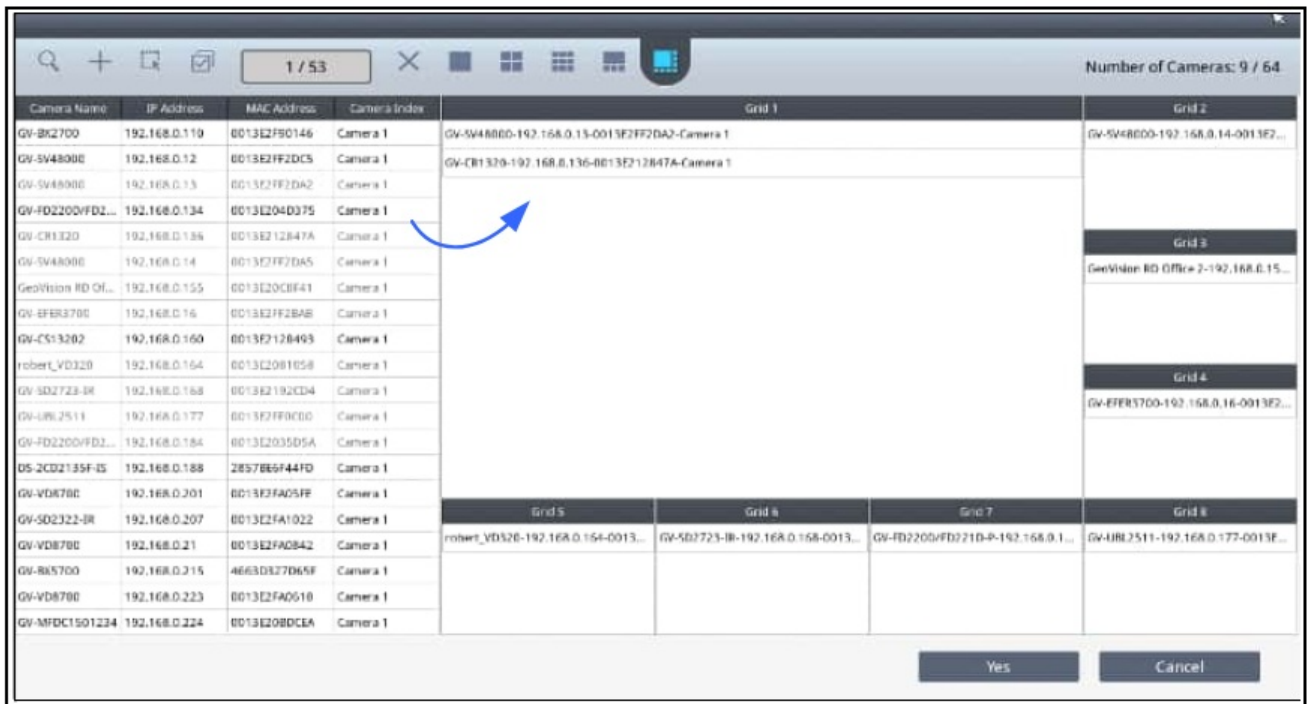

5. To change the device settings, hold for right-clicking on a desired device in the grid and select Edit to modify the following settings:

- Custom Name: Type a customized name for the IP device.
- Port: Change the port number if needed.
- Loop Time Interval: Specify a time interval, ranging from 10 ~ 600 seconds, for the device to display before switching to the next one. The default value is 30 seconds.
- Login Information: Change the login user name and password of the device if necessary.
- Stream Mode: Only for GV-IP Decoder Box Optimal / Ultra / GV-IP Display 116, select one of the following modes.
- Single Stream: Select this option for the highest image quality.
Single Stream (Save bandwidth): Select this option for the lowest bandwidth. Dual Stream: Select this option to automatically optimize the image quality when displaying multiple channels.

6. To adjust the display order of the cameras, hold for right-clicking on a camera and click Move Up or Move Down.

7. To remove a camera, hold for right-clicking on a camera and click the Delete button.

8. To delete all the added devices at once, click the Delete All button



9. Click Yes or Save to apply the settings.


The selected channels will be displayed on the monitor and be looped at an interval of 30 seconds by default. To change the looping interval, hold for right-clicking on a camera and click Edit.

Adding IP Devices Manually

If you are unable to detect the IP device using the search function, you can add the device manually.

1. Click the Camera Search icon  or  at the bottom of the main page.

2. Click the Add Camera icon  /  This dialog box appears.

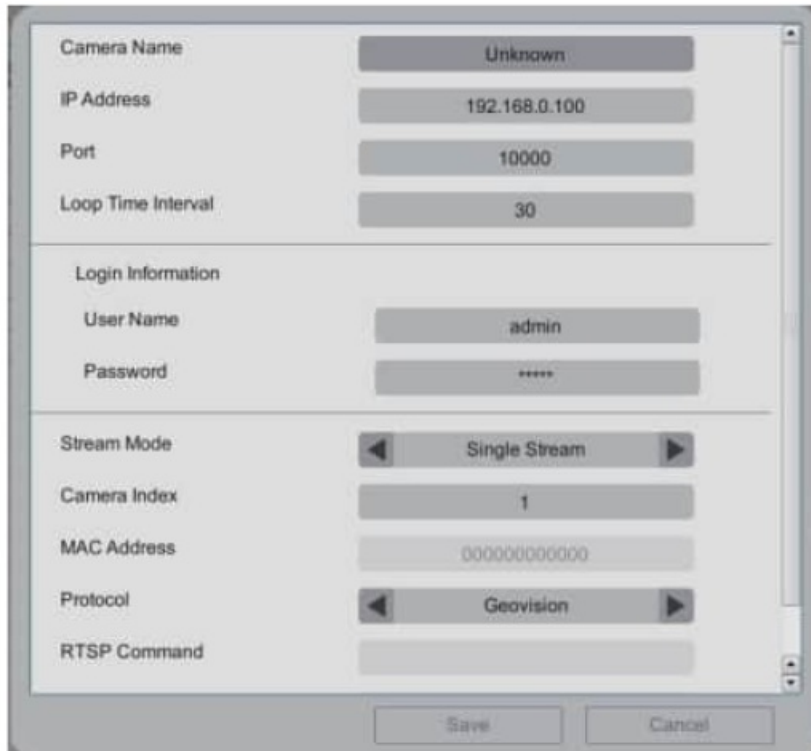


3. Fill out the following camera information. Double-click the fields to type.\
- Custom Name: Type a personalized name for the device.
 - IP Address: Type the IP address of the device.
 - Port: Change the port number if needed. The default port is 10000.
 - Loop Time Interval: Specify a time interval, ranging from 10 ~ 600 seconds, for the device to display before switching to the next one. The default time interval is 30 seconds.
 - Login Information: Type the ID and password of the IP device if needed. The default ID and Passwords are admin.
 - Stream Mode: Only for GV-IP Decoder Box Ultra / Optimal / GV-IP Display 116, select one of the following modes.
 - Single Stream: Select this option for the highest image quality.
 - Single Stream (Save bandwidth): Select this option for the lowest bandwidth. Dual Stream: Select this option to automatically optimize the image quality when displaying multiple channels.
 - Camera Index: Number the IP device for searching convenience.
 - Protocol: For GV-IP Devices, select GeoVision as the protocol. For third-party devices, select ONVIF or one of the RTSP protocols.
 - RTSP Command: Type the RTSP link if you are connecting to the device through RTSP protocols.
4. Click Save. The IP device is now added to the camera list.




Adding Devices Using GV-IP Device Utility


You can utilize the GV-IP Device Utility to add channels.

Before you start, make sure that IP devices / software must be under the same LAN as the GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116.

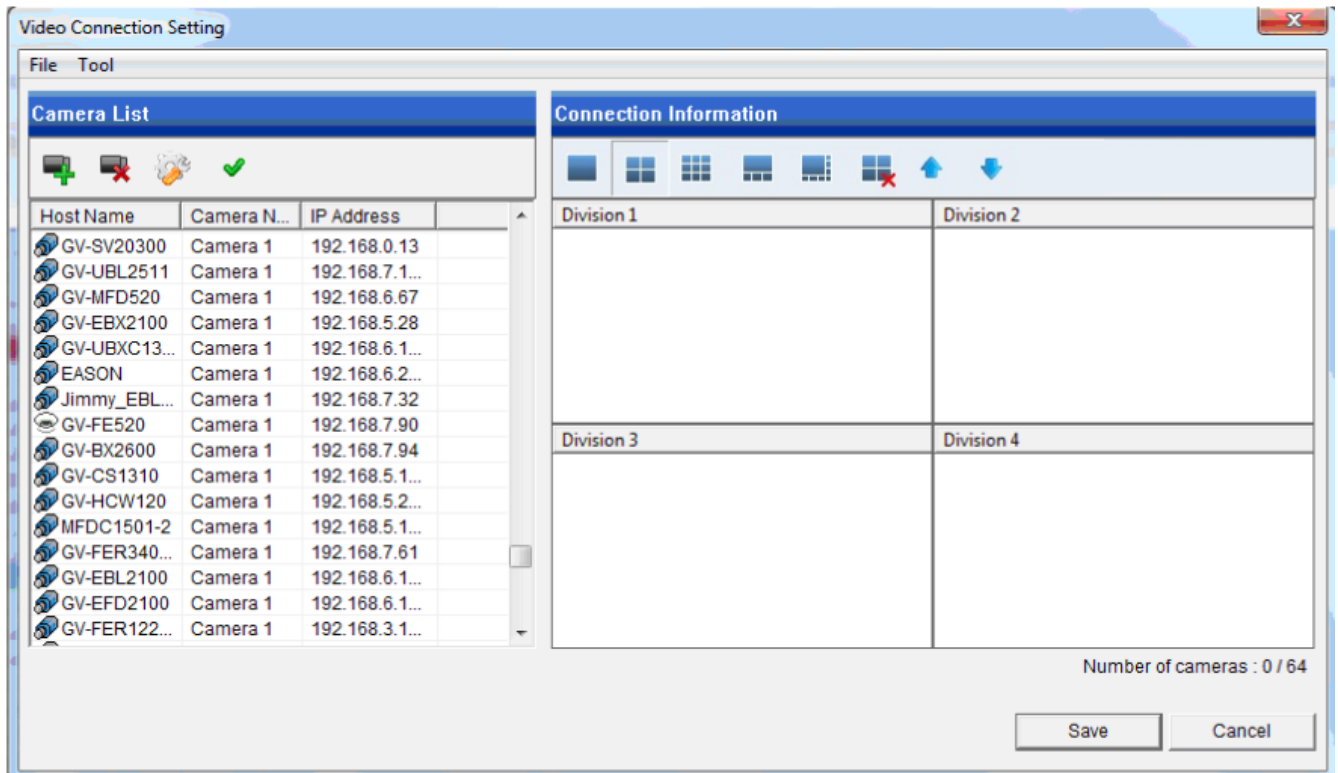1. Run GV-IP Device Utility downloaded GeoVision's website. Once started, the utility will automatically search for all GV devices under the same LAN.
2. Click on the IP address of GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116, and select Connect Setting. A login window appears.
3. Type the username and password of the device, and click OK. This window appears. By default, the username and password both are admin.



4. Use the Camera List toolbar to add, remove, or configure a camera in the Camera List.
5. Under Connection Information, select a live view layout.
6. Add channels to the Connection Information column.
 - Drag and drop the camera from the Camera List to the Connection Information column.
 - Use the Move Up  and Move Down  buttons to change the display order of these channels.
 - To remove a selected camera, click the Remove  button.
 - If you have changed the default ID and password of the added GV-IP Devices an GV-Mobile Server, right-click the channel, select Edit and type the username and password to log in for connection. By default, the login ID and password for all GV-IP Devices are admin.

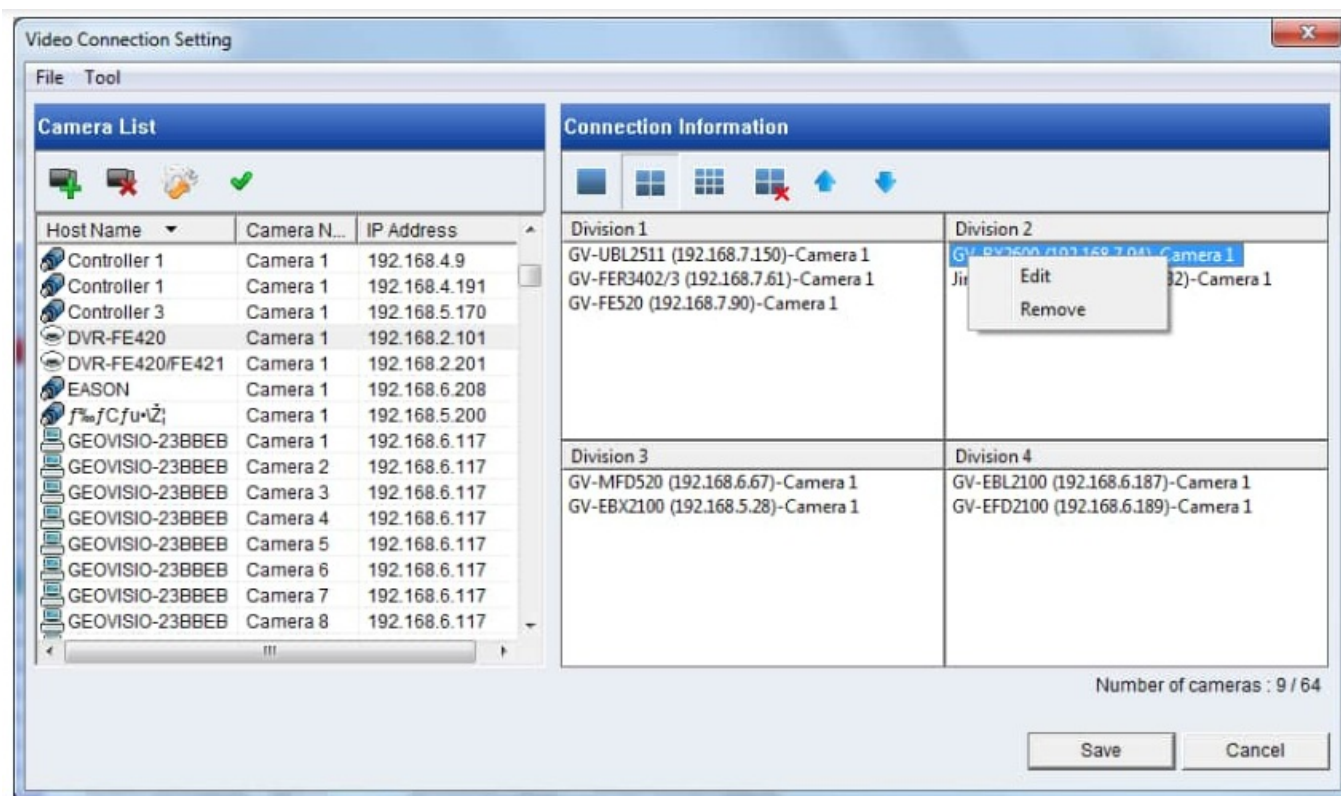

Note: Only for GV-IP Decoder Box Optimal / Ultra, you are also allowed to configure the stream mode and loop time interval for a specific or all IP devices connected on the Edit page.

Click Save.

- The cameras in the Connection Information column will be updated to the GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 and looped at a 30-second interval by default.
- Note: Fisheye dewarping is only supported by GV-IP Decoder Box Plus. To dewarp the fisheye view, you will need to choose 1-division layout or assign the camera to Grid 1 of the 4-division view.
- For details on adding a third-party device that adhere to ONVIF or RTSP, see 2.7.2 Adding a Third-party Device in GV-IP Decoder Box Series and Display User's Manual.

Accessing Live View

- After adding and assigning IP devices to live view grid, the camera live views are displayed in the main screen.



Note the following live view specifications

- The resolution of the added device must be lower than the maximum resolution listed below for each screen division. When the device resolution exceeds the maximum resolution supported, GV-IP
- Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 will connect to stream 2 of the device instead. If stream 2 is unavailable, the message “Resolution Error” appears on the screen.
- For a smooth operation for the GV-IP Decoder Box Series, the bitrate of each channel should be below 6 Mbps.
- Fisheye dewarping is only supported by GV-IP Decoder Box Plus in Single View and Grid 1 of Quad View.

For details on the live view controls, see 3.1 Live View in GV-IP Decoder Box Series and Display User’s Manual.

GV-IP Decoder Box Optimal / Ultra			
Screen Division		Maximum Resolution	Fisheye Dewarping
1-Division (Single View)		3840 x 2160	Not supported
4-Division (Quad View)	Grid 1	2560 x 1920	
	Other 3 Grids	1920 x 1080	
6-Division		1280 x 720	
8-Division		1280 x 720	
9-Division		1280 x 720	

GV-IP Decoder Box Plus			
Screen Division		Maximum Resolution	Fisheye Dewarping
1-Division (Single View)		2048 x 1944	Supported
4-Division (Quad View)	Grid 1	2048 x 1944	Supported
	Other 3 Grids	1920 x 1080	Not supported
9-Division		1280 x 720	Not supported

GV-IP Decoder Box Lite		
Screen Division	Maximum Resolution	Fisheye Dewarping
1-Division (Single View)	1920 x 1080	Not supported
4-Division (Quad View)		

GV-Pad Mini			
Screen Division		Maximum Resolution	Fisheye Dewarping
1-Division (Single View)		2048 x 1944	Not supported
4-Division (Quad View)	Grid 1	2048 x 1944	
	Other 3 Grids	1920 x 1080	
9-Division		1280 x 720	

GV-IP Display 101 / 116			
Screen Division		Maximum Resolution	Fisheye Dewarping
1-Division (Single View)		3840 x 2160	Not supported
4-Division (Quad View)	Grid 1	2560 x 1920	
	Other 3 Grids	1920 x 1080	
6-Division		1280 x 720	
8-Division		1280 x 720	
9-Division		1280 x 720	





Capturing Snapshots

You can take snapshots of the live view and the snapshots will be automatically saved to the selected storage device (USB drive or SD card) in JPEG format.

Before you start, be sure:

- You have inserted a USB drive or SD card for storage.
- You have at least 30 MB of space on your storage device.
- The storage type is configured as FAT32 format (or as NTFS format for GV-IP Decoder Box Ultra).
- You have assigned a storage device in the System Setting page (see below)

Otherwise, the error icon  will appear when attempting to capture an image.

1. On the main menu, click the System Setting icon  or  and select System on and select System on
2. Under Storage Device, select a storage device to store the captured screenshots, and click Save.
3. If the live view grid is still under looping mode, right-click the live view grid, select Camera Switch / Play Mode, and select the device number to stop the looping.
4. Right-click the live view grid again, and select Capture Snapshot.
5. When captured successfully, a snapshot icon corner of the screen  or  will appear at the top right



Note: Capturing snapshots is not supported by GV-IP Decoder Box Lite.


Upgrading the Firmware

GeoVision will periodically release firmware updates on the website. You can upgrade firmware locally using a USB drive or SD card.

Note: SD card is not supported by GV-IP Decoder Box Lite.

1. Copy the firmware file to the root folder of a USB drive or an SD card.
2. Insert the storage device to the GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116.


3. On the main screen, click the Firmware Update  /  icon.
4. Select the storage device and select the firmware file.

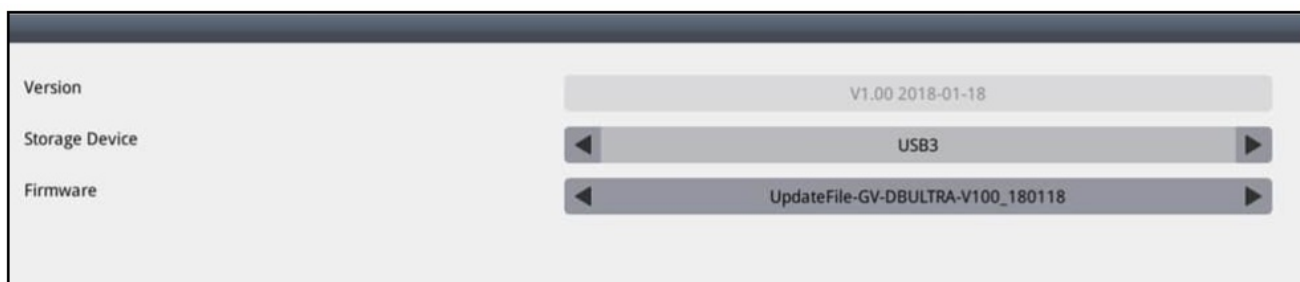

5. Click Update to begin upgrading the firmware. The GV-IP Decoder Box Series / GV-Pad Mini / GV-IP Display 101 / 116 will restart after the firmware upgrade is completed.

Note: To upgrade the firmware remotely through GV-IP Device Utility, see 5.1.2 Upgrading Firmware through GV-IP Device Utility in GV-IP Decoder Box Series and Display User's Manual.

Documents / Resources

	<p>GeoVision GV-Pad Mini Display 116 Decoder Box [pdf] User Guide</p> <p>GV-Pad Mini Display 116 Decoder Box, Mini Display 116 Decoder Box, Display 116 Decoder Bo x, 116 Decoder Box, Decoder Box, Box</p>
--	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.