

GER DETECT DIAMOND_HUNTER_SMART Long Range **Locator Instruction Manual**

Home » GER DETECT » GER DETECT DIAMOND_HUNTER_SMART Long Range Locator Instruction Manual







Contents

- 1 DIAMOND_HUNTER_SMART Long Range Locator
- 2 Overview
- 3 The device features and specifications
- 4 The technical specifications
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

DIAMOND_HUNTER_SMART Long Range Locator

Critical Warning

- Please be sure that all precautions are taken against risks.
- Do not use your device while it is raining.
- urn on the device after you make sure that all parts are in place and connected.
- Make sure that the device battery is fully charged before you start searching.
- If the indicator on the side of the device starts flashing, turn off the device and recharge the battery.
- When the battery will almost die the device will turn off automatically.
- Reading the user manual before starting on the device is recommended to understand everything and avoid mistakes through the search.
- Be aware of (energy sources phone networks metals mobile phones electronic devices), and do not use any charger other than the original one.
- The device's main unit is under a two-year warranty against all electronic breakdowns, any damages caused by user errors (falls, opening the main unit, hits, harms, etc.) are not covered within this warranty.
- Battery and charger are not under warranty.
- You should strictly follow the instructions in this user manual to minimize faults and to use your device correctly.
- If the device is not used correctly, or there is a high noise rate, in these cases the device will not be capable of confirming the target and determining the depth.

We wish you all the best of luck in your search.....


Overview

Dear customer,

- "Thank you for choosing DIAMOND HUNTER SMART"
- ✓ A long-range system device with the addition of more systems and the development of the device's characteristics to the imaging sensor system and two-dimensional imaging technology.
- ✓ The Diamond Hunter Smart device has multiple features to search for diamonds, and gemstones underground.
- ✓ The system of searching for diamonds and 18 different kinds of gemstones: such as Sapphire, Emerald, Quartz, Topaz, Garnet, Amethyst, Lapis Lazuli, Tourmaline, Columbite, Tanzanite, Turquoise, Peridot, Alexandrite, Cat Eye, Ruby, Jasper, Opal, Aquamarine.
- ✓ Super speed in capturing targets and locating them accurately.
- ✓ Super Antenna which enables the device to cover large areas of research.
- ✓ The search depth of the Diamond Hunter Smart device reaches 50 meters in the ground and the forward range is 3000 meters square.
- ✓ The device works in six languages: German English French Spanish Portuguese Arabic.

- ✓ The Diamond Hunter Smart device is one of the best German manufacturers.
- It has the European CE certificate according to international specifications and the international ISO 9001 certificate according to international specifications and standards.
- ✓ This device is designed to be compatible with its functioning in all countries and regions.

Definition of the main unit buttons & LEDs

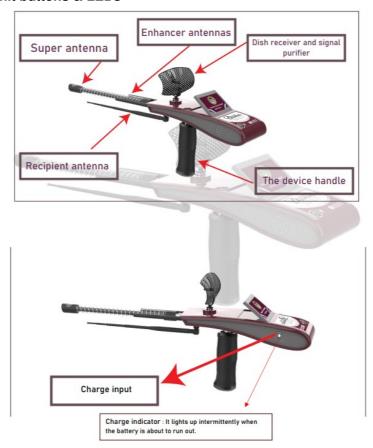

The device features and specifications

The Diamond Hunter Smart device has multiple features to search for diamonds, and gemstones underground:

- Super speed in capturing targets and locating them accurately.
- he system for determining the target depth easily and accurately.
- The system for specifying the continent in which you search.
- A screen that supports the touch system which contains many advantages and features.
- -An electronic thermometer within the device screen that measures the weather temperature.
- · A digital clock
- The possibility of muting and activating the device's sound.
- Super Antenna which enables the device to cover large areas of research.
- · A radar search dish to receive and improve the signal.


Diamond Hunter Smart device parts connection









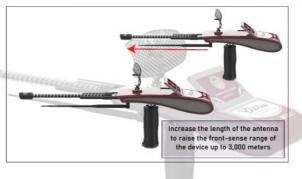



Open the foldable screen

Diamond Hunter Smart device operation steps



After turning on the device, the following data will appear on the main screen: Battery level indicator – clock – temperature – activate and mute button.



It contains the working languages of the device, which are:

German – English – French – Spanish – Portuguese – Arabic

Device settings icon through which you can set:

Sound level – brightness level – time settings – device information

Locate and choose the continent icon you want to search in.

This unique feature was added due to the different frequencies of underground minerals from one continent to another.




Search options:

Choose the type of target you want to search underground. Determine the front range of the device.



Search icon:

When you press the search icon, the device will directly start searching, depending on the preset settings saved by the prospector, which are (target type – front range – continent).

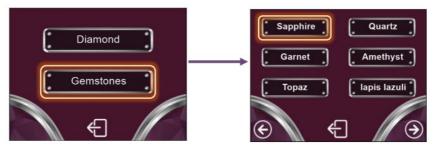


You can choose the target you want to search for. (Example: Sapphire), which also appears in the front range



Then choose the front range you want to reach (from 50 meters to 500 meters – 1000 meters – 1500 meters – 2000 meters – 2500 meters – 3000 meters) (for example, 500 meters)


Example: If the front range of the target to be searched is expected tobe within an area of 500 square meters, it is sufficient to specify the front range within 500 meters.

But if the front range of the target to be searched is unknown, you can specify the front range up to 3000 meters.

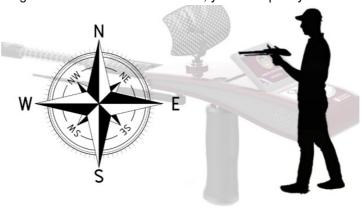

Note: The explorer must stand facing north to south.

Whereas, the ionic fields are radiation emitted by diamonds and gemstones after being underground for a long time, and their overlap and interaction with the soil and the nature of the earth's formation and its regularity with magnetic lines to the north and south.

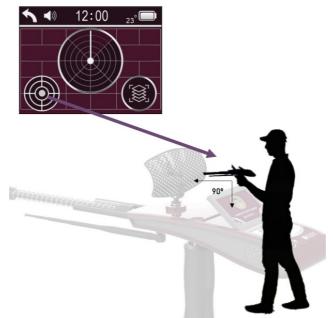


The balance of the device must be maintained during the search by fixing the grey dot in the middle of the circle icon.

The device will start sending and receiving signals directing you towards the target with a continuous sound.

When getting any signal, the device will directly turn towards the target with the target direction indicator appearing on the screen and the sound accelerating.

Confirm the direction of the target from all four directions to ensure that the target is reached more precisely.

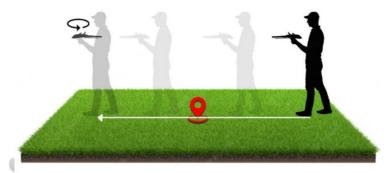

Follow the signal and when the device turns back you will have passed the target.

Limit the search site by placing a mark that will be the center for target confirmation.


Then confirm the location of the target from the four directions (from south to north – from north to south – from west to east – from east to west).

When standing above the center of the target, the device will rotate directly above the target.

- · North to south
- · South to north
- · East to west
- West to east



After you have confirmed the location of the target, click on the depth button to determine the depth and then move away from the center of the target a distance of at least 2 meters.

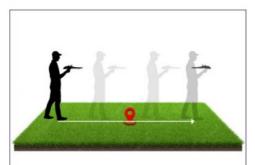



Point the device towards the target while maintaining the balance of the device, press the start button, wait until you hear a beep from the device, then walk towards the target until the device rotates backwards with the appearance of an icon indicating the rotation of the device towards the back.



Turn in the opposite direction, press the start button, wait until you hear a beep emanating from the device, and the icon shifts from the rotation position to the forward position, then walk until the device rotates backwards, the device will analyze and show the final results automatically.



The following results and conditions will appear on the device screen when confirming the presence of a target:

Noise: It is the percentage of noise in the search area, which results from the proximity of (energy sources – phone networks – metals – mobile phones – electronic devices)

Target confirmation: the percentage of confirmation of the presence of the target in the search area.

Depth: The depth within which the target is likely to be located.

Example: the depth is between 23 cm to 42 cm.

- Noise 5%
- Target confirmation 93 %

Important Note: The ratio to analyze the results in the Diamond Hunter Smart is as follows:

If the result of the noise is high and the target confirmation rate is low: The device does not give depth, it is rather to retry the search again.

If it gives us depth and the noise percentage is greater than 30% It is preferable to try the search again. if the target confirmation rate is less than 90% it is recommended to try the search again.


- In case the depth was re-determined on the same target, and a difference in depth appeared between the first and second depthdetermination process, this is because of the different coordination of walking steps towards the target to determine the depth.

Note: The target must be buried for many years so that by the time and the interaction with the soil's composition, an ionic field will be formed which will enable the device to detect the target. Therefore, testing the device on diamonds or gemstones laid on the ground or newly buried under the ground will not show the real capacity and

functionality of this device to detect the target or to reach larger depths.

The reason for that is that the ionic fields are radiations from diamonds and gemstones that have been in the ground for a long time and have intersected and interacted with the soil and the nature of the earth as well as having been regulated with magnetic fields north and south – These features do not apply for freshly buried or surface laid diamond or gemstones.

The device parts and accessories

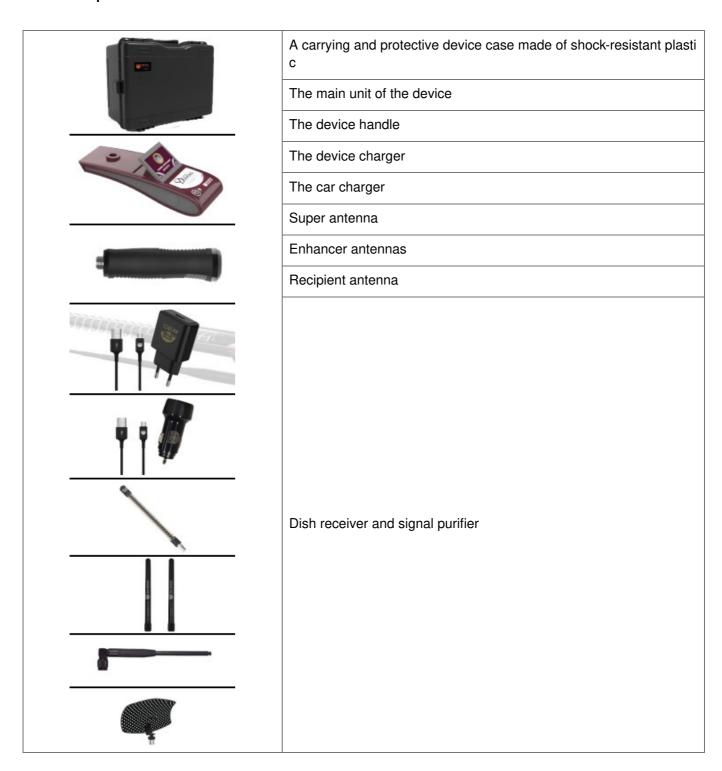

The technical specifications

Diamond Hunter Smart Technical Specifications	
Audio Output	Dynamic speaker frequency range: 350~5500 Hz sound output: 84 ± 3dB

Liquid Crystal Display (LCD)	touch screen full color 320 x 240 px	
Length	Device: 220 mm	
	A device with an antenna 425 mm (not extended)	
	A device with an antenna 695 mm (extended)	
Frequency	3.2 _ 16 KHz	
Data processing speed	180 MHz	
Operating Temperature Range	0 C° to 70 C°	
Operating Humidity Range	Up to 95 % non-condensing	
Storage Temperature Range	– 20C° to 70C°	
Storage Humidity Range	Up to 98 % Relative Humidity	
Operating Time (18 Wh Battery)	10 Hours	
Waterproof Rating – Detector	Not waterproof (weatherproof only)	
Li-ion Battery Technical Specifications		
Туре	Li-ion Rechargeable Battery – internal Battery	
Output Voltage	Li-ion 3.6 VDC	
Capacity	Li-ion 18 Wh	
Run Time	10 Hours	
Battery Operating Temperature	0 C° to 50 C°	
Battery Storage Temperature	– 5C° to 70C°	
Li-ion Battery Charger Technical Specifications		
Operating Temperature	0 C° to 50 C°	

Storage Temperature	– 30 C° to 80 C°	
Input Voltage	90 → 250 VAC 50→60 Hz	
USB Output Current	5 VDC / 2100 mA	
Other Technical Specifications		
Total weight	2720 g	
Device weight	325 g	
Battery weight	40 g	
Bag weight (empty)	2160 g	
Bag dimensions	42.5 cm x 17.5 cm x 28 cm	



Documents / Resources



<u>GER DETECT DIAMOND_HUNTER_SMART Long Range Locator</u> [pdf] Instruction Manual DIAMOND_HUNTER_SMART Long Range Locator, DIAMOND_HUNTER_SMART, Long Range e Locator, Range Locator, Locator

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.