



## Gerlach GL 3221 Toaster with LCD Display User Manual

[Home](#) » [Gerlach](#) » Gerlach GL 3221 Toaster with LCD Display User Manual 

Gerlach GL 3221 Toaster with LCD Display User Manual



## Contents

- [1 SAFETTY INSTRUCTIONS](#)
- [2 DESCRIPTION OF THE DEVICE](#)
- [3 BEFORE FIRST USE](#)
- [4 USING THE DEVICE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 TECHNICAL DATA:](#)
- [7 Gerlach Product](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

## SAFETTY INSTRUCTIONS

### SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 220-240V~50/60Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet. In order to provide additional protection, it is recommended to install residue current device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact professional electrician in this matter.
4. Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!!
7. Never put the power cable, the plug or the whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
8. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.
9. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous

situations for the user.

10. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
11. Never use the product close to combustibles.
12. Do not let cord hang over edge of counter or touch hot surfaces.
13. Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, unplug the power.
14. Do not place any objects into browning holes.
15. Do not use toaster with wet hands.
16. During the operation plastic elements of the device get hot.

**ATTENTION:** Do not touch metal parts of the housing and browning holes during operation or right after it because they are very hot.

17. In case of blocking toasts in slots and impossibility of automatic release after time's out, unplug the device from mains, wait until cool down and remove toasts with wooden utensils.
18. The bread may burn, therefore do not use the toaster near or below combustible material such as curtains.



19. Accessible surface temperatures can be high when the appliance is operating. Never touch the hot surfaces of the appliance.
20. The device is not designed to work with external schedulers or separate remote control system.
21. Children aged 3 to 8 years old can enable and disable the device only when it is in its normal position of use, they are supervised or instructed on the safe use and understand the resulting risks. Children aged 3 to 8 years old can not connect device, operate, clean or maintain.
22. Keep the appliance and its cord out of reach of children less than 8 years.

## DESCRIPTION OF THE DEVICE

TOASTER GL3221



1. Slots for bread
2. Crumb tray
3. Knob
4. STOP button
5. Lever
6. Reheat button
7. Defrost button
8. Bun warmer grid
9. Cord storage (at the bottom)
10. LCD display

## BEFORE FIRST USE

1. Make sure that the socket outlet has a suitable ground connection.

2. Before using the device for the first time, run it without any products for a few minutes. Turn the knob (3) to maximum position to let the new heating element to burn off residues from production process.
3. Push the lever (5) down until it will be blocked. It is normal for it to give off a little smoke at the start, after 2-3 minutes the device is ready to operate.
4. Do not insert oversized slices of bread, metal foil package, or metal utensils onto the toaster. This may result in electric shock.
5. If the bread sticks in the toaster, unplug it. Wait to cool down, then remove the bread. **NEVER USE METAL UTENSILS TO REMOVE THE BREAD.**
6. Do not start using the device without the bread located inside slots.

## USING THE DEVICE

1. Set the desired browning level from 1 (little) to 6 (max browned at max temperature) by the knob (3).
2. Make sure that thickness of bread slices allow to place them into slots (1).
3. Place the bread in the slots (1) and push the lever (5) down until it locks, on the display will show information about the toasting time, selected function and desired browning, the indicator light next to the button will also light up Locking is possible only if the power cord is connected with socket outlet.
4. When the toasting cycle has finished, the lever (5) returns to its up position automatically and bread slices will pop up at the top of the slots. **WARNING:** Bread remains hot for a while after toasting cycle is completed.
5. If bread slices are not browned well, adjust the browning level by turning the knob (3) and repeat the cycle looking at the browning level if no need to stop the heating of bread.  
**WARNING:** Pressing STOP button (4) interrupts the toasting cycle and releases the bread.
6. The grid (8) is for heating buns and croissants that do not fit in slots (1).
7. The defrost button (7) is to defrost the frozen bread and toast it. After pressing the defrost button (7) , the indicator light next to the button will illuminate. On the display will show information about the toasting time, selected function and desired browning .The toasting time will be enlarge for defrosting.
8. The reheat button (6) is to reheat the bread already toasted and got cold already. After pressing the reheat button (6) , the indicator light next to the button will illuminate. On the display will show information about the toasting time, selected function and desired browning. The toasting time will be reduce for reheating.

## CLEANING AND MAINTENANCE

1. Before cleaning the device, make sure that it is unplugged. Do not use steam cleaning machines for cleaning.
2. Never immerse the device in water or any other liquids.
3. Smudged toaster's housing clean only with soft, wet cloth. Do not use abrasive sponges/cleaners.
4. Crumb tray (2) should be cleaned regularly by dry cloth.
5. After cleaning, wait few minutes to let the device dry completely before next use.

## TECHNICAL DATA:

**Power supply:** 220-240V ~50-60Hz

**Nominal Power:** 685-815W

**Max power:** 1100W



■ To protect your environment: please separate carton boxes and plastic bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Electrical appliance must be returned in order to reduce its reuse and utilization. If the device contains batteries they should be delivered to dedicated points

## Gerlach Product

- Planetary Mixing System GL 4219



- Kettle GL 1296



- Waffle Maker GL 3048



- Pressure Cooker GL 6412



- Wine Cooler GL 8079



- Hair Clipper GL 2829



- Stand Fan With Remote GL 7325



- Trimmer Set GL 2932



- Meat Mincer GL 4812



[www.gerlach-german.eu](http://www.gerlach-german.eu)

# Gerlach





## Documents / Resources



[Gerlach GL 3221 Toaster with LCD Display](#) [pdf] User Manual

## GL 3221, Toaster with LCD Display

## References

-  AdlerEurope
-  AdlerEurope