

GERMAN BD30B Built In Induction Cooker



GERMAN BD30B Built In Induction Cooker User Manual

[Home](#) » [German](#) » GERMAN BD30B Built In Induction Cooker User Manual 

Contents

- 1 GERMAN BD30B Built In Induction Cooker
- 2 Installation Instructions
- 3 Procedures
- 4 Product Structure
- 5 Operating Instructions
- 6 Cookware
- 7 Care & Maintenance
- 8 Troubleshooting
- 9 Documents / Resources
 - 9.1 References



GERMAN BD30B Built In Induction Cooker




Please read these instructions and warranty information carefully before use and keep them handy for future reference.


Online Warranty Registration



Installation Instructions

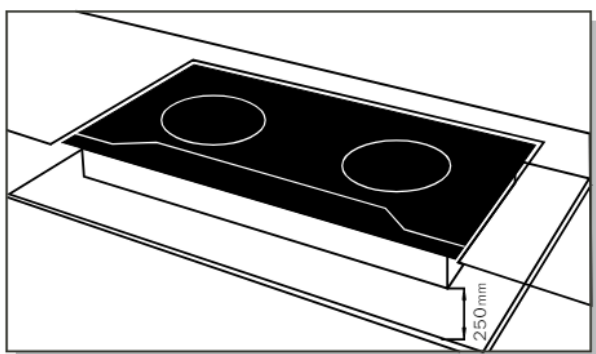

1.

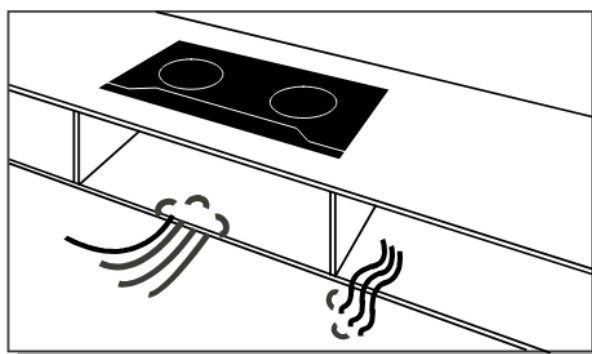

2.


Notice

There should not be any obstacles surrounding the unit

Make sure the power plug is accessible after installation. Power outlet must be earthed

1. For ventilation purposes, there should be no less than 250 mm high empty space under the unit body.
2. Air vent under the unit must be well circulated. Circulation between space under the unit and room atmosphere should be present

Procedures

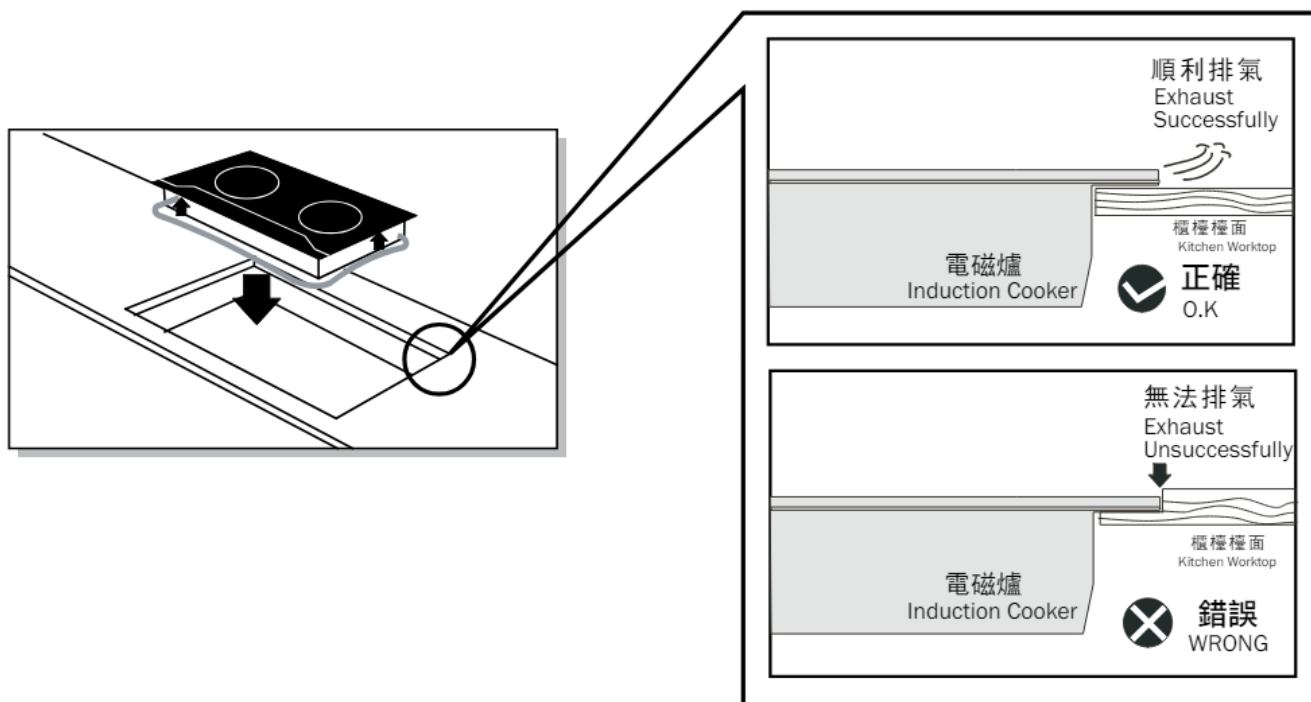


1. 649mm(W) x 379mm(D) According to cutout dimensions 649mm(W) x 379mm(D), make a cutout hole on the cabinet/countertop.
2. Attach the supplied rubber tape to the bottom part of the unit body, and then place unit through the cutout hole.
3. Connect power and cooker is ready to use


Notes: When the induction cooker is installed, the exhaust outlet must be put ONTO the kitchen worktop, so that it can exhaust successfully. Please refer to the above pictures

Product Structure

Main Body

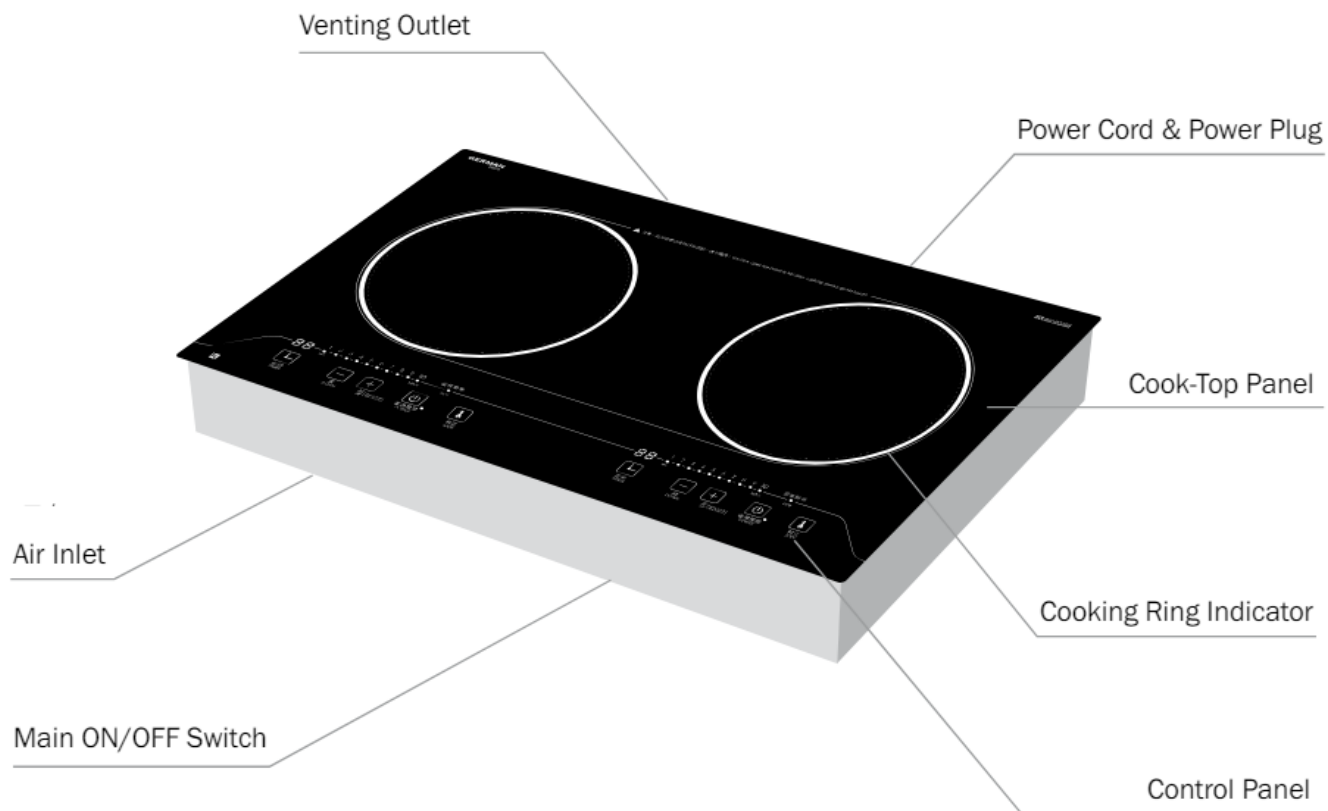

Control Panel

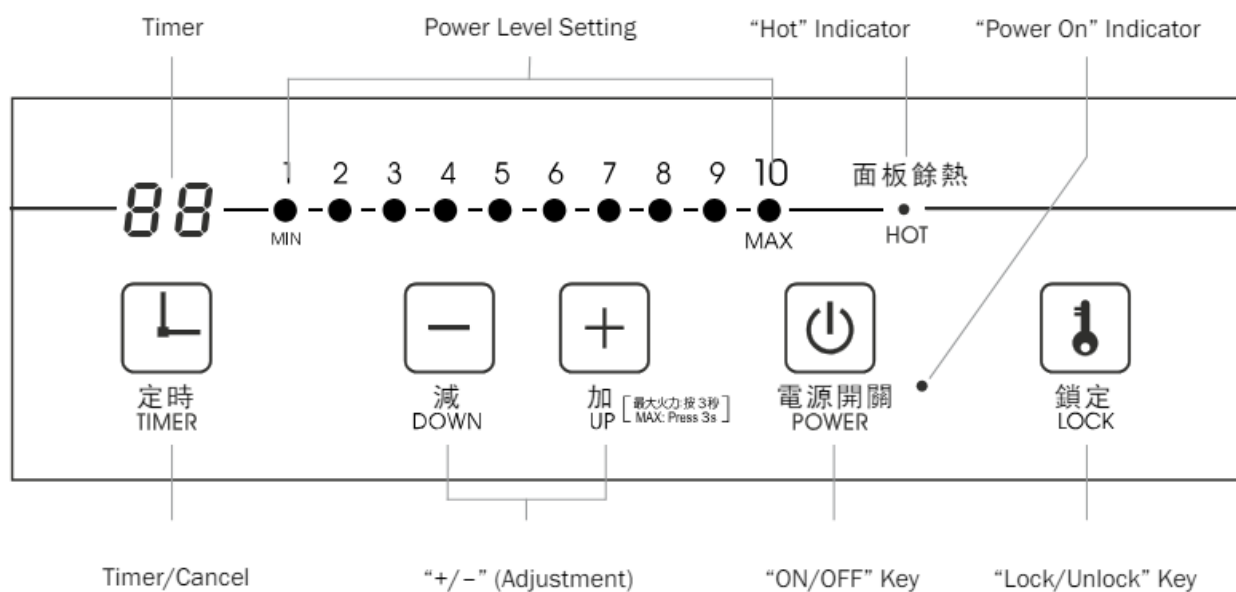

Operating Instructions

Control Buttons Functions



"POWER ON / OFF" Key

Turn on the Main ON/OFF Switch or under "Sleeping" mode), press to enter "Heating" mode (power indicator will be on). Press again to switch off the operation and return to "Sleeping".

Note: if no cookware is present or if cookware is not compatible, the digital display will show "E1" as a warning.



TIMER / CANCEL" Key

Press this key to set timer. When the digits "30" are flashing, press "+" or "-" key to adjust timer settings between 1 minute to 6 hours (the timer indicator will display "01-99" when the timer setup is from 1 to 99 minutes and the timer indicator will display "2h-6h" when the timer setup is from 2 to 6 hours). The timer will start counting down when the time display stops flashing. To cancel the timer, press this key for 3 seconds.



"+" / "-" Adjustment Keys

Under "Sleeping" mode, press to enter "Heating mode" Under "Timer Mode" (i.e. when "Timer" Indicator lights up), press to adjust the timer. Under "Heating" mode, press to set the power level.



"LOCK/UNLOCK" Key

Press this key to lock all settings at "Heating" mode or "Timer" mode. Under "Lock" status, the induction cooker would not respond to any key press. Press this key for 3 seconds to unlock the "Lock" status.

1. Connect the power plug, and then turn on the Main ON/OFF switch. A "beep" sound is heard, indicating that the cooker is in "Sleeping" mode.

2. Place cookware in the centre of the cooking hob. Press the "POWER" key and power indicator will light up, then press or or indicate that the cooker is in "Heating" mode. (Default value: Level 3)

- **Note:** if no cookware is present or if cookware is not Vcompatible, the digital display will show "E1" as a warning

3. Press or to adjust the power level.

- **Note:** if there is no cookware or cookware not appropriate, the cooker will not start operation and a buzzing sound is heard. Power table of single hob (One is as same as the other)

Power Level	1 (低 MIN)	2	3	4	5	6	7	8	9	10 (高 MAX)
功率 Power	300W	800W	1100W	1200W	1300W	1400W	1500W	1600W	1700W	2000W

4. In "Heating" mode, press the "TIMER/CANCEL" key to enter "Timer" mode. Press or to set shutdown time ranging from 1 minute to 6 hours (the timer indicator will display "01-99" when the timer setup is from 1 to 99 minutes and the timer indicator will display "2h-6h" when the timer setup is from 2 to 6 hours)

5. When 2 hobs are under "heating mode" simultaneously, the cooker will limit power level to prevent malfunction caused by over-power: if the current hobs has been turned up to a certain level, the rest one will level down automatically. For example, the current hob is in the 6th level (1400W), the another hob will be limited within the 6th (1400W); the current hob is in the 7th level (1500W), the other hob will be limited within the 5th (1300W); the current hob is in the 8th level (1600W), the another hob will be limited within the 4th (1200W).

6. Please use only German Pool-authorized cookware or cookware recommended by us. Any unauthorized cookware may affect induction cooker's heating capacity and quality.

Cookware

Please use only German Pool-authorized cookware or cookware recommended by us. Any unauthorized cookware may affect induction cooker's heating capacity and quality.

Appropriate Cookware

Material:

Metal, ferromagnetic stainless steel or cast iron

Shape: Flat bottom with a diameter of 12 cm or more. Cookware bottom diameter should not exceed 25 cm and must not weight over 6 kg (with food)



Ferromagnetic
Stainless Steel
Water Pot



Metal Frying Pan



Ferromagnetic
Stainless Steel
Cooking Pot



Metal Saucepan



Ferromagnetic
Metal Water Pot



Cast Iron Grilling
Pan

Inappropriate Cookware

Material:

Non-metallic, non-ferromagnetic, ceramic, glass, aluminium or brass

Shape:

The bottom not flat or too bumpy, or the bottom diameter smaller than 8 cm



Aluminum
Water Pot



Glass Pot



Ceramic Pot



Pot With Non-Flat/
Curved Bottom



Pot With
Bumpers



Pot Bottom
Too Small

WARNING: If the surface (panel) is cracked, switch off the appliance to avoid the possibility of electric shock.

WARNING: Metallic objects such as knives, forks, spoons and lids should not be placed on the induction hotplate since they can get hot.

WARNING: This appliance is intended to be used in indoor household ONLY.

WARNING: This appliance is not intended to be operated by means of an external timer or a separate remote control system.

WARNING: The temperature of accessible surfaces may be high when the appliance is operating. **WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

- When the appliance powers on but without pressing any control button, the appliance will stop heating

automatically in 1 hour 45 minutes to 2 hours 15 minutes and go into standby mode; this ensures the safety of the appliance.

- Single 13 A power jack must be used. Do not share the power jack with other appliances.
- Do not apply water directly onto the induction cooker.
- Do not insert any wire or metal objects through air inlet or venting outlet of the induction cooker.
- Please avoid collision between cooktop panel and cookware.
- A distance of at least 10 cm between the wall and the sides of the induction cooker must be reserved for venting purposes.
- Do not place or use an induction cooker near any heat source.
- Do not heat up any metal plate or other magnetic objects on the cooktop.
- Do not heat empty cookware for an extended time. Overheating of cookware will cause damage and injuries.
- Do not heat up unopened cans on the cooktop. It may cause an explosion.
- Unplug the power cord when the induction cooker is not used for a long period of time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cannot use a steam cleaner.
- After use, please pass the “power” key to turn off.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments.

Care & Maintenance

- The power plug must be disconnected before cleaning.
- Any stain or deposit on the cooktop surface must be cleaned off immediately before reusing.
- Cleaning must be done when the cooktop surface has completely cooled down.
- To clean the cooktop, wipe with a dry cloth. If a stain remains, clean with a moist sponge soaked with mild soap, and then wipe again with a moist cloth.
- To clean the body of the induction cooker, wipe with a soft moist cloth. If stain remains, clean with a moist sponge soaked with mild soap, and then wipe with a moist cloth.
- Do not immerse the induction cooker into water.
- Do not clean the cooktop with any rough cloth or abrasive tool.
- Do not use organic solvents or any cleaning products that contain chemicals such as Benzene

Note: Over time, the cooktop panel may be discoloured due to one of the following situations. Operation of the induction cooker would not be affected as this is normal.

- Overheating or burning empty cookware
- Spillage not cleaned immediately
- Cookware not clean
- Long periods of usage

Troubleshooting

When you run into any problem operating this product, use the table below to troubleshoot the problem. If the problem persists, contact our Repairs & Customer Service Centre.

故障現象 Phenomenon	檢查要點 Check-up Items	處理方法 Solution
<p>接通電源，按機底電源開關，再按“開/關”鍵，電磁爐無反應。</p> <p>Power is connected and Main on/off switch is turned on, but the induction cooker does not respond when the on/off button is pressed.</p>	<ul style="list-style-type: none"> • 是否停電? • 府上的自動開關或保險絲是否發生短路? • 插頭是否脫落或接觸不良? <ul style="list-style-type: none"> • Is there a power shortage in your area? • Is there a short circuit in the power source of your home? • Is the power plug too loose or not connected well? 	<ul style="list-style-type: none"> • 電源恢復後再使用。 • 檢查短路原因，排險後才使用。 • 插牢或更換插孔後使用。 <ul style="list-style-type: none"> • Try again after power supply resumes. • Find out the cause of short circuit and eliminate it before switching on the cooker again. • Re-connect the plug or replace the power jack.
<p>蜂鳴器斷續鳴響且鍋具不加熱。</p> <p>Buzzer beeps continuously and pan is not heated.</p>	<ul style="list-style-type: none"> • 鍋具不適應? • 鍋具位置不合適? <ul style="list-style-type: none"> • Is the pan not suitable for induction cooking? • Is the pan positioned properly? 	<ul style="list-style-type: none"> • 使用電磁爐適用之鍋具。 • 將鍋具放置在電磁爐面板中心。 <ul style="list-style-type: none"> • Use an appropriate pan. • Position the pan in the centre of cook-top.
<p>在正常運作時停止加熱。</p> <p>Induction cooker stops heating during normal operations.</p>	<ul style="list-style-type: none"> • 是否空鍋或溫度過高? • 吸氣口或排氣口是否堵塞? • 室溫太高? <ul style="list-style-type: none"> • Is the pan empty or cooking temperature too high? • Are the air inlet and outlet being blocked? • Is the surrounding temperature too high? 	<ul style="list-style-type: none"> • 防止乾燒，降溫後自動繼續。 • 待機件冷卻後才使用，並注意保持內部通風。 • 室溫降低後才使用。 <ul style="list-style-type: none"> • Avoid operating cooker with an empty pan. Let cooker cool down before switching it on again. • Remove obstruction from the vent. Let induction cooker cool down and try again. • Try again after the room cools down.
<p>保溫失控。</p> <p>Temperature fluctuates.</p>	<ul style="list-style-type: none"> • 鍋底是否凹凸不平? <ul style="list-style-type: none"> • Is pan bottom not flat? 	<ul style="list-style-type: none"> • 更換平底鍋具後使用。 <ul style="list-style-type: none"> • Replace pan with a flat-bottomed one.

- Above table enlists the most common problems regarding the operations of the product and their possible causes as well as suggested solutions. It is strictly for users' reference only.
- Should there be any product malfunction or breakdown, DO NOT repair it yourself. Contact our Repairs & Customer Service Centre or consult a licensed technician immediately

故障代碼	故障說明	故障代碼	故障說明
E0	電路故障 Internal circuit error	E5	主傳感器開短路保護 Top plate sensor open/short circuit
E1	無鍋或鍋具不合適 Without cookware or incompatible cookware used	E6	IGBT傳感器開短路保護 IGBT sensor open /short circuit
E2	IGBT過熱保障 IGBT overheat	E7	乾燒保護 Top plate overheat
E3	高壓 Over-voltage	E8	通訊失敗 Power Sharing Failure
E4	低壓 Under-voltage		

Solution

When showing signal E1, E2 and E7, please check if the cookware is not suitable, or switch on the appliance again after it is cooled down naturally.

When showing signal E0, E3-E6 and E8, please contact customer service and repair centre.

E3 & E4 are not product errors. Operation can be resumed when power voltage returns to normal rating (130V – 250V).

Technical Specifications

型號 Model	GIC-BD30B
電壓 Voltage	220 - 240 V
頻率 Frequency	50/60 Hz
額定總功率 Rated Power Output	2800 W
爐頭數目 Number of Cooking Hob	2
爐頭最大功率 Maximum Output of Cooking Hob	(左 Left) 2000 W / (右 Right) 2000 W
機身尺寸 Dimensions	(H) 95mm (W) 675mm (D) 405mm
開孔尺寸 Cutout Dimensions	(W) 649mm (D) 379mm
淨重 Net Weight	約 Approx. 10.5 kg
總重 Gross Weight	約 Approx. 12.3 kg
功率調校範圍 Power Adjustment Range	300 W - 2800 W
執行標準 Execution Standards	EN 60335-1:2012+A11:2014 EN 60335-2-9:2003+A1:2004+A2:2006+A12:2007+A13:2010 EN 62233:2008

Specifications are subject to change without prior notice.

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.

www.germanpool.com

Refer to www.germanpool.com for the most up-to-date version of the Operating Instructions.

Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1. Visit our website and register online:

www.germanpool.com/warranty

2. Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

Model No. : GIC-BD30B

Serial No. :

Purchased From:

Invoice No. :

Purchase Date :

1. Customer who fails to present the original purchase invoice will not be eligible for free warranty service.
2. Customers should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

Customer Service & Repair Centre

Hong Kong, China

10/F, Kowloon Godown 1-3 Kai Hing Road, Kowloon Bay, Kowloon, Hong Kong

Tel: +852 2333 6249
Fax: +852 2356 9798
Email: repairs@germanpool.com

Macau, China

3/F, Edificio Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira, Macau

Tel : +853 2875 2699
Fax : +853 2875 2661

This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113. Newport Centre Phase II. 116 Ma Tau

Kok Road. Tokwawan. Kowloon. Hong Kong.

Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park, Daliang, Shunde, Foshan, Guangdong, China

Tel: +86 757 2388 1896
Fax: +86 757 2980 8318

Macau, China

3/F, Edificio Industrial Pou Fung, 145 Rua de Francisco Xavier Pereira, Macau


Tel: +853 2875 2699
Fax: +853 2875 2661



© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.

www.germanpool.com

Documents / Resources

	<p>GERMAN BD30B Built In Induction Cooker [pdf] User Manual</p> <p>BD30B Built In Induction Cooker, BD30B, Built In Induction Cooker, In Induction Cooker, Inducti on Cooker, Cooker</p>
--	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.