



# Getic Access Point WiFi 6 Enterprise In-Wall Instruction Manual

[Home](#) » [Getic](#) » Getic Access Point WiFi 6 Enterprise In-Wall Instruction Manual 

## Contents


- [1 Getic Access Point WiFi 6 Enterprise In-Wall](#)
- [2 Parts](#)
- [3 Installation](#)
- [4 Connection](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)






**Getic Access Point WiFi 6 Enterprise In-Wall**










## Parts


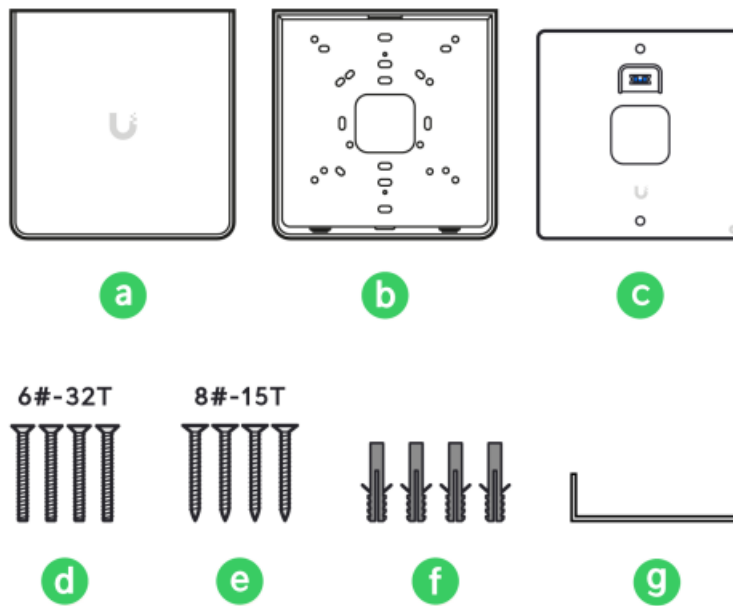






## Installation

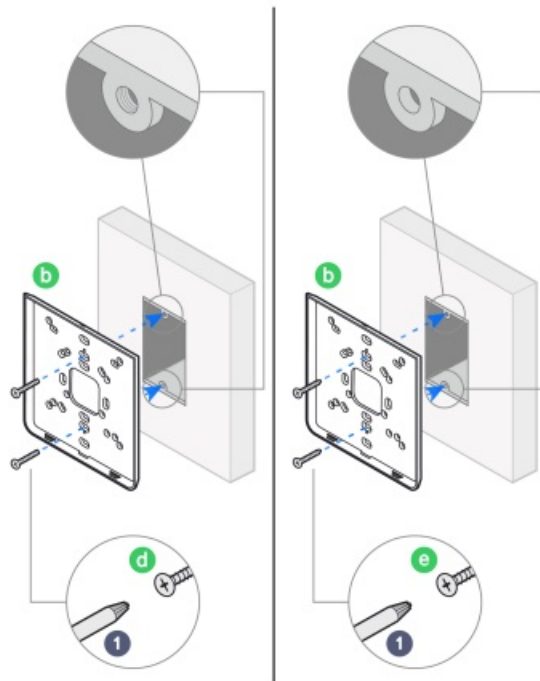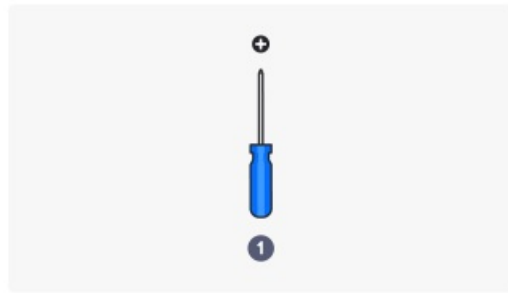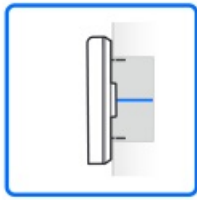

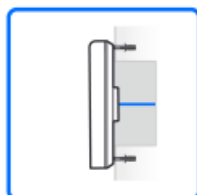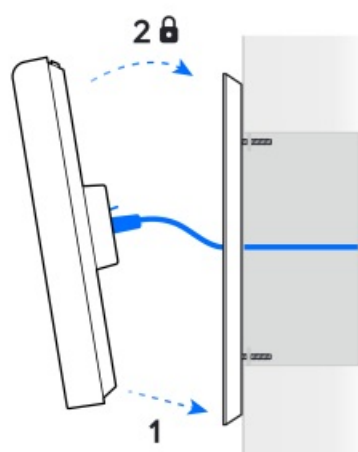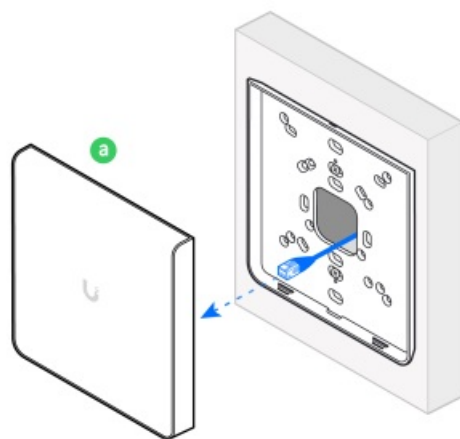


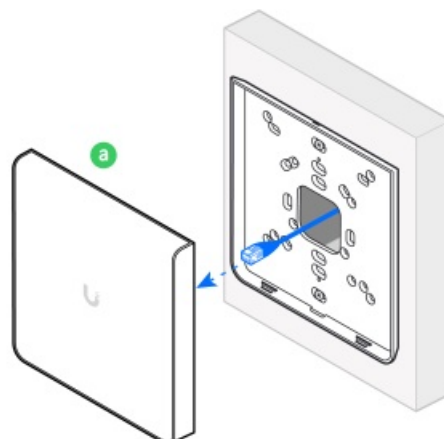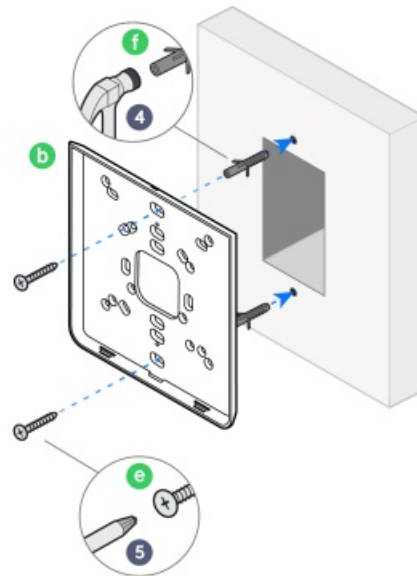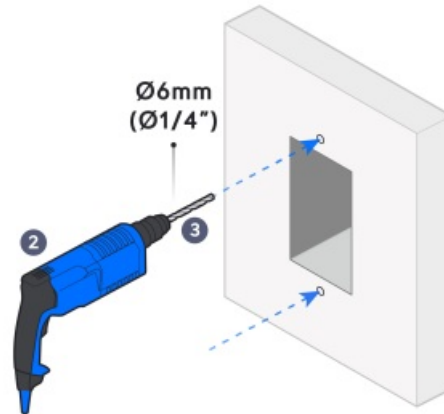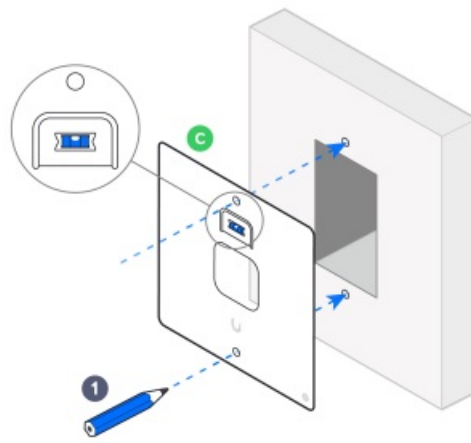

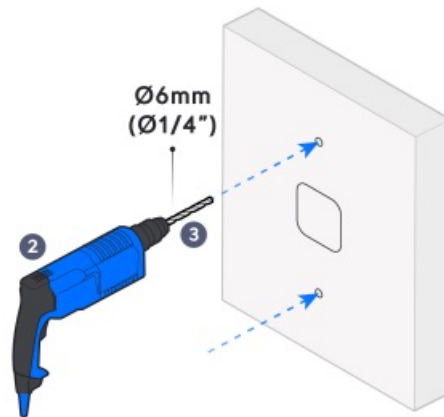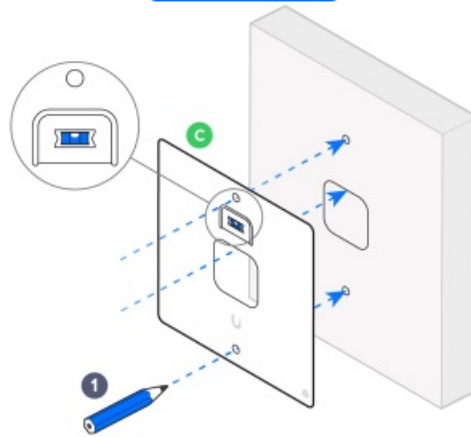


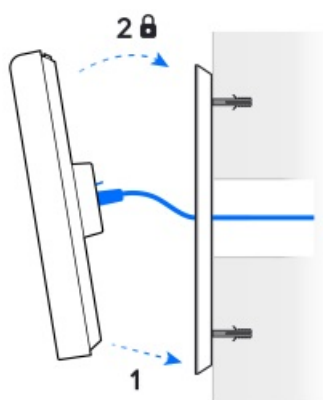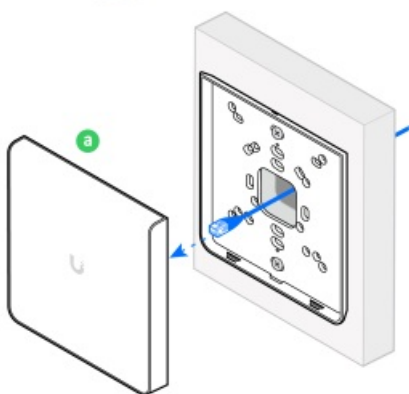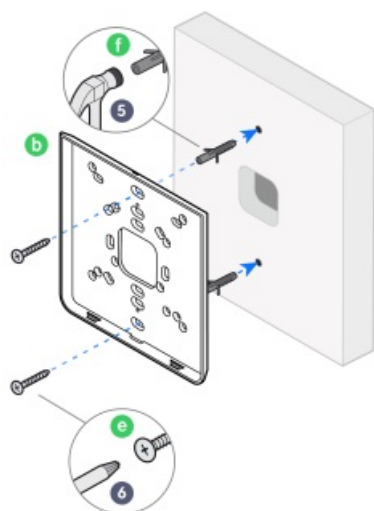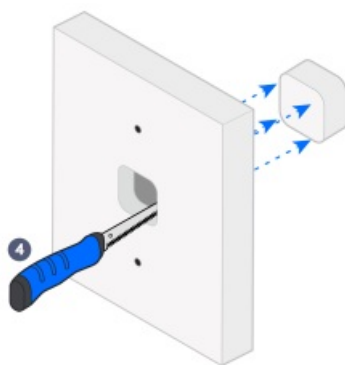


## Connection

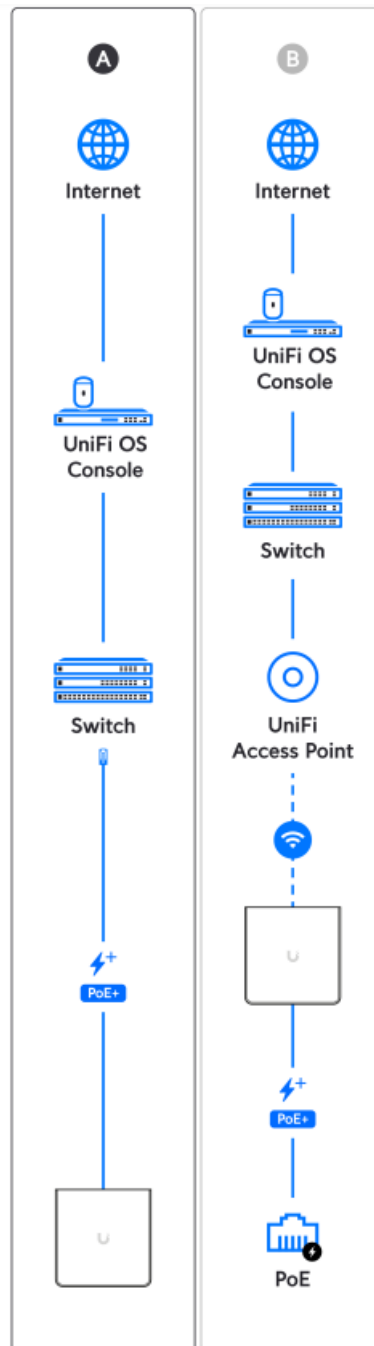

## APP

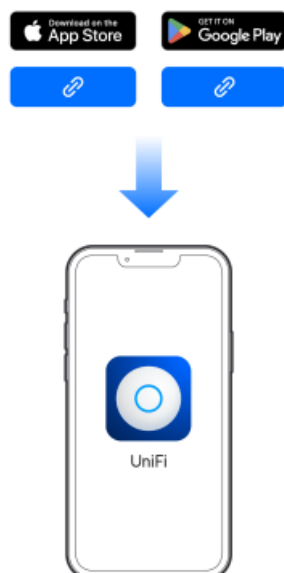




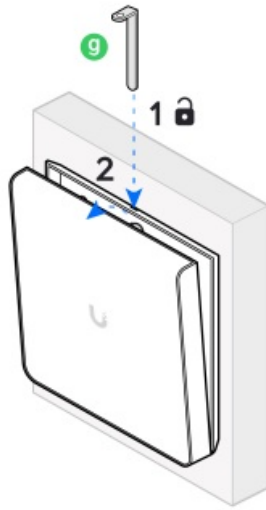


If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).


©2023 Ubiquiti Inc. All rights reserved. Ubiquiti, Ubiquiti Networks, the Ubiquiti U logo, and Unifi are trademarks or registered trademarks of Ubiquiti Inc in the United States and in other countries. Apple and the Apple logo are trademarks of Apple Inc. registered in the US and other countries. App Store is a service mark of Apple Inc. registered in the US and other countries. Android, Google, Google Play, the Google Play logo are trademarks of Google

LLC. All other trademarks are the property of their respective owners

## Documents / Resources

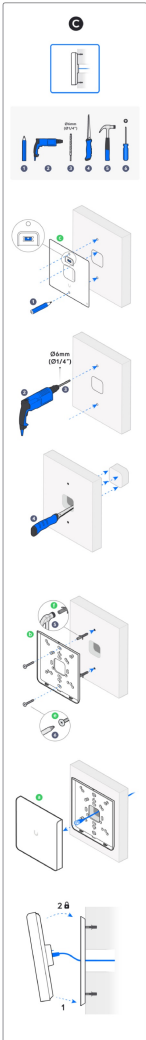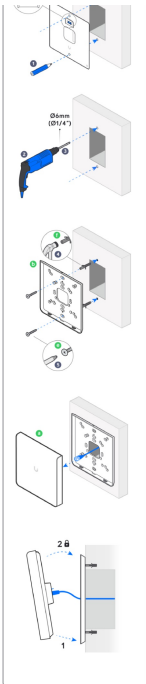


2

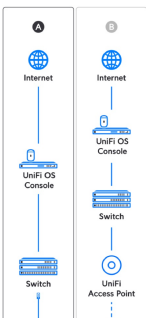

## [Getic Access Point WiFi 6 Enterprise In-Wall](#) [pdf] Instruction Manual

Access Point WiFi 6 Enterprise In-Wall, Point WiFi 6 Enterprise In-Wall, WiFi 6 Enterprise In-Wa  
II, Enterprise In-Wall, In-Wall, Wall

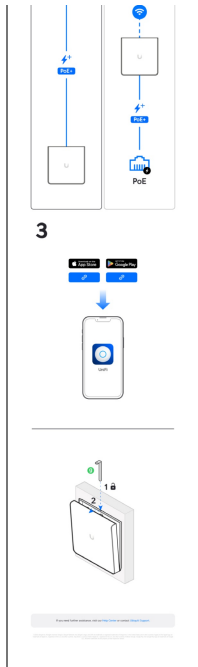

References

- [Ubiquiti Account](#)